



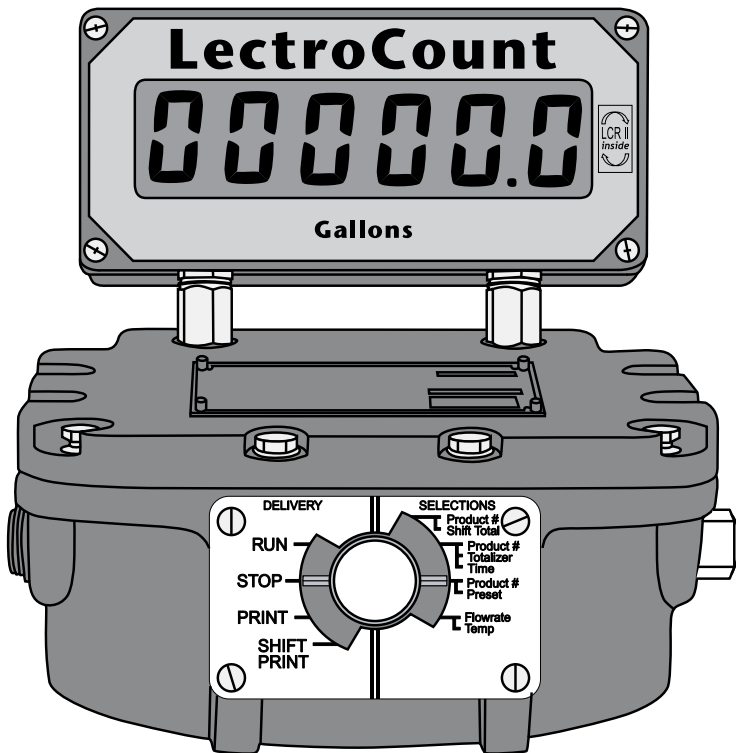

# LectroCount LCR-II <sup>®</sup> | Setup & Fonctionnen

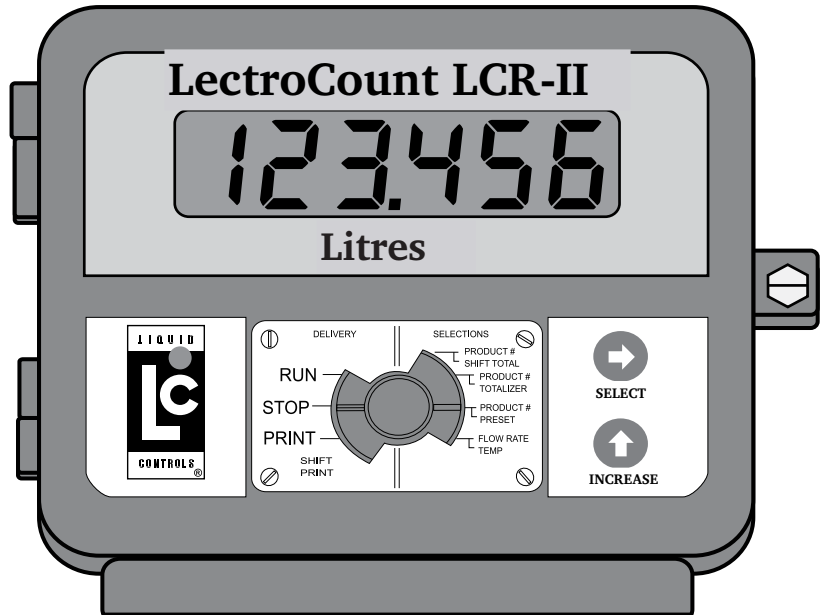

Introduction	Operation
Contrat de licence logicielle ..... 3	Lap Pad..... 26
Composants du système LCR-II..... 4	Distribution prédéfinie.....26
Aperçu du LCR-II..... 5	Diagnostics.....29
Aperçu du Lap Pad..... 6	Factory Calibration.....30
Pad - Menus principaux..... 7	LCR-II..... 31
Pad - Écrans de données secondaires..... 8	Single Point Recalibration/Proving w/o Lap Pad.....31
	Delivery & Selections Menu.....34
	RUN Position.....34
	STOP Position.....35
	PRINT Position.....36
	SHIFT PRINT Position.....37
	Diagnostic/Calibration Tickets.....37
	LCR-II Menu Flow Charts..... 38
	<b>Diagnostics and Troubleshooting</b>
	Packing the Hose..... 40
	LCR-II Troubleshooting Guide..... 41
	<b>Appendix</b>
	Appendix A - Compensation Types & Parameters..... 45
	Appendix B - VT100 Emulation Codes..... 46
	Appendix C - Error Messages..... 47
	Appendix D - Lap Pad Menu Flow Charts..... 51
	Appendix E - W & M Prover Guide..... 58

Mises à jour et traductions des publications

Les versions anglaises les plus récentes de toutes les publications de Liquid Controls sont disponibles sur notre site web, [www.lcmeter.com](http://www.lcmeter.com) Il est de la responsabilité du distributeur local de fournir la version la plus récente des manuels, instructions et fiches techniques LC dans la langue requise du pays, ou dans la langue de l'utilisateur final vers lequel les produits sont expédiés. En cas de question concernant la langue des manuels, instructions ou fiches techniques LC, veuillez contacter votre distributeur local.

Read this license carefully. You agree that by using the itemized software package, you have agreed to the software license terms and conditions. This agreement constitutes complete and entire agreement between you and Liquid Controls with respect to this product.

- Liquid Controls hereby grants to Licensee a nonexclusive license to use LCR-II software including SR260 (and all LCR-II firmware), SL 200 (and all LCR-II language software, and ST 200 (and all LCR-II ticket software), (hereinafter referred to as "Licensed Software")
- Under the License granted herein, Licensee may use the itemized machine readable (executable code) copy of the Software, including any subsequent updates which may be provided. Licensee shall not, without Liquid Controls' prior written consent, (a) rent, lease, lend, sublease or otherwise transfer the materials hereunder; (b) remove or obscure proprietary or copyright notices which may be set forth on the Licensed Software; or (c) alter, decompile, or disassemble the program.
- One (1) copy of the Licensed Software, including any software distributed on disks may be made for backup purposes only. No other copies may be made or used without the written consent of Liquid Controls.
- Title. No title to ownership of any Licensed Software is transferred to the Licensee.
- Upgrades. License upgrades may become available for the Licensed Software. Any cost associated with such upgrades will solely be determined by Liquid Controls.
- Warranty. Liquid Controls makes and licensee receives no warranty express or implied and there are expressly excluded all warranties of merchantability and fitness for a particular purpose.
- Limitation of Liability. Licensee shall have the sole responsibility for adequate protection and backup of its data in connection with the Licensed Software. In no event shall Liquid Controls be liable for (a) special, indirect or consequential damages; (b) any damages whatsoever resulting from loss of use, data, or profits, product, inaccurate input or work delays, or any direct property damage arising out of or in connection with this agreement or the use or performance of the Licensed Software.
- Termination. Liquid Controls may terminate this software license granted hereunder and require return of the Licensed Software if Licensee fails to comply with these license terms and conditions.
- Licensee acknowledges that it has read this agreement, understands it, and agrees to be bound by its terms, and further agrees that this is the complete and exclusive statement of the agreement between Liquid Controls and Licensee, which supersedes and merges all prior proposals, understandings, and all other agreements, oral or written, between the parties relating to this agreement. This agreement may not be modified or altered except by written instrument duly executed by both parties.
- This Agreement and performance hereunder shall be construed and interpreted under the laws of the State of Illinois.
- If any provision of this agreement is invalid under any applicable statute or rule of law, it is to that extent to be deemed omitted.
- Licensee may not assign or sublicense, without the prior written consent of Liquid Controls, its rights, duties, or obligations under this Agreement to any person or entity in whole or in part.
- The waiver or failure of Liquid Controls to exercise in any respect any right provided herein shall not be deemed a waiver of any further right hereunder.

**! AVERTISSEMENT**

- Avant d'utiliser ce produit, lire et comprendre les instructions.
- Conserver ces instructions pour référence future.
- Tous les travaux doivent être effectués par du personnel qualifié formé à l'application, l'installation et la maintenance appropriées des équipements et/ou systèmes, conformément à tous les codes et règlements applicables.
- Le non-respect des instructions énoncées dans cette publication pourrait entraîner des dommages matériels, des blessures personnelles ou la mort par incendie et/ou explosion, ou d'autres dangers pouvant être associés à ce type d'équipement.

**General Information** The Liquid Controls LectroCount LCR-II is a microprocessor-based electronic meter register that can be used for Weights & Measures approved custody transfer actions in mobile or fixed installations. The LCR-II can control a meter system as a stand-alone unit, or it can be used as a slave to a host controller such as a process controller or an in-cab data management system.

**Inputs** In order to calculate flow measurements from a positive displacement meter, the LCR-II receives a pulse input from an internally mounted quadrature pulser that is mechanically connected to the flow meter (retrofit kits are available for installation onto Neptune, Brooks, and Smith positive displacement meters). This pulse output can also come from a Liquid Controls external POD pulser or another pulse generator. In addition to the pulse input, the LCR-II is equipped with an input for a temperature probe, so the register can compensate volume measurements according to the temperature of the product.

**Outputs** Le LCR-II est équipé d'une sortie d'impulsion calibrée, de deux sorties auxiliaires et de deux sorties solénoïdes. Ces sorties permettent au LCR-II de communiquer avec des accessoires du système de comptage tels que des vannes à commande solénoïde, des éliminateurs optiques d'air et de vapeur, des afficheurs distants, des imprimantes et des dispositifs tiers.

**Communications**  
Le LCR-II peut communiquer via les protocoles RS-232 et RS-485.


**Display**  
L'afficheur de 1 pouce est un écran LCD rétroéclairé à six caractères.

**Touches de navigation** Le LCR-II dispose de deux touches de navigation bombées pour effectuer les configurations et fonctions de base. Les touches s'enfoncent et reviennent en position pour offrir une confirmation tactile positive des frappes.


**Sélecteur** Le sélecteur contrôle les fonctions de base d'arrêt, de marche, d'impression et d'impression par équipe. Pour effectuer les fonctions d'étalonnage, la plaque de protection doit être retirée et le sélecteur doit être tourné vers la position six heures.

**Fonctionnalité et fonctionnement**  
Les fonctions principales des registres LectroCount comprennent :

- Étalonnage (simple et multipoint)
- Transfert de custody Poids et Mesures (livraison de produit et génération de ticket)
- Collecte de données métrologiques
- Pré-réglage par volume
- Sélection multiple de production
- Paramètres de sécurité
- Élimination de l'air et de la vapeur (avec accessoires appropriés)
- Commande de vanne (avec accessoires appropriés)
- Compensation électronique de volume par température (CEVT) (avec accessoires appropriés)

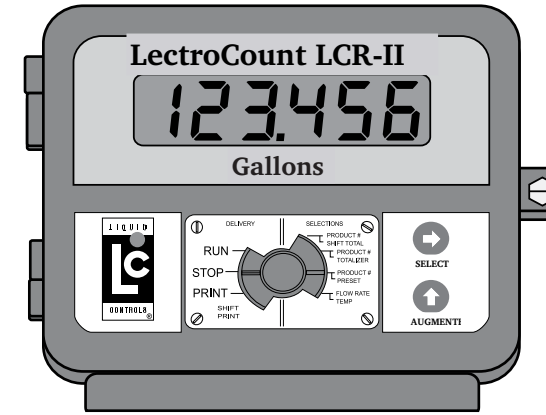


E36 Series LectroCount LCR-II

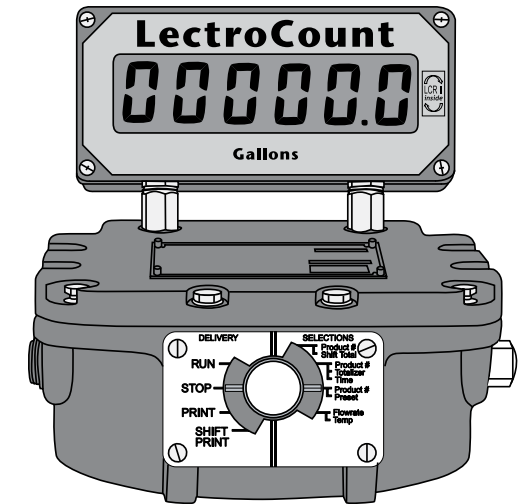


E26 Series LectroCount LCR-II

System Components

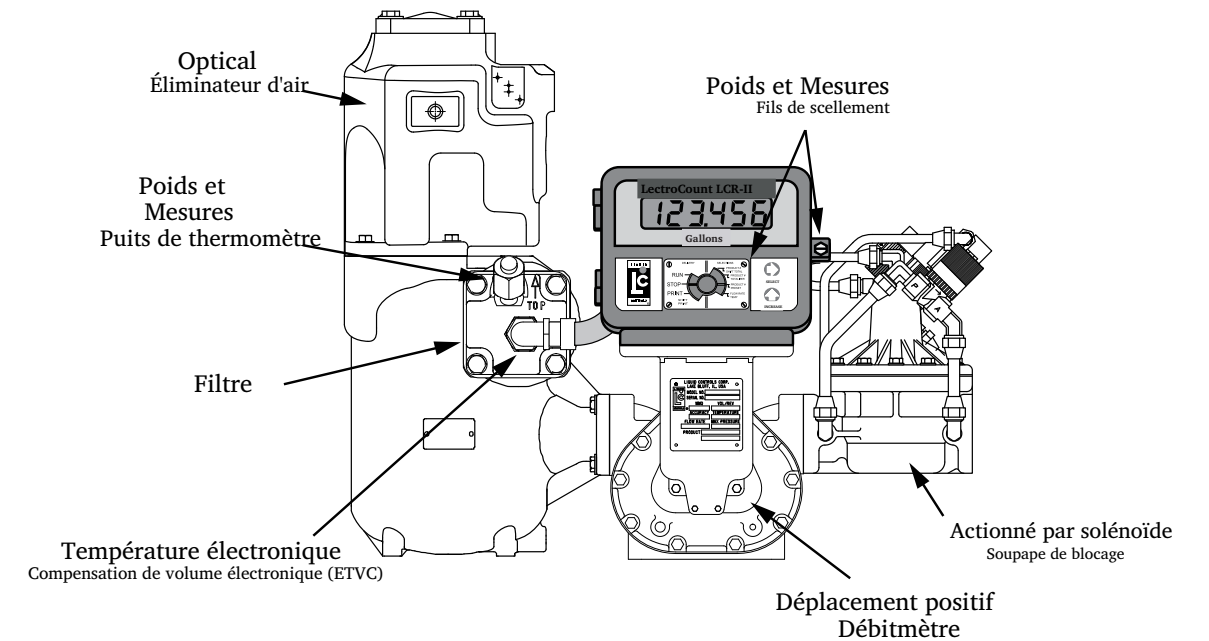

Communication and Programming Devices

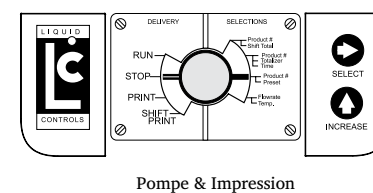

Pompe & Impression



Lap Pad



Laptop Computer (EZCommand)

**Vue d'ensemble du Lap Pad**

Cette section du manuel fournit les instructions pour la configuration initiale, l'étalonnage et l'utilisation de votre registre électronique LCR-II en utilisant le dispositif de saisie de données Liquid Controls Lap Pad. Cette section doit d'abord être parcourue pour se familiariser avec les composants du système, la mise en page et le format du document, le menu de base (écrans) et la saisie de données requise. Cette section doit ensuite être suivie attentivement lors de la configuration et de l'étalonnage du système. (Reportez-vous au manuel d'installation pour les instructions concernant la connexion du Lap Pad pour une utilisation avec le LCR-II).

Les écrans principaux du menu Programme incluent :

**LIVRAISON & PRÉRÉGLAGES**

Ce menu comprend jusqu'à sept écrans de données pour configurer les quantités prédéfinies, les prix des produits, les taxes et autres informations pertinentes sur la livraison.

**INFORMATIONS PRODUIT & QUART**

Ce menu comprend quatre écrans de données secondaires pour visualiser les types de produits et les paramètres de base relatives aux informations de quart.

**CONFIGURATION GÉNÉRALE**

Ce menu comprend cinq écrans de données secondaires pour régler l'horloge et le calendrier internes, initialiser les compteurs de ventes et de numéros de ticket, configurer le minuteur de non-écoulement et définir les données à imprimer sur les tickets.

**ÉTALONNAGE DU SYSTÈME**

Ce menu comprend cinq écrans secondaires pour saisir l'ID du compteur, les sélections d'imprimante, les unités de mesure, arrondi et tronquage.

**ÉTALONNAGE DU PRODUIT**

Ce menu comprend huit écrans secondaires pour attribuer des codes uniques aux produits ; définir les types de produits tels que l'essence, le gazole, le GPL, etc. ; et les paramètres de compensation tels que la température de base pour les livraisons à compensation thermique.

**DIAGNOSTICS**

Ce menu comprend quatre écrans secondaires pour visualiser les paramètres système tels que la version du logiciel, la tension d'alimentation et les informations de diagnostic du pulseur.

 
**SÉCURITÉ**

Ce menu comprend un écran secondaire pour le mot de passe utilisateur et la sécurité du système.



**Lap Pad - Menus principaux**


Lorsque le LCR-II est mis sous tension avec un Lap Pad attaché, celui-ci affiche brièvement un message de copyright pendant deux secondes, suivi du menu principal initial.



Pour naviguer dans les menus du Lap Pad :

1. Appuyez sur la touche  $\square$  pour naviguer vers le menu principal suivant.
2. Continuez d'appuyer sur la touche  $\square$  pour parcourir le reste des menus de premier niveau (comme illustré ci-dessous).
3. Appuyez sur la touche  $\square$  pour naviguer dans la direction opposée.
4. Appuyez sur la touche ENTRÉE pour sélectionner un menu secondaire.

Utilisez les touches  $\square$ ,  $\square$ , M1 et M# pour naviguer dans les écrans de niveau secondaire.

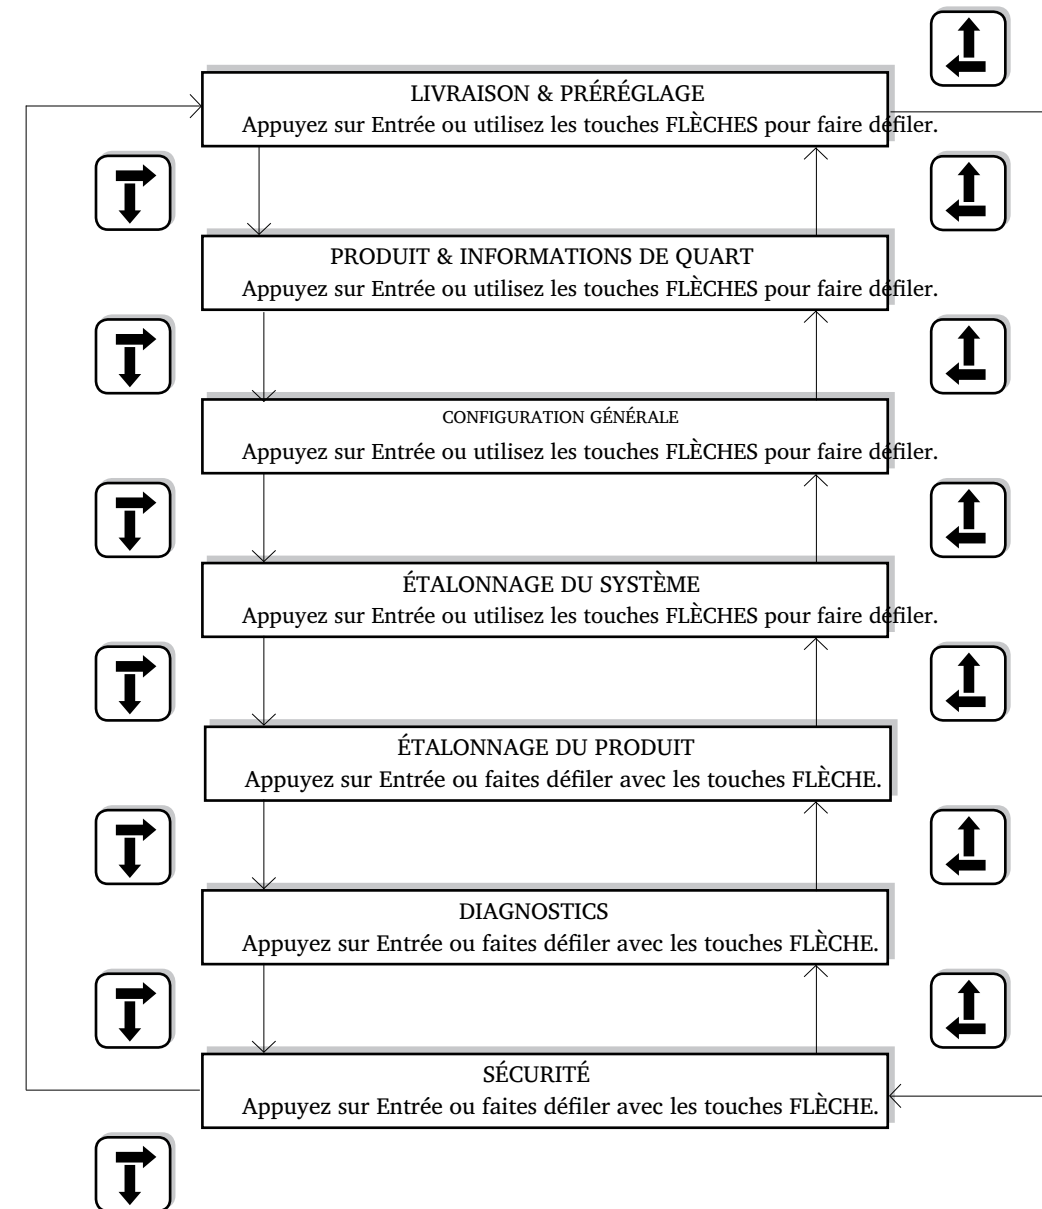

Lap Pad - Secondary Data Screens

Each of the top-level menus has a secondary level consisting of one or more screens. Each screen is divided into one or more fields where data may be entered or information displayed. Access to data entry is dependent on the following:

**DATA FIELD TYPE:**

Some fields are for display only and data entry is not necessary (e.g. DIAGNOSTICS and FLOW RATE ).

**PASSWORD PROTECTION:**

The LCR-II has a user-definable password that allows the system to be locked. This feature authorizes a supervisor to limit access to certain fields. An operator can still view all data fields whether the unit is locked or unlocked. Data entry in general system set-up functions (e. g. **NO-FLOW TIMER** and **PRESET TYPE** ) are still accessible if the system is locked.

**SELECTOR SWITCH:**

The multi-position Selector Switch on the front of the LCR-II™ has a **CALIBRATION** position that is accessed by removing a Weights & Measures sealable plate. This allows data entry in the metrologically significant fields (e. g. **COMPENSATION TYPE** , **TEMPERATURE PULSES/UNIT** and others).

When a secondary menu is entered by pressing the **ENTER** key, the cursor will be positioned in the top line of the first field. Pressing **→** will cause the cursor to move to the next field. Repeatedly pressing **→** will move the cursor through the fields from left to right. After the right most field, the next secondary menu screen will be displayed. The cursor will be in the first field. After the last field of the last screen, the cursor returns to the top line of the first field of the first screen. The cursor indicates if data can be entered or changed in the field below it. If the cursor is flashing, pressing **ENTER** will move the cursor to the second line in the field and data may be entered or changed. In some cases, data is entered using the keypad. In other cases, data is entered by selecting entries using the **↑↓** keys. A " ^ " Character in the top line of the field indicates that a scroll list is used for the field. In fields that have a " ? ", a " **YES** " or " **NO** " response is selected. Information that is entered through the Lap Pad or selected from a menu of choices is stored in the LCR-II by pressing **ENTER** . The cursor also moves back to the top line of that menu screen.

Menu maps of the screens accessible in the system are located in Appendix D on pages 50-57.

Aperçu de la configuration du LCR-II

- Assurez-vous que le Lap Pad ou autre dispositif de saisie de données est connecté au terminal LCR-II comme décrit dans le Manuel d'installation du LCR-II.
- Lors de la vérification du système LCR-II, suivez les procédures de pré-test et d'inspection établies par les autorités des Poids et Mesures. L'élément principal d'indication et d'enregistrement sur un LCR-II monté sur véhicule est l'afficheur à cristaux liquides 6 digits.
- Les inspecteurs des Poids et Mesures sont responsables de déterminer si les éléments de jaugeage et d'enregistrement du camion du système sont dans les tolérances. Pour effectuer cette détermination, le système doit être testé dans des conditions normales.
- Le LCR-II est préprogrammé avec des valeurs courantes pour de nombreux paramètres programmables. Ces valeurs doivent être vérifiées pour s'assurer qu'elles correspondent aux exigences spécifiques de l'installation donnée. Des instructions détaillées pour vérifier et modifier ces valeurs suivent plus loin dans cette publication.
- Des modifications ne peuvent pas être apportées aux données métrologiquement significatives sans d'abord retirer la plaque commutatrice et son scellé associé des Poids et Mesures. Le niveau de sécurité pour chacun des écrans de programmation est défini dans le tableau suivant :

Lap Pad Security Level Key - for tables in this manual

<b>OPERATOR</b>	<i>Operator can change or enter data.</i>
<b>PASSWORD</b>	<i>System must be unlocked</i>
<b>WEIGHTS &amp; MEASURES</b>	<i>Switch must be in the CALIBRATION position to enter or change data</i>
<b>FACTORY</b>	<i>Read Only (cannot be changed by operator)</i>
<b>NOT EDITABLE</b>	<i>Read Only (cannot be changed by operator)</i>


*This table applies to the lower line of the Lap Pad display only. The upper line cannot be edited.*

LCR-II Setup Steps

- STEP 1: REMOVE THE LCR-II SWITCHPLATE
- STEP 2: SECURITY
- STEP 3: GENERAL SETUP
- STEP 4: SYSTEM CALIBRATION
- STEP 5: PRODUCT & SHIFT INFORMATION
- STEP 6: PRODUCT CALIBRATION

STEP 1: REMOVE THE LCR-II SWITCHPLATE

- Remove the lead seal and wire assembly from the LCR-II switchplate (if previously sealed by Weights & Measures authorities).
- Remove the four screws that secure the Switch Plate over the red Selector Switch located on the front of the LCR-II, and remove the plate.
- Rotate the Selector Switch counter clockwise to the 6 o'clock (CALIBRATION) position to permit access to all programming fields (except FACTORY).

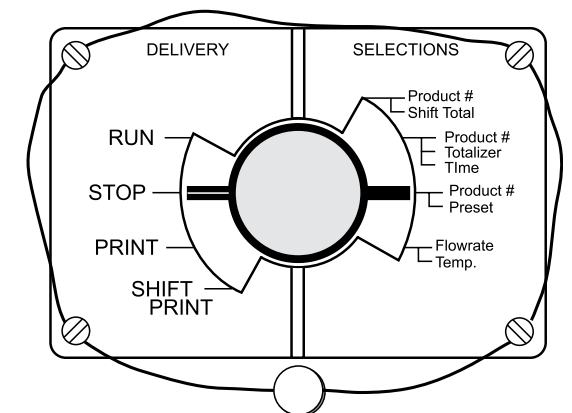

STEP 2: SECURITY

Press the M1 Key to access a top-level menu. Press  to scroll to the SECURITY menu. Press ENTER to gain access to the secondary menu.

Security - Screen 1

USER KEY	SECURITY^	
0001	UNLOCKED	

USER KEY (Password)

Use this field to enter the owner/office password. To enter a password, press ENTER to drop into the data entry field. Enter a password using up to 10 alphanumeric characters. Press ENTER. This password will be required in the future to unlock the system in order to gain access to secured menu and data entry fields. This password will also be needed to change the time using the LCR-II control buttons. If it is desired to have access to time adjustment, the USER KEY must be numeric only and contain 5 digits.

Press  and the cursor will move to:

SECURITY^

This field is used to lock the system. Press ENTER to drop to the bottom field. Use i to scroll between LOCKED and UNLOCKED. Press ENTER to select the desired option. While the system is LOCKED, the operator is unable to change system data other than GROSS and NET PRESETS, PRODUCT CODE, PRODUCT NAME, and NO-FLOW TIMER.

*The LCR-II is shipped LOCKED from the factory.*

Press M1 to return to the top-level menu. Press  to scroll to GENERAL SETUP.

STEP 3: GENERAL SETUP The fields in this menu are not specific to any of the four possible product calibrations, therefore the Selector Switch does not have to be in the CALIBRATION position to allow data entry in many of these fields and changes can be made without breaking Weights & Measures seals.

Press ENTER and the cursor will move to:

General Setup - Screen 1

DATE FORMAT^	DATE	TIME HH:MM:SS
MM/DD/YY	10/6/2002	9:05:24

DATE FORMAT^

This field is used to determine in which format the date will be displayed and printed: month first or day first. Press ENTER and the cursor will drop to the second line. Now you can use the arrow keys to select the format, either month first (MM/DD/YY) or day first (DD/MM/YY). When the choice is displayed, press ENTER and the cursor will move back to the top line.

Press  and the cursor will move to:

DATE MM/DD/YY (or DD/MM/YY depending on the previous field).

This field is used to set the LCR-II internal calendar. The LCR-II updates its calendar and will print the correct date on delivery tickets. Press ENTER and the cursor will drop to the bottom line. Enter the current date on the keypad using only numbers. Press ENTER and the cursor will move back to the top line.

STEP 3: GENERAL SETUP (CONT'D)

Press  and the cursor will move to:

TIME HH:MM:SS

This field is used to set the LCR-II internal clock. The time, like the date, is updated by the LCR-II and printed on the delivery tickets. Press ENTER and the cursor will drop to the bottom line. Enter the current hour, minutes, and seconds. Use military time (e.g. press 13:01:15 for 1:01:15 PM).

*To synchronize the clock to the second, press ENTER when the appropriate second is reached. Press ENTER and the cursor will move to the top line.*

Press  and the cursor will move to:

General Setup - Screen 2

SALE#	TICKET#	UNIT ID	NO-FLOW TIMER
25	1	123456	180

SALE #

This field is used to track the number of transactions that the LCR-II processes. The LCR-II will increment the field each time a delivery is made, wrapping around to 000000 after 999999. Press ENTER and the cursor will drop to the bottom line. Key in the starting SALE #, up to 6 digits. Press ENTER and the cursor will move to the top line.

Press  and the cursor will move to:

TICKET #

This is similar to the sale number. It will increment every time that the LCR-II prints a ticket. If multiple or duplicate tickets are used for transactions, the ticket number will be incremented more than the sale number. NOTE: If a TICKET # of 0 is entered, the TICKET # will not print on the delivery ticket and the TICKET # will not increment. Press ENTER and the cursor will drop to the bottom line. Key in the starting TICKET #, up to 6 digits. Press ENTER and the cursor will move to the top line.

Press  and the cursor will move to:

UNIT ID

This is a number that can be used to identify the driver, location, or truck that the LCR-II is associated with. Press ENTER and the cursor will drop to the bottom line. Key in your UNIT ID, up to 10 characters. Press ENTER and the cursor will move to the top line.

Press  and the cursor will move to:

NO-FLOW TIMER

The NO-FLOW TIMER is an internal timer in the LCR-II that starts running when the LCR-II senses that there is no longer any product moving through the meter. If the timer counts up to its set point, the LCR-II will assume that the delivery is over, and print a ticket. The timer can be set to count up to 3600 seconds before printing the ticket. This feature can be deactivated by entering 0 seconds, allowing multiple tanks to be filled at a location. The timer helps to ensure that deliveries are not split between authorized and unauthorized locations. NO-FLOW TIMER is not active in prover mode. If the value is set to 0 or any value greater than 180, "Multiple Deliveries at One Site" will be printed on the delivery ticket.

*Internal timer is activated once the flow delivery has started and a minimum amount of flow (1 gallon or 5 liters) is registered and then is stopped.*

STEP 3: GENERAL SETUP (CONT'D)

**NO-FLOW TIMER CONTINUED**

Press **ENTER** and the cursor will drop to the bottom line. Enter the desired **NO-FLOW TIMER** value in seconds. Press **ENTER** and the cursor will move to the top line.

Press  and the cursor will move to:

**General Setup - Screen 3**

PRESET <sup>^</sup>	PRESET TYPE <sup>^</sup>	PULSE OUTPUT EDGE <sup>^</sup>
GROSS	CLEAR	RISING

**PRESET<sup>^</sup>**

Available preset options include **NET**, **BOTH**, **GROSS**, and **NONE**. Selecting **NONE** will disable presetting. Presetting **NET**, **GROSS**, or **BOTH** is allowed. Press **ENTER** and the cursor will drop to the bottom line. Use  to scroll through the available preset options. When the desired option is displayed, press **ENTER** and the cursor will move to the top line.

Press  and the cursor will move to:

**PRESET TYPE<sup>^</sup>**

There are four preset types:

**CLEAR**

Resets the preset values to 0 after the current delivery is ended.

**RETAIN**

Maintains the preset values to be used again on the next delivery.

**MULTIPLE**

Allows more than one preset to be run before a delivery ticket is printed. Printing must be initiated by a **PRINT** command.

**INVENTORY**

Maintains the remaining preset amount between deliveries (i. e. indicates the remaining volume in the vehicle tank).

Press **ENTER** and the cursor will drop to the bottom line. Use  to scroll through the four options. When the desired choice is displayed, press **ENTER** and the cursor will move to the top line.

Press  and the cursor will move to:

**PULSE OUTPUT EDGE<sup>^</sup>**

This feature allows you to synchronize the calibrated pulse output waveform with the requirements of an external system that uses that LCR-II signal. There are two choices: **RISING** or **FALLING**. (Some counters increment on rising, others on falling pulse edges. Refer to equipment technical manual to determine the specific requirements of your connected equipment). Press **ENTER** and the cursor will drop to the bottom line. Use  to scroll between the two choices. When the desired choice is displayed, press **ENTER** and the cursor will move to the top line.

Press  and the cursor will move to:

STEP 3: GENERAL SETUP (CONT'D)

**General Setup - Screen 4**

HDR <sup>^</sup>	TICKET HEADER LINE
1	

**HDR<sup>^</sup>**

This field is used to select the line number of the ticket header that will be edited in the following field. Press **ENTER** and the cursor will drop to the bottom line. Use the  keys to scroll through the numbers from 1 to 12. When the desired choice is displayed, press the **ENTER** key and the cursor will move to the top line.

Press  and the cursor will move to:

**TICKET HEADER LINE**

This feature is useful when using blank (as opposed to pre-printed) tickets. The field allows the fuel dealer to enter the company name, address, telephone number, etc., which will be printed on each delivery ticket. This field (35-character max.) allows you to enter or edit ticket header labels. The Header Line will scroll in tandem with the **HDR #** selected in the previous field. Any lines that are left blank will not be printed on the ticket.

*Header Lines 11 and 12 can only be edited in the CALIBRATION mode. TICKET HEADER LINE 11 only prints when AUX OUT 1 is ON or ON DURING DELIVERY as shown on the Lap Pad Screen. TICKET HEADER LINE 12 only prints when AUX OUT 2 is ON or ON DURING DELIVERY. After data has been entered, press ENTER.*

Press  and the cursor will move to:

**General Setup - Screen 5**

PRINT GROSS & PARAM?	VOL CORRECTED MSG?
YES	YES

**PRINT GROSS & PARAM?**

This allows one to choose whether to have the gross volume and compensation parameter printed on the ticket if the product is temperature compensated. Press **ENTER** and the cursor will drop to the bottom line. Use  to scroll between the two choices, **YES** or **NO**. When the desired choice is displayed, press the **ENTER** key and the cursor will move to the top line.

Press  and the cursor will move to:

**VOL CORRECTED MSG?**

This field allows you to print a message on the delivery ticket indicating that delivery volume has been corrected to a base temperature (defined later in **SYSTEM CALIBRATION**). The user has the option ( **YES** or **NO** ) to print the message. Press **ENTER** and the cursor will drop to the bottom line. Use  to scroll between the two choices, **YES** or **NO**. When the desired choice is displayed, press the **ENTER** key and the cursor will move to the top line. Press **M1** to return to the top of the **GENERAL SETUP** menu.

STEP 4: SYSTEM CALIBRATION From the top-level menu, use  to scroll to **SYSTEM CALIBRATION** . Press **ENTER** and the cursor will move to:

**System Calibration - Screen 1**

METER ID	TICKET?	PRINTER
1234567890	SI	EPSON 295 SLIP

**METER ID**

This number allows you to uniquely identify an LCR-II/Meter combination. If the LCR-II is part of a multiple-meter system, it is important that this number be unique. It is recommended that the meter serial number be entered here. This number will print on the calibration/diagnostic ticket. Press **ENTER** and the cursor will drop to the bottom line. Key in 1 to 10 characters. Press **ENTER** and the cursor will move back to the top line.

Press  and the cursor will move to:

**TICKET?**

This field allows you to choose whether or not a ticket will be required for each delivery. Most Weights & Measures governed truck applications will require a ticket. If **YES** is chosen, the LCR-II will not allow deliveries to be made unless a ticket is in the printer, the printer is operational and the previous delivery ticket has been printed in its entirety. Press **ENTER** and the cursor will drop to the bottom line. Use  to scroll between the two choices, **YES** or **NO** . When the desired choice is displayed, press **ENTER** . The cursor will move to the top line. When **NO** is selected, tickets are not mandatory but will print if a printer is connected and available to print a ticket.

Press  and the cursor will move to:

**PRINTER^**

This field allows you to select a printer type. The six choices are **EPSON NewFontB** (select for use with EPSON 200 Roll and EPSON 220 Roll), **EPSON NewFontA** (select for use with EPSON TM-T88iii), **EPSON OldFontA** (select for use with EPSON 290 Slip and EPSON 295 Slip), **EPSON OldFontB** (select for use with EPSON 300 Roll), **OKIDATA ML184T** (select for use with Okidata ML184T), **BLASTER** (select for use with Cognitive Solutions Thermal Printer). Press **ENTER** and the cursor will drop to the bottom line. Use  to scroll between the choices. When the desired choice is displayed, press **ENTER** and the cursor will move back to the top line.

Press  to move to:

**System Calibration - Screen 2**

UNITS^	RATE BASE^	DECIMAL^	RESIDUAL^
GALLONS	PER MINUTE	TENTHS	ROUND

**UNITS^**

This field is used to choose the units of flow measurement. The choices are **GALLONS** , **LITRES** , **CUBIC M** , **LBS** (pounds), **KGS** (kilograms), **BARRELS** , and **OTHER** . Press **ENTER** and the cursor will drop to the bottom line. Use the  keys to scroll through the choices. When the desired choice is displayed, press **ENTER** and the cursor will move to the top line.

Press  and the cursor will move to:

**RATE BASE^**

Use this field to select the time unit for measurement on the flow rate display. The choices are rate **PER HOUR** , **PER MINUTE** and **PER SECOND** . Press **ENTER** and the cursor will drop to the bottom line. Use  to scroll between the three choices. When the desired choice is displayed, press **ENTER** and the cursor will move to the top line.

Press  and the cursor will move to:

STEP 4: SYSTEM CALIBRATION (CONT'D)

**DECIMAL^**

This field allows you to choose between whole units, tenths and hundredths of a unit. Press **ENTER** and the cursor will drop to the bottom line. Use  to scroll between **WHOLE** , **TENTHS** , and **HUNDR** . When the desired choice is displayed press **ENTER** and the cursor will move to the top line.

Press  and the cursor will move to:

**RESIDUAL^**

Volumes less than the least significant digit can be rounded into that digit or truncated (thrown away) depending on the selection mode. Press **ENTER** and the cursor will drop to the bottom line. Press  to scroll between **ROUND** and **TRUNCATE** . When the desired choice is displayed press **ENTER** and the cursor will move to the top line.

Press  and the cursor will move to:

**System Calibration - Screen 3**

TEMP	OFFSET	T TEMP^	RTD SLP	RTD OFS
53	00	DEG. F	0.024724	2.817

**TEMP**

This field displays the current temperature reading from the RTD temperature probe and allows one to enter a corrected value from a Weights & Measures thermometer. If the LCR-II is not equipped with the optional Electronic Temperature Volume Compensation (ETVC) Kit, this field will read “ -- ”. **To make a correction:**

Run enough product through the meter to allow the temperature to stabilize. Compare the **TEMP** reading with the current Weights & Measures thermometer reading. If the readings are different, the Weights & Measures reading should be entered. Press **ENTER** and the cursor will drop to the bottom line. Enter the new value. The new value will overwrite the previous one and the **OFFSET** field will be recalculated by the LCR-II. Offset adjustments are limited to  $\pm 0.3^{\circ}\text{C}$  ( $\pm 0.54^{\circ}\text{F}$ ). Adjustments greater than this limit require replacement of the RTD probe. Press **ENTER** and the cursor will move to the top line.

Press  and the cursor will move to:

**OFFSET**

The offset represents the difference between the official Weights & Measures reading and the LCR-II RTD reading. The offset is automatically calculated if an entry is made in the previous field. If a Weights & Measures thermometer reading was not entered in the previous field, subtract the value listed in the **TEMP** field from the Weights & Measures measurement. Key in the difference in the offset field. If the number is negative, use “ \* ” on the Lap Pad to change the sign. Adjustment is limited to  $\pm 0.3^{\circ}\text{C}$  ( $\pm 0.54^{\circ}\text{F}$ ). Any adjustment larger than  $\pm 0.3^{\circ}\text{C}$  ( $\pm 0.54^{\circ}\text{F}$ ) generates a “ **RANGE ERROR** ” message and requires replacement of the RTD probe.

Press  and the cursor will move to:

STEP 4: SYSTEM CALIBRATION (CONT'D)

**T UNIT^**

This field allows you to choose the temperature units - Degrees Fahrenheit or Degrees Celsius. Press **ENTER** and the cursor will drop to the bottom line. Use  to scroll between the two choices, **DEG. F** and **DEG. C** . When the desired choice is displayed, press **ENTER** and the cursor will move to the top line.

Press  and the cursor will move to:

**RTD SLP**

Factory calibration setting only. Press  and the cursor will move to:

**RTD OFS**

Factory calibration setting only. Press  and the cursor will move to:

**System Calibration - Screen 4**

FLOW DIR^	LAST CALIBRATED	LCR #
->	7/11/2002 11:44	250

**FLOW DIR^**

This field allows you to match the LCR-II flow direction to the meter's pulse output. If the counter runs backwards, this arrow should be changed. The choices are  or  . Press **ENTER** and the cursor will drop to the bottom line. Use  to scroll between the two choices. When the desired choice is displayed, press **ENTER** .

Press  and the cursor will move to:

**LAST CALIBRATED**

This field contains the date and time of the last calibration. It cannot be edited.

Press  and the cursor will move to:

**LCR #**

This field contains the node address for RS485 communication. Enter a number between 1 and 250 . The default value is 250 .

Press  and the cursor will move to:

**System Calibration - Screen 5**

CALIB#	CALIB EVENT	CONFIG EVENT
34	19	1

**CALIB #**

For metrology use only. This is the number of times the calibration switch position has been entered. **DISPLAY ONLY.**

**CALIB EVENT**

For metrology use only. This is the number of times the calibration has been changed. **DISPLAY ONLY.**

**CONFIG EVENT**

For metrology use only. This is the number of times the configuration has been changed. **DISPLAY ONLY.**

Press the **M1** key to return to the top of the **SYSTEM CALIBRATION** menu. Then press  to scroll to **PRODUCT & SHIFT INFORMATION.**

STEP 5: PRODUCT & SHIFT INFORMATION

Press **ENTER** and the cursor will move to:

**Product & Shift - Screen 1**

#^	PROD TYPE	SHIFT START	DLVRY
1	DISTILLATE	7/01/2002 1:44:00	22

**#^ (Product Number)**

This field is used to select one of four possible product types/calibrations. Press **ENTER** and the cursor will drop to the bottom line. Use  to scroll through the numbers 1-4 . When the product number is selected for which corresponding **PROD TYPE^** information will be entered, press **ENTER** and the cursor will move to the top line.

Press  and the cursor will move to:

**PROD TYPE^**

This field will scroll along with the **#^ (Product Number)** that is shown in the first field. The product type **AMMONIA** , **AVIATION** , **DISTILLATE** , **GASOLINE** , **METHANOL** , **LPG** , **LUBE OIL** or " **blank** " can be selected. Press **ENTER** and the cursor will drop to the bottom line. Press  to scroll through the available options. When the desired choice is displayed, press **ENTER** and the cursor will move to the top line.

Press  and the cursor will move to:

**SHIFT START**

The starting time and date for the current shift are shown here. **DISPLAY ONLY.**

**DLVRY**

This field shows the number of deliveries that have been made since the last time **CLR SHIFT** was set to **YES** or a shift ticket was printed. **DISPLAY ONLY.**

Press  and the cursor will move to:

**Product & Shift - Screen 2**

#^	SHIFT GROSS	SHIFT NET	UNITS
1	1647.6	0.0	GALLONS

**#^ (Product Number)**

This field is used to select one of four possible product types/calibrations that can be set up in the LCR-II. At least one calibration must be set up to allow deliveries.

**SHIFT GROSS**

This field displays the gross number of units that have been delivered through the meter since the last time the **CLR SHIFT** field was set to **YES** or a shift ticket was printed. **SHIFT GROSS** is the sum total of the delivery ticket gross quantities during the current shift. **DISPLAY ONLY.**

Press  and the cursor will move to:

**SHIFT NET**

This field displays the net (temperature compensated) number of units that have been delivered through the meter since the last time **CLR SHIFT** field was set to **YES** or a shift ticket was printed. **SHIFT NET** is the sum total of the delivery ticket net quantities during the current shift. **DISPLAY ONLY.**

STEP 5: PRODUCT & SHIFT INFORMATION (CONT'D)

**UNITS<sup>^</sup>**

From this field, a unit of measure is selected. Choose **GALLONS** , **LITRES** , **CUBIC M** , **LBS** (pounds), **KGS** (kilograms), **BARRELS** , or **OTHER** .

Press  and the cursor will move to:

**Product & Shift - Screen 3**

# <sup>^</sup>	GROSS TOTAL	NET TOTAL	UNITS
1	8	0	GALLONS

**#<sup>^</sup> (Product Number)**

This field is used to select one of four possible product types/calibrations. At least one calibration must be set up in the LCR-II to allow deliveries.

**GROSS TOTAL**

This field shows the total gross volume that has gone through the register since the field was last initialized. This value can be initialized to any positive number if the Selector Switch is in the **CALIBRATION** position. This is a “live” totalizer and will count regardless of a delivery being active.

Press  and the cursor will move to:

**NET TOTAL**

This field shows the total net volume that has gone through the register since the field was last initialized. This value can be initialized to any positive value if the Selector Switch is in the **CALIBRATION** position. This is a “live” totalizer and will count regardless of a delivery being active.

Press  and the cursor will move to:

**UNITS<sup>^</sup>**

From this field, a unit of measure is selected. Choose from **GALLONS** , **LITRES** , **CUBIC M** , **LBS** (pounds), **KGS** (kilograms), **BARRELS** , or **OTHER** . If more than one product is entered, the above listed procedures should be repeated for each.

Press  and the cursor will move to:

**Product & Shift - Screen 4**

CLR SHIFT?
NO

**CLR SHIFT?**

This field is used to print a **SHIFT TICKET** and clear the **SHIFT GROSS** , **SHIFT NET** , and **DLVRY** fields. If **YES** is selected, the shift fields will be reset to **0** after the shift ticket is printed. After the ticket is printed, this field will revert to **NO** . If **TICKET?** is set to **NO** , shift totals can be cleared without printing a shift ticket. Press **ENTER** and the cursor will drop to the bottom line.

Press the  key to scroll between **YES** and **NO** . When the desired entry is displayed, press **ENTER** and the cursor will return to the top line.

STEP 6: PRODUCT CALIBRATION - Single Point

Press **M1** to return to the top-level menu. Press **i** to scroll to **PRODUCT CALIBRATION** . There are four product calibrations that can be set up in the LCR-II. The products are calibrated one at a time. Press **ENTER** and the cursor will move to:

**Product Calibration - Screen 1**

# <sup>^</sup>	CODE	PRODUCT NAME	PRODUCT TYPE
1	12345	Product Name	DISTILLATE

**#<sup>^</sup>(Product Number)**

This number will correspond to one of the four product types/calibrations that can be set up in the LCR-II. At least one calibration must be set up to allow deliveries. Press **ENTER** and the cursor will drop to the bottom line. Use **i** to scroll between the four choices, **1** to **4** . Press the **ENTER** key when the desired choice is displayed.

Appuyez sur  et le curseur se déplacera vers :

**CODE**

Un code alphanumérique de cinq caractères peut être saisi ici. Ce code correspondra à l'un des produits de ce type de produit. Ce code peut également être saisi dans le **LIVRAISON & PRÉRÉGLAGE** menu. Appuyez sur **ENTRÉE** et le curseur descendra sur la ligne du bas. Saisissez un code qui aidera l'opérateur à identifier le produit ou un code qui a été spécifié pour une utilisation par un système informatique hôte. Appuyez sur **ENTRÉE** et le curseur se déplacera vers la ligne du haut.

Appuyez sur  et le curseur se déplacera vers :

**PRODUCT NAME**

The **PRODUCT NAME** contains a product description (up to 18 alphanumeric characters) that will print on the delivery ticket. NOTE: Make sure that the **PRODUCT NAME** matches up with the **PROD TYPE<sup>^</sup>** , **#<sup>^</sup>** , and **CODE** that are also entered on this screen. This name can also be entered in the **DELIVERY & PRESET** menu. Press **ENTER** and the cursor will drop to the bottom line. Enter the appropriate **PRODUCT NAME** . Press **ENTER** and the cursor will move to the top line.

Press  and the cursor will move to:

**PROD TYPE<sup>^</sup>**

This field will scroll along with the **#<sup>^</sup>(Product Number)** that is shown in the first field. The product type **AMMONIA** , **AVIATION** , **DISTILLATE** , **GASOLINE** , **METHANOL** , **LPG** , **LUBE OIL** and “ **blank** ” can also be set up in the **PRODUCT & SHIFT INFORMATION** menu.

Press  and the cursor will move to:

**Product Calibration - Screen 2**

COMPENSATION TYPE	COMP PARAM	BASE TEMP
TABLE 54B	653	0

**COMPENSATION TYPE<sup>^</sup>**

Select the type of Temperature Volume Compensation to be used for this specific product number. No deliveries are permitted if the LCR-II is configured for temperature compensation and the temperature circuit has failed or the measured temperature is out of the specified range (see Table in Appendix A).

STEP 6: PRODUCT CALIBRATION - Single Point (CONT'D)

**COMPENSATION TYPE<sup>^</sup> CONTINUED**

Scroll through the choices: **Linear F** , **Linear C** , **API Table 24** , **API Table 54** , **API Table 6B** , **API Table 54B** , **API Table 54C** , **API Table 54D** , **NH3** or **NONE** . If “ **NONE** ” is selected, deliveries will be in gross quantities only. Net Quantities will read “ **0** ” on the screen. Refer to the Compensation Types and Parameters table (Appendix A) when choosing the type of compensation to be used.

**COMP PARAM**

This field contains the coefficient of expansion, the standard density, API gravity, or the specific gravity that will be used with the **COMPENSATION TYPE** selected in the previous field. Enter a number based on the **COMPENSATION TYPE** and the product that is being metered. Refer to the Compensation Types and Parameters table found in Appendix A.

**BASE TEMP**

This field is used to set the base temperature for temperature compensated deliveries when using either the **Linear C** or **Linear F Compensation** type. It defaults to either **60°F** or **15°C** when using either the **API** tables or **NH3** . Enter a number. Press **ENTER** to return to the top line.

Press  and the cursor will move to

**Product Calibration - Screen 3**

# <sup>^</sup>	PULSE/UNIT	PROVER QTY	UNITS
1	000000	000	GALLONS

**#<sup>^</sup> (Product Number)**

This number will correspond to one of the four product types/calibrations that can be set up in the LCR-II. At least one calibration must be set up to allow deliveries.

**PULSES/UNIT**

This field is the number of pulse edges that the LCR-II counts per unit of measure. (Only Gross Volume applies). This number is used to scale the **PROVER QTY** (Gross).

**Proving Turbine Flowmeters**

*Enter the pulses/unit (K-factor) from the factory calibration sheet.*

*LCR-II must be configured for single channel pulse output. See LCR-II Installation Manual EM150-20.*

**PROVER QTY**

This field displays the metered volume. When this value is overwritten with the actual **PROVER QTY** , a new **PULSES/UNIT** (k-Factor) will be recalculated automatically. (Only for Calibration use.) If this is the initial calibration for this meter, first enter the rest of the **PRODUCT CALIBRATION** data before entering this field. Once the other **PRODUCT CALIBRATION** parameters are entered, press **START** and fill up a reliable prover. As the prover is filled, this field will increment, displaying a volume based on the existing **PULSES/UNIT** parameter. After the prover has been filled, press **PRINT** and enter the exact prover reading in place of the reading displayed. When the new reading is entered, the **PULSES/UNIT** parameter will be recalculated by the LCR-II, “zeroing” out the error. Refill the prover. Check to ensure that the prover and LCR-II gross volumes are within tolerance limits. If not, enter the new prover volume, and retest.

Press  and the cursor will move to:

*Calibration instructions apply to both Liquid Controls positive displacement flowmeters and Sponsler turbine flowmeters.*

**Product Calibration - Screen 4**

GROSS QTY	PRESET	REMAINING	UNITS
0.0	0.0	- - - - -	GALLONS

**GROSS QTY**

This field displays the gross delivery total for the product being delivered. DISPLAY ONLY.

STEP 6: PRODUCT CALIBRATION - Single Point (CONT'D)

**PRESET**

The Gross Preset amount is entered here. When this amount is reached the valve outputs are turned off.

**REMAINING**

The number of units remaining to be delivered on the current GROSS DELIVERY preset is displayed.

**UNITS<sup>^</sup>**

Choose the units of measure to be displayed. The choices are **GALLONS** , **LITRES** , **CUBIC M** , **LBS** (pounds), **KGS** (kilograms), **BARRELS** , or **OTHER** . Use the **hi** keys to scroll through the choices. Press **ENTER** to make a selection.

Press  and the cursor will move to:

**Product Calibration - Screen 5**

GROSS QTY	NET QTY	UNITS <sup>^</sup>	TEMP
0.0	0.0	GALLONS	23.4

**GROSS QTY**

This field displays the gross delivery total for the product being delivered.

**NET QTY**

This field will show the **NET QTY** of the delivery in progress, or the last delivery if the meter isn't running. The net quantity is calculated by multiplying the gross quantity by the calculated Volume Correction Factor (VCF). If no compensation is active, it is set to zero. The VCF calculation is based in part on the temperature reading from the RTD and the offset that was calculated/entered in the **SYSTEM CALIBRATION** menu.

**UNITS<sup>^</sup>**

Choose the units of measure to be displayed. The choices are **GALLONS** , **LITRES** , **CUBIC M** , **LBS** (pounds), **KGS** (kilograms), **BARRELS** , or **OTHER** . Use the   keys to scroll through the choices. Press **ENTER** to make a selection.

**TEMP**

This displays the actual product temperature if the optional ETVC Kit is installed.

Press  and the cursor will move to:

**Product Calibration - Screen 6**

S1 CLOSE	AUX MULT	AUT QTY	AUX UNIT <sup>^</sup>
0	000	0.0	LITRES

**S1 CLOSE**

This number is used to set the dwell period if the LCR-II is controlling a two-stage valve or presetting with a one-stage valve. This represents the number of measurement units (e.g. **GALLONS** , **LITRES** ) that are remaining on a preset delivery before the valve is placed in a bypass, trickle, or dwell mode. An **S1 CLOSE** value is needed for each of the four product numbers. Enter a number between **0** and **500** . The number entered here will match up with the **#<sup>^</sup>(Product Number)** that was selected in the first field of this menu.

STEP 6: PRODUCT CALIBRATION - Single Point (CONT'D)

**AUX MULT**

This field is used to convert the quantity delivered, (e.g. **GALLONS** , **LITRES** ) to an alternate volume or mass unit such as **CUBIC METERS** , **LBS** , etc. The user must furnish an applicable conversion factor. If **AUX MULT** is set to **0** , it will not print on the delivery ticket. Example: To convert **GALLONS** to **LBS** , **AUX MULT** is calculated as follows:

$$\text{AUX MULT} = (\text{SpGr}) \times (8.345 \text{ lbs/gal})$$

(Where SpGr is the specific gravity.)

**AUX QTY**

This field is used to display the volume delivered in terms of the alternate volume or mass unit.

**AUX UNIT^**

This field is used to define the auxiliary unit of measure that will be printed on the delivery ticket, i.e., **GALLONS** , **LITRES** , **CUBIC M** , **LBS** , **KGS** , **BARRELS** , or **OTHER** .

Press  and the cursor will move to:

Product Calibration - Screen 7

PT^	RATE	UNITS^	RATE BASE^	%ERROR
1	00	GALLONS	PER MINUTE	000

**PT^**

This field is used to calibrate the meter/register at up to 10 different flow rates for each product type/ calibration.

**RATE**

This field displays actual flow rate during delivery. Enter the actual flow rate for multi-point calibration.

**UNITS^**

Choose the units of measure to be displayed. The choices are **GALLONS** , **LITRES** , **CUBIC M** , **LBS** (pounds), **KGS** (kilograms), **BARRELS** , or **OTHER** . Use the **hi** keys to scroll through the choices. Press **ENTER** to make a selection.

**RATE BASE^**

Choose the time unit for measurement on the flow rate display. The choices are units **PER HOUR** , **PER MINUTE** and **PER SECOND** . Use the  keys to scroll through the choices. Press **ENTER** to make a selection.

**%ERROR**

This field contains the %ERROR difference against the base number.

$$\%Error = \frac{(\text{Prover Quantity} - \text{Meter Quantity})}{\text{Prover Quantity}} \times 100$$

Press  and the cursor will move to:

STEP 6: PRODUCT CALIBRATION - Single Point (CONT'D)

Product Calibration - Screen 8

PT^	PROVER QTY	UNITS^	%ERROR	LINEAR^
1	000	GALLONS	000	SETUP

**PT^**

This field is used to calibrate the meter/register at up to 10 different flow rates for each product type/ calibration.

**PROVER QTY**

This field needs to contain the exact volume in the prover tank tested at actual flow rate. When an entry is made, the actual %ERROR (delivery) against the base number will be recalculated automatically.

**UNITS^**

Choose the units of measure to be displayed. The choices are **GALLONS** , **LITRES** , **CUBIC M** , **LBS** (pounds), **KGS** (kilograms), **BARRELS** , or **OTHER** . Use the  keys to scroll through the choices. Press **ENTER** to make a selection.

**%ERROR**

This field contains the %ERROR difference against the base number.

$$\%Error = \frac{(\text{Prover Quantity} - \text{Meter Quantity})}{\text{Prover Quantity}} \times 100$$

**LINEAR^**

Select **SETUP** for single-point calibration or when setting up multi-point calibration. Select **APPLIED** to activate multi-point calibration.

*See pages 23-24 for optional multi-point calibration instructions. If your LCR-II is set up for single-point calibration, this concludes the Initial Calibration and Set-up procedures. Proceed to Page 25 for BASIC OPERATION instructions.*

MULTI-POINT CALIBRATION Multi-point calibration allows a flowmeter to be used over a wide range of flow rates without experiencing a loss in measurement accuracy due to the shape of the meter curve (usually at low flow rates). After determining the inaccuracy of the meter at a variety of flow rates and inputting that information into the LCR-II multi-point calibration table, accuracy corrections are then continuously made by the LCR-II based on the measured flow rate. There are two ways to obtain the information necessary to load the multi-point calibration table:

1. Manufacturer's data supplied with the meter can be entered directly.
2. The meter can be field calibrated by proving at various flow rates.

Calibration instructions apply to both Liquid Controls positive displacement flowmeters and Sponsler turbine flowmeters.

1. MANUFACTURER'S DATA TECHNIQUE

Step 1:

Go to Screen 7 of **PRODUCT CALIBRATION** . From the manufacturer's data sheet showing the accuracy at various flow rates, enter into **PT<sup>1</sup>** the flow **RATE** and the delivery **%ERROR** corresponding to the maximum flow rate of the meter.

Product Calibration - Screen 7

PT <sup>^</sup>	RATE	UNITS <sup>^</sup>	RATE BASE <sup>^</sup>	%ERROR
1	00	GALLONS	PER MINUTE	000

Step 2:

Select up to nine additional points from the manufacturer's data sheet to characterize the remainder of the meter's accuracy curve and enter this data into **PT<sup>2</sup>** , **PT<sup>3</sup>** , etc., respectively, in descending order by rate. (While it is not necessary to enter the selected points in a specific order, it is desirable to do so because the LCR-II will re-sort the data and arrange it in descending order by rate when it is **APPLIED** .) To enter negative **%ERROR** values, first enter the number, then press the " \* " key to display the " - " sign. Errors that can occur during multi-point table data entry include:

**DUPLICATE FLOW RATE ERROR**

The same flow rate value was entered twice.

**RANGE ERROR**

A **%ERROR** outside the  $\pm 3.0\%$  limit was entered.

POINT SELECTION TIPS

- Because the LCR-II uses a piece-wise linear interpolation method of correction, it is desirable to use more data points along segments of the accuracy curve that have the greatest curvature (typically in the low flow rate region).
- Where the meter curve already approximates a straight line (in the high flow rate region), use fewer of the available points.

Step 3:

Set the **LINEAR<sup>^</sup>** field to **APPLIED** and enter it. This puts the linearizing algorithm into effect. If the error message **ADJACENT POINTS OUT OF 0.25% RANGE** is displayed, **APPLIED** will not take effect and the points will need to be reselected to ensure that no two points adjacent to each other are more than 0.25% apart in **%ERROR** .

Step 4:

Field prove the meter at the normal high flow rate of the system. Adjust the **PULSES/UNIT** in Screen 3 of the **PRODUCT CALIBRATION** menu by entering the actual **PROVER QTY** (see Page 19) to obtain accuracy within tolerance limits.

Product Calibration - Screen 3

# <sup>^</sup>	PULSE/UNIT	PROVER QTY	UNITS
1	000000	000	GALLONS

MULTI-POINT CALIBRATION (CONT'D)

Step 5:

Refill the prover at the same flow rate as Step 4 to verify that the meter remains within tolerance limits. Assuming that the data provided by the meter manufacturer is correct, and that proper technique was used for selecting and entering the multi-point table, it should be possible to fill the prover at any flow rate within the linearized range and obtain an error near zero.

**2. FIELD PROVING TECHNIQUE** When the meter's accuracy is not provided by the manufacturer, points to enter into the multi-point calibration table need to be determined by field proving at various flow rates.

Step 1:

Start a proving run of the meter while viewing **PRODUCT CALIBRATION** - Screen 3 at the normal high flow rate of the system while the **LINEAR<sup>^</sup>** field is in the **SETUP** mode. With the prover full, press **PRINT** and adjust the **PULSES/UNIT** by entering the actual **PROVER QTY** (see Page 22).

Product Calibration - Screen 3

# <sup>^</sup>	PULSE/UNIT	PROVER QTY	UNITS
1	000000	000	GALLONS

Step 2:

Go to of **PRODUCT CALIBRATION** - Screen 7. With **PT<sup>^</sup>** set to 1 and **LINEAR<sup>^</sup>** still set to **SETUP** , start a new prover run at the same flow rate as Step 1. During prover filling, note the maximum **RATE** that is displayed. When the prover is filled, press **PRINT** . Advance to **PRODUCT CALIBRATION** - Screen 8. Enter the volume delivered to the prover in **PROVER QTY** . The **%ERROR** field will then display the calculated error for that rate. This should be a very small value since Step 1 "zeroed" the meter at the same rate. Return to **PRODUCT CALIBRATION** - Screen 7 and enter the maximum flow rate observed during prover filling in **RATE** for **PT<sup>1</sup>** .

Product Calibration - Screen 7

PT <sup>^</sup>	RATE	UNITS <sup>^</sup>	RATE BASE <sup>^</sup>	%ERROR
1	00	GALLONS	PER MINUTE	000

Step 3:

With **PT<sup>^</sup>** set to the next point and **LINEAR<sup>^</sup>** still set to **SETUP** , start a prover run at a different flow rate. During prover filling, note the maximum **RATE** that is displayed. When the prover is filled, press **PRINT** . Advance to **PRODUCT CALIBRATION** - Screen 8. Enter the volume delivered to the prover in **PROVER QTY** . The **%ERROR** field will then display the calculated error for that rate. Return to **PRODUCT CALIBRATION** - Screen 7 and enter the maximum flow rate observed during prover filling in **RATE** for that **PT<sup>^</sup>** .

Step 4:

Continue proving at other flow rates using additional **PT<sup>^</sup>** numbers following the same procedure as Step 3. A minimum of three points is recommended (high, medium and low flow) to obtain a good fit to the curve. All ten points can be used to obtain optimum results. Any unused points should be left at **RATE = 0** and **%ERROR = 0** .

Step 5:

Set the **LINEAR<sup>^</sup>** field to **APPLIED** and enter it. This puts the linearizing algorithm into effect. The LCR-II will re-sort the multi-point table and display the points in descending order by **RATE** . Do not be alarmed if the data changes in a given **PT<sup>^</sup>** . If the error message **ADJACENT POINTS OUT OF 0.25% RANGE** is displayed, **APPLIED** will not take effect and more points will need to be added to ensure that no two points adjacent to each other are more than 0.25% apart in **%ERROR** .

**Preset Delivery With A Lap Pad**

If a terminal or Lap Pad is attached to the LCR-II serial port, it can be used to preset the delivery volume. The product number is selected in the first screen of the **DELIVERY & PRESET** menu and the **GROSS** or **NET PRESET** is entered in the third or fourth screen. (NOTE: The **NET PRESET** screen will only be displayed if the product being delivered is temperature compensated). If the Selector Switch has been left in the **RUN** position, a delivery will begin when the **START** key is pressed on the Lap Pad or terminal. Product will then be delivered until **NET** or **GROSS PRESET** amount is reached, at which point the delivery will be halted.

A delivery ticket will be printed:

- As soon as the preset volume is reached and if **CLEAR** or **RETAIN** has been selected
- If the **PRINT** key is pressed
- If the **NO-FLOW TIMER** times out

If both **NET** and **GROSS PRESETS** are non-zero, the delivery will end when the lower of the two is reached. If the preset type is set to **MULTIPLE**, the valve will close when the preset amount is reached. The operator can continue that delivery, making additional “drops” of the same quantity or preset amounts. The preset amount can be changed between drops. The delivery ends when the **PRINT** key is pressed or the Selector Switch is placed in the **PRINT** position. The delivery ticket will show the total **GROSS** and/or **NET** volume delivered. If the **NO-FLOW TIMER** is not set to **0**, the delivery will end if the timer times out between drops. Preset may also be controlled directly from the LCR-II. This feature is described on Page 34.

The **DELIVERY & PRESET** menu group is the only one needed to make preset deliveries.

**Delivery & Preset - Screen 1**

#^	CODE	PRODUCT NAME	PRODUCT TYPE^
1	12345	PRODUCT NAME	DISTILLATE

**#^ (PRODUCT)**

This field is used to select the product type that will be delivered. Scroll through numbers **1-4** and select the product.

**CODE**

The code associated with the product name and type is displayed here and can be changed.

**PRODUCT NAME**

The product name associated with the product code and type is displayed here and can be changed.

**PRODUCT TYPE^**

This field displays the product type previously selected in **CALIBRATION**.

PRESET DELIVERY WITH A LAP PAD (CONT'D)

Press  to advance to:

**Delivery & Preset - Screen 2**

GROSS COUNT	NET COUNT	UNITS
0.0	0.0	GALLONS

**GROSS COUNT**

This field displays a running total of the gross number of units for the current delivery. **DISPLAY ONLY.**

**NET COUNT**

This field displays a running total of the net number of units for the current delivery. **DISPLAY ONLY.**

**UNITS^**

This field displays delivery units selected during **CALIBRATION : GALLONS , LITRES , CUBIC M , LBS , KGS , BARRELS , and OTHER .**

Press  to advance to:

**Delivery & Preset - Screen 3**

NET COUNT	PRESET	REMAINING	UNITS
0.0	0.0	- - - - -	GALLONS

*This screen displays only if “Preset” is set to NET or BOTH in General Setup - Screen 3 and the current product is temperature compensated).*

**NET COUNT**

This field displays a running total of the net number of units for the current delivery. **DISPLAY ONLY.**

**PRESET**

The **NET PRESET** amount can be entered here. A preset option of **NET** or **BOTH** must have been selected in **GENERAL SETUP**.

**REMAINING**

This field displays the number of units remaining for the current delivery. **DISPLAY ONLY .**

**UNITS^**

This field displays delivery units selected during **CALIBRATION : GALLONS , LITRES , CUBIC M , LBS , KGS , BARRELS , and OTHER .**

Press  to advance to:

**Delivery & Preset - Screen 3**

GROSS COUNT	PRESET	REMAINING	UNITS
0.0	0.0	- - - - -	GALLONS

*This screen displays only if “Preset” is set to GROSS or BOTH in General Setup - Screen 3 and the current product is temperature compensated).*

**GROSS COUNT**

This field displays a running total of the gross number of units for the current delivery. **DISPLAY ONLY .**

PRESET DELIVERY WITH A LAP PAD (CONT'D)

**PRESET**

The **PRESET** amount can be entered here. A preset of **GROSS** or **BOTH** must have been selected in **GENERAL SETUP**.

**REMAINING**

This field displays the number of units remaining for the current delivery. **DISPLAY ONLY**.

**UNITS<sup>^</sup>**

This field displays delivery units selected during **CALIBRATION** : **GALLONS** , **LITRES** , **CUBIC METERS** , **LBS** , **KGS** , **BARRELS** , and **OTHER** .

Press  to advance to:

**Delivery & Preset - Screen 5**

PRICE/UNIT	TAX/UNIT	%TAX
0.000	0.000	0.000

**PRICE/UNIT**

Enter value.

**TAX/UNIT**

Enter unit tax if applicable.

**%TAX**

Enter % Tax rate if applicable.

Press  to advance to:

**Delivery & Preset - Screen 6**

SUBTOTAL	TAX	TOTAL
0.000	0.000	0.000

**SUBTOTAL**

Price per unit times quantity. **DISPLAY ONLY**.

**TAX**

Total of all taxes for delivery. **DISPLAY ONLY**.

**TOTAL**

Sum of **SUBTOTAL** plus **TAX** . **DISPLAY ONLY** .

Press  to advance to:

**Delivery & Preset - Screen 7**

AUX OUT 1 <sup>^</sup>	AUX OUT 2 <sup>^</sup>
ON DURING DELIVERY	FLOW DIRECTION

**AUX OUT 1<sup>^</sup>**

This field activates optional outputs, e. g. pump control, additive injection, alarms, etc. Choices are **OFF** , **ON** , **ON DURING DELIVERY** or **MONITOR FLOWRATE** . **MONITOR FLOWRATE** becomes active at the beginning of each delivery. If the flowrate meets or exceeds 40 units/time, the output deactivates. If the flowrate does not meet or exceed 40 units/time, the output remains active.

**AUX OUT 2<sup>^</sup>**

This field can be programmed to indicate **FLOW DIRECTION** or it can be programmed similar to the **AUX OUT 1<sup>^</sup>** functions of **OFF** , **ON** , or **ON DURING DELIVERY** .

**Diagnostics**

Most of the **DIAGNOSTICS** fields are for **DISPLAY ONLY** . They contain information that can be useful in troubleshooting.

**Diagnostics - Screen 1**

DIAGNOSTIC MESSAGES <sup>^</sup>	SUPPLY VOLTAGE
TVC ACTIVE	13.5

**DIAGNOSTIC MESSAGES<sup>^</sup>**

This field allows an operator to check pending diagnostic messages. Press **ENTER** and the cursor will drop to the second line of the screen. Press  to scroll through the list of messages. The last message is " **END OF LIST** " .

**SUPPLY VOLTAGE**

The field shows the current supply voltage. The correct operating voltage is +9 to +28 VDC. **DISPLAY ONLY**. **NOTE: Voltage above +17 VDC will not indicate correctly.**

Press  to advance to:

**Diagnostics - Screen 2**

SOFTWARE	LANGUAGE	TICKET
SR260v1.xx	SL200v1.xx	ST200v1.xx

**SOFTWARE**

The software number is shown here. This number is critical for any troubleshooting discussions with the Liquid Controls factory service personnel. **DISPLAY ONLY** .

**LANGUAGE**

The software number designating language selection (English, Spanish, etc.) is displayed here. **DISPLAY ONLY**.

**TICKET**

The software number designating the ticket format is displayed here. **DISPLAY ONLY**.

Press  to advance to:

**Diagnostics - Screen 3**

GROSS COUNT	RATE	UNITS <sup>^</sup>	RATE BASE <sup>^</sup>
0	0.0	GALLONS	PER MINUTE

**GROSS COUNT**

This field displays a running total of the gross number of units for the current delivery. **DISPLAY ONLY**.

**RATE**

This field displays the actual flow rate. **DISPLAY ONLY**.

**UNITS**

This field displays the units of measure for flow total.

**RATE BASE**

This field displays the time base for flow rate.

Press  to advance to:

**Diagnostics - Screen 4**

PULSER FAULTS
0

**PULSER FAULTS**

This field displays the number of quadrature pulser faults detected during the last delivery. **DISPLAY ONLY** .

Factory Calibration - only accessible by LC factory personnel

Factory Calibration - Screen 1

<b>R100.0</b>	<b>R128.6</b>	<b>RAW ADC</b>	<b>RTD SLP</b>	<b>RTD OFS</b>
- 105.2	2884.7	796	0.02475	2.605

- R100.0**  
Used by qualified personnel to calibrate the temperature probe.
- R128.6**  
Used by qualified personnel to calibrate the temperature probe.
- RAW ADC**  
This is the raw value being returned by the A to D converter used by the temperature probe and can be used to assist qualified personnel in troubleshooting.
- RTD SLP**  
The RTD Slope is displayed here. This value can assist qualified personnel in troubleshooting.
- RTD OFS**  
The RTD Offset is displayed here. This value can assist qualified personnel in troubleshooting.

Press  to advance to:

Factory Calibration - Screen 2


<b>SERIAL ID</b>	<b>USER KEY</b>	<b>LCR RESET</b>
7200015		NO

- SERIAL ID**  
The LCR-II printed circuit board serial number is shown here.
- USER KEY**  
This is where the owner/office password is entered or viewed. When the system is locked, the operator will be prevented from changing field entries with the exception of **GROSS** and **NET PRESET**, **PRODUCT CODE**, **PRODUCT DESCRIPTION** and **NO-FLOW TIMER**. If the password is lost or forgotten, it can be recovered by the factory in this screen.
- LCR RESET**  
This is a factory-entered value that will assist qualified personnel in clearing out memory problems, should they arise.



A complete flow chart of the Lap Pad Menu structure appears in Appendix D.

Single Point Recalibration/Proving

The addition of two control buttons on the front panel of the LCR-II allows for single point recalibration or proving without the need of a Lap Pad or other data entry device. This calibration is limited to recalculating the k-Factor or single point recalibration for up to four different product types. These two buttons can be used to select different display values as well as enter product selections and preset values. These buttons are labeled **SELECT** and **INCREASE**.

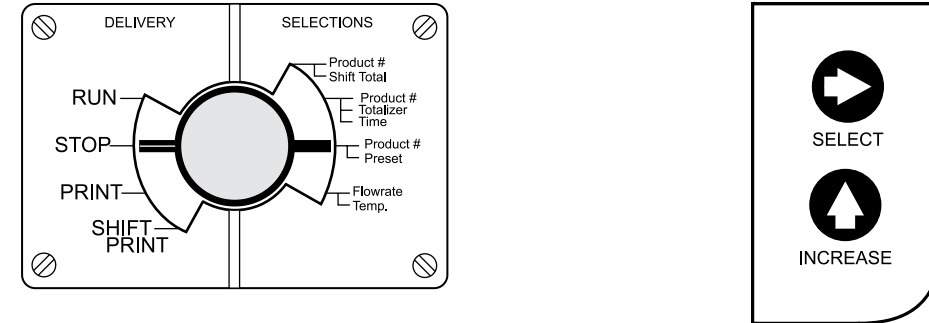

If a menu item can be edited, the **INCREASE** button will be active and can be used to increase a value or scroll through a list of options. The **SELECT** button will be used to scroll through consecutive digits across the display (from left to right).

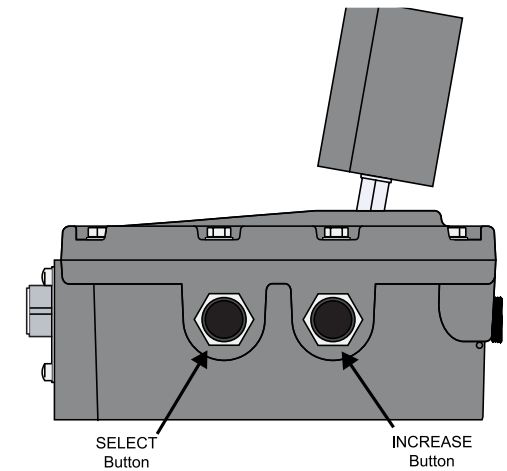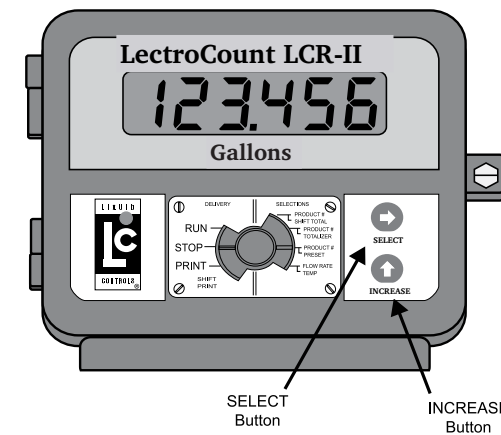


STEP 1: REMOVING THE LCR-II SWITCHPLATE FOR INITIAL SET-UP

1. Remove the lead seal and wire assembly from the LCR-II Switchplate (if previously sealed by Weights & Measures authorities).
2. Remove the four screws securing the nameplate over the red Selector Switch located on the front of the LCR-II and remove the plate.
3. Rotate the Selector Switch counter-clockwise to the 6 o'clock (CALIBRATION/PROVER) position to permit access to the LCR-II calibration menu.

STEP 2: CALIBRATION/PROVER Position

When the switch is rotated to the CALIBRATION/PROVER Position, the initial display is Prover Quantity .

 Calibration - Screen 1, Prover Quantity



Calibration instructions apply to both Liquid Controls positive displacement flowmeters and Sponsler turbine flowmeters.

The units of measure are specified on the face label of the LCR-II. If a delivery is NOT active, press **INCREASE** to start a new delivery. If a delivery is active, press **INCREASE** to stop the delivery and advance to **Calibration - Screen 5, Editable Prover Quantity** (described on Page 32).

SINGLE POINT RECALIBRATION/PROVING (CONT'd)

Press SELECT to advance to:

Calibration - Screen 1, Product Number

Prod 1

The current active **Product Number** is displayed. If a delivery is not active, the digit will be flashing, indicating that it can be changed. Press **INCREASE** to scroll through the options. These options are labeled **Prod 1** , **Prod 2** , **Prod 3** , and **Prod 4** . When the desired option has been chosen, press **SELECT** . This will advance the display to **Calibration - Screen 3, Flow Rate** .

*If the display is NOT flashing, it cannot be changed. Press INCREASE to stop delivery and advance to Calibration - Screen 5, Editable Prover Quantity.*

Calibration - Screen 3, Flow Rate

F 70.0

This displays the current flow rate through the meter. The display will update every ½ second. The unit of measure is not displayed on the LCD, but appears directly below the display on the face of the LCR-II. This screen is **DISPLAY ONLY** . If a delivery is active, press **INCREASE** to stop delivery and advance to **Calibration - Screen 5, Editable Prover Quantity** .

Press SELECT to advance to:

Calibration - Screen 4, Temperature

23.8 °F

This display shows the current temperature of fluid moving through the meter. Values will be shown in degrees Celsius or Fahrenheit. The display updates every ½ second. **DISPLAY ONLY** . If a delivery is active, press **INCREASE** to stop delivery and advance to **Calibration - Screen 5, Editable Prover Quantity** .

Press SELECT to return to Calibration - Screen 1, Prover Quantity .

Calibration - Screen 5, Editable Prover Quantity

101.323

The **Prover Quantity** is displayed with the most significant digit flashing. The most significant digit appears in the left most position of the display. If the two most significant digits are **98** or **99** , a leading **0** will be displayed. To change the value of this digit, press **INCREASE** . Each time **INCREASE** is pressed, the digit increases by a value of **1** . Once the number **9** has been reached, pressing **INCREASE** again will roll the digit back to **0** . Once the desired number is chosen, press **SELECT** to move one digit to the right.

SINGLE POINT RECALIBRATION/PROVING (CONT'd)

Repeat the process above for each digit position until the value for each has been selected. When the least significant digit is entered, the k-Factor is recalculated and the display returns to **Calibration - Screen 1** .


101.663

*If the new value entered is out of range for the LCR-II, "Error" will appear in the display. If this occurs, press SELECT to return to the Prover Quantity display. Repeat the process by beginning a new prover run.*

When this process is complete, turn the Selector Switch clockwise out of the **Calibration Position** and replace the Switch plate.


*Step-by-step instructions on conducting a recalibration/proving run appear in Appendix E.*

CALIBRATION MENU

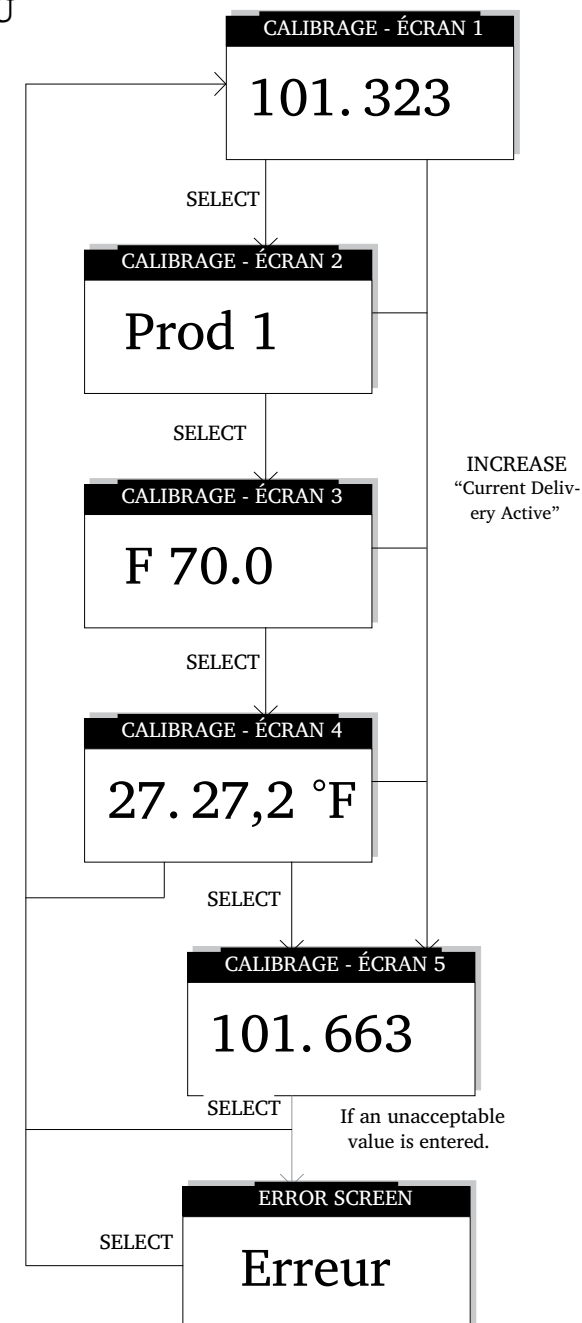

**Delivery & Selections Menu**

Once the LCR-II has been calibrated, a Lap Pad is not required for daily use of the register. There are two push buttons located on the LCR-II. These can be used to select different display values as well as enter product selections and preset values. These buttons are labeled **SELECT** and **INCREASE**. Values displayed or entered depend on the position of the red Selector Switch. The switch plate is divided into two categories, **DELIVERY** and **SELECTIONS**. When the Selector Switch is set to **RUN** on the **DELIVERY** side, it is set to **Flowrate/Temp** on the **SELECTIONS** side. By pressing the **SELECT** button, the menu on the **SELECTIONS** side is accessed. If a menu item can be edited, the **INCREASE** button will be active and can be used to increase a value or select an item from a list of options. The **SELECT** button will be used to advance to the next display or scroll through consecutive digits across the display (from left to right).

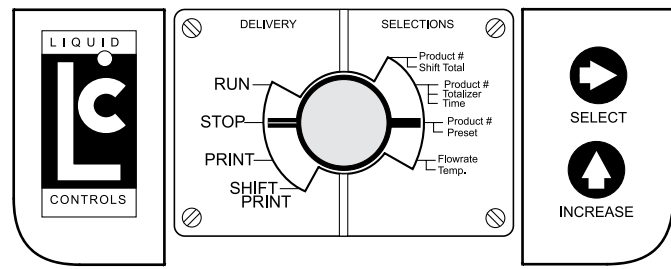


The LCR-II display characters are seven segments. An all segments display appears as follows:



**RUN Position (Flowrate/Temp.)** A typical delivery is initiated by moving the Selector Switch to the **RUN** position. The LCR-II will perform a series of diagnostics tests, reset the counter and activate the valve control output(s), opening the security valve. The control output will remain active until the Selector Switch is moved to the **STOP** or **PRINT** position, the **NO-FLOW TIMER** “times out”, or a preset delivery volume is reached. A minimum amount of product flow must be detected (1 gallon or 5 litres) before the **NO-FLOW TIMER** starts counting. **Delivery Total** is the initial display.


**Delivery Total Display**

 

This display reflects the total for the current delivery. The display updates every 15.625 ms.

Press **SELECT** once to display Flowrate .

**Flowrate Display**

 


This displays the current flow rate through the meter. The display will update every 1/2 second. The unit of measure appears directly below the display on the face of the LCR-II. After 5 seconds the display will return to **Delivery Total**. This screen is **DISPLAY ONLY**.

**Delivery & Selections Menu (cont'd)**

 **RUN Position (Flowrate/Temp.) (Cont'd)**

Press **SELECT** a second time (within 5 seconds) to display Temperature .


**Temperature Display**




This display shows the current temperature of fluid moving through the meter. Values will be shown in degrees Celsius or Fahrenheit, depending on the initial set-up selection. The display updates every 1/2 second. After 5 seconds, the display will return to **Delivery Total**. This screen is **DISPLAY ONLY**. Pressing **SELECT** a third time will return the display to **Delivery Total**. The **INCREASE** button has no function in the **RUN** position.

**STOP Position (Product #/Preset)** The **STOP** Position will cause the valve control output to close the security valve. This provides a means to pause the delivery. The valve will remain closed until the switch is returned to the **RUN** position. If the switch is returned to the **RUN** position and a ticket has not been printed, the amount for the delivery will **NOT** be reset. The counter will continue to display the accumulated total. If a **NO-FLOW TIMER** timeout is reached, the ticket will be printed, ending this delivery cycle. **Delivery Total** is the initial display. The display will update every 15.625 ms. Press **SELECT** to advance to **Product Number**.


**Product Number Display**

 


The current active **Product Number** is displayed. If a delivery is not active, the digit will be flashing, indicating that it can be changed. If the display is **NOT** flashing, it cannot be changed. Press **INCREASE** to scroll through the options. These options are **Prod 1**, **Prod 2**, **Prod 3**, or **Prod 4**, depending on the number of products programmed during calibration. When the desired option has been chosen, press **SELECT**, and the display will advance to **Preset**. **Preset Display**

 

The preset amount is displayed with the most significant digit flashing. This will be the digit to the far left of the display. To change the value of this digit, press **INCREASE**. Each time **INCREASE** is pressed, the digit increases by a value of 1. Once the number 9 has been reached, pressing **INCREASE** again will roll the digit back to 0. Once the desired number is chosen, press **SELECT** to move one digit to the right.

 

 Repeat the steps above to change the value of each digit. Press **SELECT** to advance through the digits of the display until the desired value is reached.



Once the final digit is entered, press **SELECT** to return to the **Delivery Total**. Or, if the preset number is as desired, switch to **RUN** to begin delivery.

## Delivery &amp; Selections Menu (cont'd)

PRINT Position (Product #/Totalizer) Turning the Selector Switch to the **PRINT** Position will cause the valve control outputs to turn off, closing the security valve. A ticket will be printed. Once the **PRINT** position has been entered, the delivery cannot be resumed. If tickets are required, the system will NOT allow another delivery to begin until the current ticket is printed. Once the ticket is printed, another delivery will be permitted when the Selector Switch is turned to the **RUN** position. **Delivery Total** is the initial display. The display will update every 15.625 ms. Press **SELECT** to advance the display to **Product Number** :

## Product Number Display

Prod 1

The current active **Product Number** is displayed. If a delivery is not active, the digit will be flashing, indicating that it can be changed. If the display is NOT flashing, it cannot be changed. Press **INCREASE** to scroll through the options. These options are **Prod 1** , **Prod 2** , **Prod 3** , or **Prod 4** , depending on the number of products programmed during calibration. When the desired option has been chosen, press **SELECT** to advance. **Grand Totalizer Display (1 of 2)**

H 1 2 3 4 5

This displays the five most significant digits of the **GROSS** or **NET** grand totalizer. Press **INCREASE** to return to the **Product Number** display. Press **SELECT** to advance. **Grand Totalizer Display (2 of 2)**

L6789.0

This displays the five least significant digits of the **GROSS** or **NET** grand totalizer. The grand totalizer is a combination of these two displays. The total in this example is "123,456,789.0" units. Press **INCREASE** to return to the previous totalizer display. Press **SELECT** to advance to **Time of Day . Time of Day Display**

11:44:00

If the unit is locked (set by the Lap Pad), a password needs to be entered to change the **Time of Day** . If the unit is unlocked, pressing **INCREASE** will cause the first digit on the left of the display to begin flashing on and off. Use **INCREASE** to adjust each digit of the time. The time is entered in military format, with 14:00:00 indicating 2:00 PM. When the final digit is programmed, press **SELECT** to return to **Delivery Total** . If a password is required, the next screen on will be displayed (by pressing **INCREASE** ) before the time can be changed. **Password Display**

P 0 0 0 0 0

Beginning with the digit to the immediate right of " P ", use **INCREASE** to adjust it from **0-9** . Once this digit is selected, press **SELECT** to move one digit to the right. Once the complete, correct password has been entered, pressing **SELECT** will allow for the adjustment of the **Time of Day** .

*If the unit is password protected as programmed by the Lap Pad, the password must be numeric only, and contain exactly 5 digits.*

## Delivery &amp; Selections Menu (cont'd)

Shift PRINT Position (Product #/Totalizer) (Cont') A shift ticket is printed when the Selector Switch is placed in the **SHIFT PRINT** Position for more than 2 seconds and a printer is loaded with paper and available to print the ticket. (NOTE: If the Selector Switch is turned to **SHIFT PRINT** and then out of **SHIFT PRINT** in less than 2 seconds, a Diagnostic/Calibration Information ticket is printed). **Delivery Total** is the initial display. The display will update every 15.625 ms. Press **SELECT** to advance to **Product Number**.

## Product Number Display

Prod 1

The current active **Product Number** is displayed. If a delivery is not active, the digit will be flashing, indicating that it can be changed. If the display is NOT flashing, it cannot be changed. Press **INCREASE** to scroll through the options. These options are **Prod 1** , **Prod 2** , **Prod 3** , or **Prod 4** , depending on the number of products programmed during calibration. When the desired option has been chosen, press **SELECT** to advance. **Shift Totalizer Display (1 of 2)**

H 1 2 3 4 5

This displays the five most significant digits of the **GROSS** or **NET** Shift totalizer. Press **INCREASE** to return to the Product Number display. Press **SELECT** to advance. **Shift Totalizer Display (2 of 2)**


L6789.0

This displays the five least significant digits of the **GROSS** or **NET** Shift totalizer. The shift totalizer is a combination of these two screens. The total in this example is "543,216,789.0" units. Press **INCREASE** to return to the previous totalizer display. Press **SELECT** to return to **Delivery Total**.


## Printing Diagnostic/Calibration Tickets

If a delivery was terminated due to a pulser failure, temperature probe failure or other fault, the last line on the delivery ticket will read, " \*FAULT: PRINT DIAGNOSTICS TICKET\* ". A Diagnostic Ticket is printed when the Selector Switch is turned to the **SHIFT PRINT** Position for less than two seconds. This ticket contains the same information found on the calibration ticket that prints when the Calibration Mode is exited, but does not increment the calibration number or require a Weights & Measures seal to be broken. This allows the operator to spot check the calibration of the register and/or diagnose problems with the unit. The ticket will show any problems on the last line to assist in troubleshooting the problem.


Selector Switch

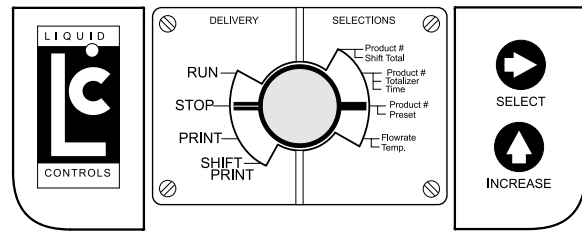


RUN Position of Selector Switch

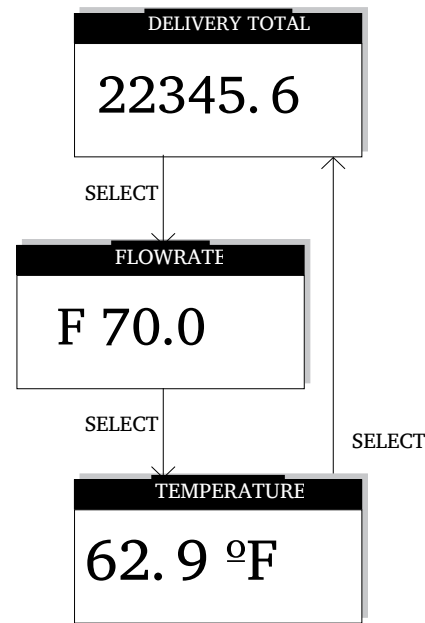


STOP Position of Selector Switch

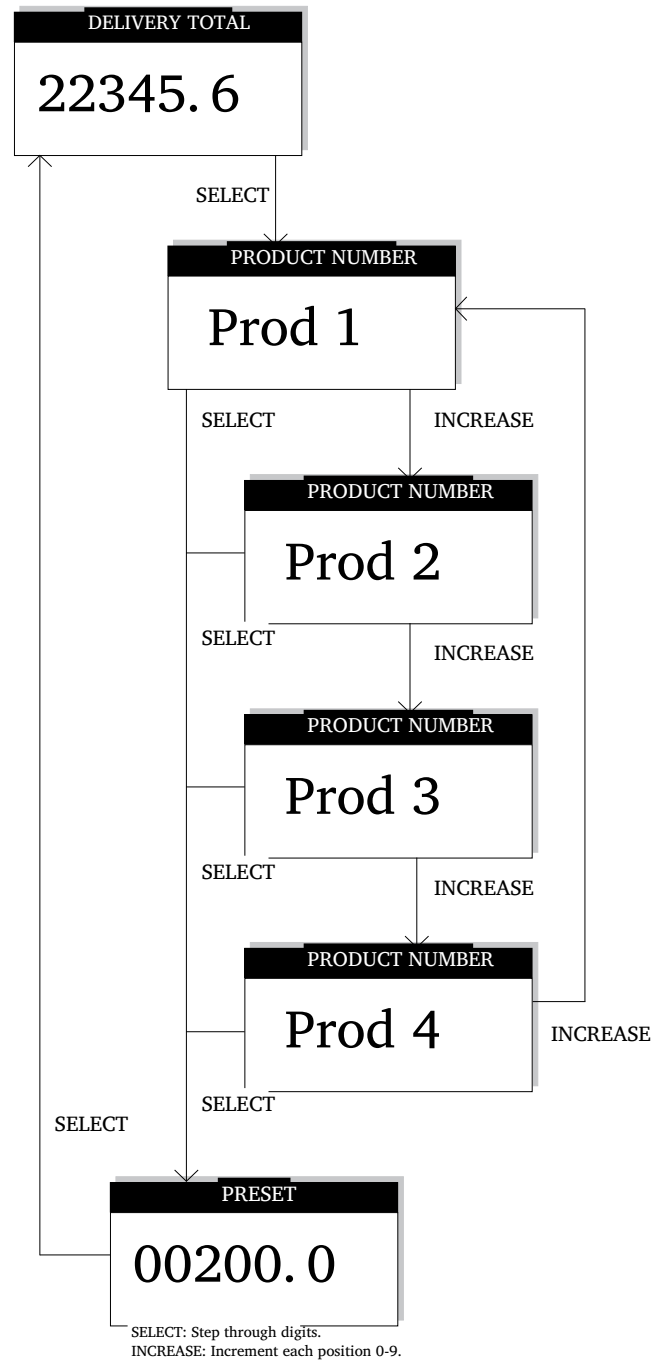

PRINT Position of Selector Switch

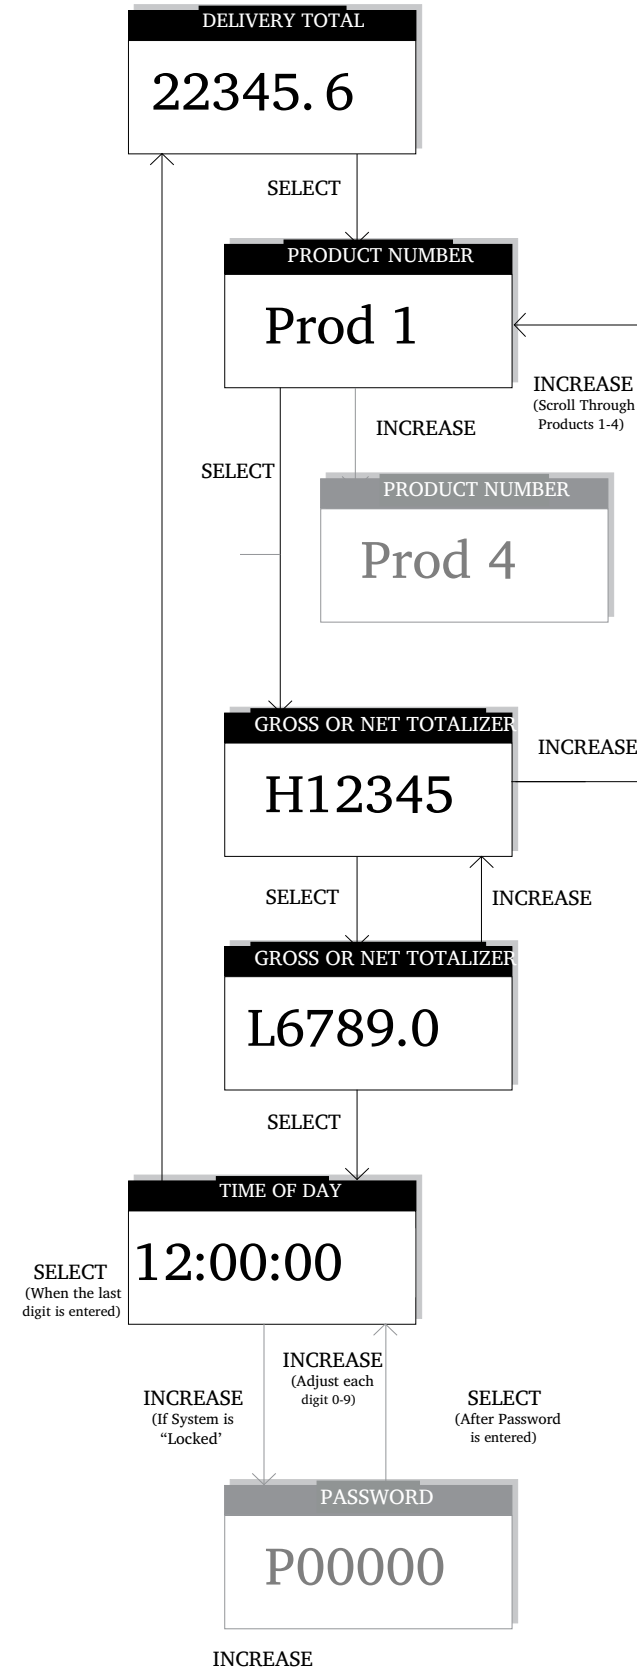

SHIFT Position of Selector Switch

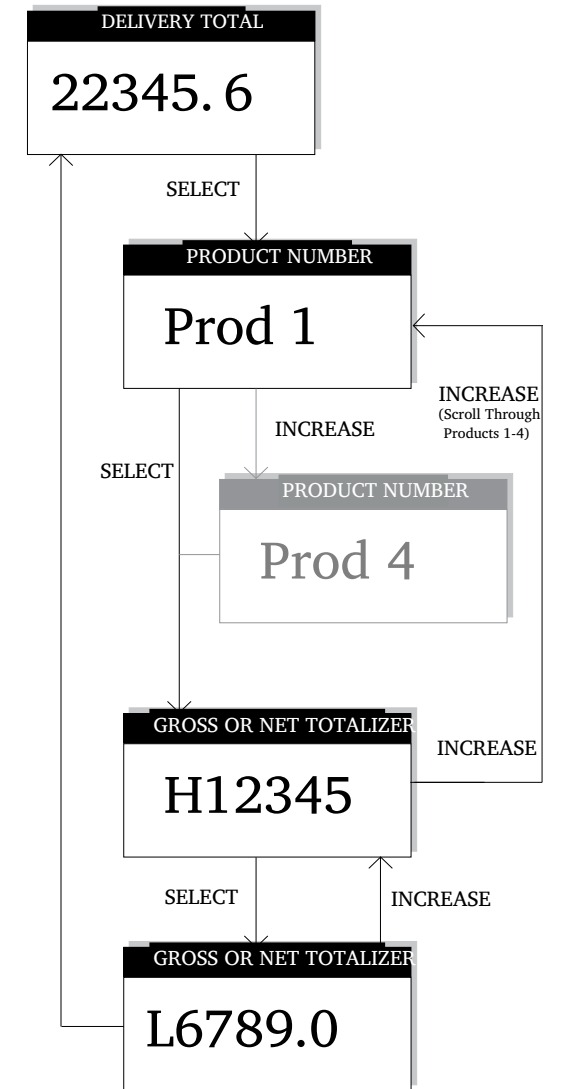

**Packing the Hose**

To comply with Weights & Measures requirements, it is necessary to start and stop each delivery with a fully packed hose. Normally, this will be the case. However, there are times where the hose is not fully packed (e. g. after a preset delivery). As such, the hose must be packed and the register zeroed prior to making the next delivery.

To pack the hose at the start of a delivery:

1. Turn the Selector Switch to RUN. DO NOT OPEN THE HOSE NOZZLE. The display will reset and the solenoid will open the valve, packing the hose.
2. When the display has stopped incrementing, the hose is packed.
3. Then the Selector Switch to STOP. This will de-energize the solenoid and close the valve.
4. Turn the Selector Switch back to RUN. The display will reset to zero, and the solenoid will energize again and open the valve.
5. Open the hose nozzle and begin the delivery.
6. The Selector Switch can only be turned to STOP one time per delivery, at the start of the delivery, to pack the hose.
7. To end a delivery with a packed hose, complete the delivery by closing the hose nozzle prior to turning the Selector Switch to STOP. If making a preset delivery where the solenoid closes the valve prior to the hose nozzle being closed, the above noted procedure to pack the hose must be conducted on the next delivery.

*This procedure will not work for an empty or dry hose. If more than 1 gallon or 5 litres of liquid is required to pack the hose, a delivery ticket must be printed.*

**LCR-II Troubleshooting Guide**

The troubleshooting section of this manual covers the common problem situations. Call your local authorized Liquid Controls service provider or the Liquid Controls electronics service department if the troubleshooting section does not address the situation.

When troubleshooting the LCR-II follow these guidelines:

- Check for proper operating voltages before changing the circuit board. If the circuit board needs to be changed, be sure to remove all power to the LCR-II.
- The error message or a diagnostic ticket will contain an error message that can be useful in troubleshooting. Examine the diagnostic screens on the LCR-II or the diagnostic ticket to make sure all set-up fields are accurate, e.g. pulses per unit volume, temperature coefficient and base temperature. Print a diagnostic ticket by moving the red selector switch to “SHIFT PRINT” for less than two seconds.
- Never remove a terminal block or jumper with the power on.
- Never install a terminal block or jumper with the power on.
- Never force a terminal block into its location.
- Never exchange or reposition terminal blocks on the circuit board.
- In case of a major problem such as a burned or water-damaged circuit board, evaluate possible causes before replacing it and turning the power back on.
- Isolate the problem before changing the circuit board.
- Return faulty circuit boards with the proper forms, concisely completed to a LC service provider.

PROBLEM	PROBABLE CAUSE	SOLUTION
<b>Unit will not power up or no display.</b>	1. Inadequate supply voltage. 9 to 28 VDC is required for operation.	1. With the key in the accessory position, check the battery voltage to the circuit board at J6. Use terminal #11 as positive and terminal #12 as DC ground. While the LCR- II will power-up at 9 VDC, it is recommended that the input be at least 12.6 VDC. Voltage less than 12 VDC may cause failures in equipment connected to the LCR- II, such as valves or external displays 2. Check the in-line fuse (PN 71895) for continuity. It is located on the accessory power line. Replace if necessary.
<b>Unit blows in-line fuse.</b>	1. 12 VDC Battery line is shorted to ground.	1. For safety reasons, remove the in-line fuse from the accessory power cable. 2. Remove the J6 terminal block. Inspect for stray wire stands and visible shorts. 3. Using a multimeter, take a reading across terminal 11 and terminal 12 on the J6 terminal block. The terminals should be open. If the multimeter shows a short, replace the power cable (PN 81512 ( <i>UL listed units</i> ) or 81712 ( <i>IECEX certified units</i> ) ). 4. Inspect the length of the power cable for damaged insulation that could cause a short between the wire and the chassis (or other nearby metal). If the cable is damaged, replace it. 5. Replace the in-line fuse and re-install the J6 connector. 6. If the in-line fuse blows again, replace the LCR-II circuit board.

PROBLEM	PROBABLE CAUSE	SOLUTION
“Power Failure” appears on diagnostic ticket, Lap Pad or LCR-II shuts down unexpectedly.	<ol style="list-style-type: none"> <li>1. Power to LCR-II interrupted during fueling.</li> <li>2. Static discharge.</li> </ol>	<ol style="list-style-type: none"> <li>1. Ensure the LCR-II was not manually turned off during an active fueling.</li> <li>2. Check accessory power cable for damage. Ensure that the power, common and ground wires (11, 12 and 13) on power connector J6 are secure.</li> <li>3. Turn on all truck accessories (head lamps, 2-way radio, heater, etc.). Engage the hose reel and monitor the DV voltage at J6 using terminal 11 as positive and terminal 12 as ground. If the voltage drops below 10 VDC, the truck electrical system may not support the LCR-II.</li> <li>4. Verify proper grounding of the LCR-II. Refer to the installation manual for proper grounding procedures.</li> </ol>
Epson printer release light flashes.	<ol style="list-style-type: none"> <li>1. Low voltage to the Epson printer.</li> </ol>	<ol style="list-style-type: none"> <li>1. Check the battery voltage for a minimum of 12.6 VDC.</li> <li>2. Under extreme cold conditions, the printer may not operate. Warm up the cab of the vehicle.</li> <li>3. If the release light continues to flash, replace the Epson 295 Printer (PN E49001) with a functional printer.</li> <li>4. If the light still flashes, replace the 825001 printer power cable</li> </ol>
No power indicator lights to the Epson printer.	<ol style="list-style-type: none"> <li>1. No power to the Epson printer.</li> </ol>	<ol style="list-style-type: none"> <li>1. Verify that the power switch is in the ON position. This switch is located on the left-hand side of the Epson 295 printer.</li> <li>2. Check the printer power cable (PN 825001) to ensure that it is seated in the port properly. If the problem persists, replace the power cable.</li> <li>3. If the problem continues replace the Epson printer (PN E49001) with a functional printer.</li> </ol>
“Temperature Error” appears on diagnostic ticket or Lap Pad.	<ol style="list-style-type: none"> <li>1. Open or shorted circuit between the RTD probe and LCR-II.</li> </ol>	<ol style="list-style-type: none"> <li>1. Remove terminal block J14 from the circuit board. On the terminal block, measure and record the resistance between the following pins:   <b>TERMINAL # Continuity J14</b>                      #20 to #22 100 Ω ± 20 Ω J14                      #20 to #23 100 Ω ± 20 Ω J14                      #21 to #22 100 Ω ± 20 Ω J14                      #21 to #23 100 Ω ± 20 Ω                 </li> <li>2. If the readings are not within the above tolerances, replace the RTD probe (PN 71130).</li> </ol>
Product flow does not register on LCR-II display.	<ol style="list-style-type: none"> <li>1. Pulser shaft is not turning with product flow.</li> <li>2. Pulser failure.</li> </ol>	<ol style="list-style-type: none"> <li>1. Manually spin the pulser shaft and monitor the LCR-II display.</li> <li>2. If the LCR-II display counter increments, this may indicate a mechanical problem. Contact your local Liquid Controls distributor or the Liquid Controls service department for assistance.</li> <li>3. If the LCR-II display counter does not increment, see “Pulser Failure” in the following troubleshooting section.</li> </ol>

PROBLEM	PROBABLE CAUSE	SOLUTION
“Pulser Failure” appears on the diagnostic ticket or Lap Pad. <i>These instructions apply to LCR-II’s with internal pulsers only. POD pulser may have different readings.</i>	<ol style="list-style-type: none"> <li>1. Missing pulse counts.</li> <li>2. Excessive reversals.</li> </ol> <p><i>Pulser faults generally occur in a high vibration environment. Liquid Controls is not responsible for pulser failures caused by excessive system vibrations.</i></p>	<ol style="list-style-type: none"> <li>1. Using a multimeter, measure the following DC voltages on terminal block J8, while J8 is connected to the circuit board. Use terminal 37 as ground reference. <b>TERMINAL # VOLTAGE J8 #32 +5 VDC J8 #33 0 or +5VDC J8 #34 0 or +5VDC</b></li> <li>2. If the terminals show the preceding voltages, check for loose pulser wiring connections. If no loose connections are found, replace the encoder harness. <b>TERMINAL # VOLTAGE J8 #32 0 VDC J8 #33 +1-3VDC J8 #34 +1-3VDC</b></li> <li>4. If the LCR-II still shows a pulser failure, insert a ticket into the Epson printer and begin a fueling. With product flowing through the flowmeter, measure the following DC voltages on the terminal block.   <b>TERMINAL # VOLTAGE</b>                      J8 #32 0 VDC                      J8 #33 +1-3VDC                      J8 #34 +1-3VDC                 </li> <li>5. If the voltages shown below are observed, ensure that the pulser shaft is rotating. Look for any mechanical problems that may cause either the flowmeter or the pulser shaft to lock up. If the Lap Pad continues to indicate a pulser failure, replace the pulser (PN 82597) <b>TERMINAL # VOLTAGE J8 #32 +5 VDC J8 #33 0 or +5VDC J8 #34 0 or +5VDC</b></li> </ol>

PROBLEM	PROBABLE CAUSE	SOLUTION
<b>Valve will not open.</b>	<ol style="list-style-type: none"> <li>Solenoids are inactive or inoperative.</li> <li>Foreign debris in system.</li> </ol>	<ol style="list-style-type: none"> <li>Insert a fueling ticket into the Epson printer and start a fueling.</li> <li>Move the selector switch from RUN to STOP and back to RUN. Listen for an audible clicking sound from the solenoids.</li> <li>If there is an audible click from the solenoid (but still no flow), this may be an indication of a mechanical problem with the main valve or its associated components. Contact your local Liquid Controls distributor or the Liquid Controls service department for assistance.</li> <li>If there is no audible click from the solenoid, check the voltage to pin #s 14, 15, 17 and 18 of terminal block J13. While still in RUN mode, use a multimeter to measure the following DC voltages on the circuit board. Use J8 pin #38 as a ground.   <b>TERMINAL # VOLTAGE J13</b>                      #14 12.0VDC ± 1.5VDC J13                      #15 1.0VDC ± 0.5VDC J13                      #17 12.0VDC ± 1.5VDC J13                      #18 1.0VDC ± 0.5VDC</li> <li>If the above voltages are correct, this may be an indication of a problem with the valve or its associated components. Contact your local Liquid Controls distributor or the Liquid Controls service department for assistance.</li> <li>If the above voltage are incorrect, replace the solenoids (PN varies depending on system). If the valve problem persists, replace the LCR-II circuit board (PN 84040).</li> </ol>

The table below shows the supported methods of calculating the **Volume Correction Factor (VCF)**. The method is independently selectable for each product in **Product Calibration**. The table below shows the valid temperature ranges for each table. The hold temperature, **T hold**, is the temperature that VCF is held at for temperatures < **T hold** and > **T min**. This is done to allow compensation in very cold environments where further extrapolation of equations is not allowed.

Compensation Types and Parameters

Product	VCF Type	Parameter Coefficient	Range	°Celsius/ °Fahrenheit	Tbase	Tmin	Thold	Tmax
<b>General</b>	Linear	Linear	0 to 0.003	°C	15	- 90	N/A	+ 10C
<b>General</b>	Linear	Linear	0 to 0.005	°F	60	- 130	N/A	+ 212
<b>LPG</b> <i>USA</i>	API Table 24	Specific Gravity	0. 5 to 0.550	°F	60	- 50	- 50	+ 14C
<b>LPG</b> <i>Europe &amp; Canada</i>	API Table 54	Density kg/L	0. 5 to 0.600	°C	15	- 46	- 46	+ 6C
<b>Refined Petro- leum Products</b> <i>Europe &amp; Canada</i>	API Table 54B	Density kg/m3	653. 0 to 1075.0	°C	15	- 50	- 40	+ 9E
<b>Refined Petro- leum Products</b> <i>USA</i>	API Table 6B	API Gravity	0 to 85	°F	60	- 50	- 40	+ 20C
<b>General</b>	API Table 54C	Coefficient	0. 000486 to 0. 001674	°C	15	- 50	- 40	+ 9E
<b>Lube Oil</b> <i>Europe &amp; Canada</i>	API Table 54D	Density kg/m3	800 to 1164	°C	15	- 50	- 40	+ 9E
<b>Ammonia</b> <i>Canada</i>	NH3	N/A	N/A	°C	15	- 30	- 30	+ 4C

If the LCR-II is operated using a VT 100 compatible terminal (instead of the LC Lap Pad), refer to the following chart for the terminal keystrokes that correspond to the Lap Pad keystrokes. VT 100 communication parameters that must be observed include:

- Baud Rate (9600)
- Data Bits (8)
- Parity (None)
- Stop Bits (1)
- Flow Control (None).

Operation	Lap Pad Keystroke	PC Terminal Emulation
Return to Top Level Menu	M1	
Move to Next Menu Item	i	
Move to Previous Menu Item	h	
Select Item	ENTER	ENTER
Submit Data and Return	ENTER (after data entry)	ENTER (after data entry)
Move to Next Field	i	
Move to Previous Field	h	
Clear Field/Start Data Entry	Clear	Backspace
Start	Start	
Stop	Stop	
Print	Print	
Move to Next Screen	M#	

**Error Messages**

The LCR-II was designed to perform diagnostic analysis of problems as they occur. If an error should occur, one of the following messages may be displayed on the Lap Pad or printed on a Diagnostic Ticket (see troubleshooting section). The list below explains the error message and any possible corrective action. The LCR-II was designed to handle most foreseeable problems on its own. Consequently, if the suggestions listed are not successful, the assistance of a trained authorized Liquid Controls service provider is recommended.

**RUN TIME MESSAGE LIST** *These messages may be displayed on the Lap Pad if an error occurs while the system is running.*

**FLASH CRC FAILURE**

The CRC stored with an LCR-II data block indicates the data or CRC has been corrupted. A “ **REBUILD** ” operation could possibly fix the problem. If not, try “ **CLEAR ALL** ”. If that does not work, hardware may be the problem and the unit should be returned to Liquid Controls for more analysis.

*Before performing a “CLEAR ALL” operation, print a calibration ticket.*

**FLASH WRITE FAILURE**

A failure was detected while a data block was being written to the flash memory. See the resolution suggestion under **FLASH CTC FAILURE** .

**FLASH NOT INITIALIZED**

This error indicates that a “ **CLEAR ALL** ” or “ **REBUILD** ” has been attempted without the Selector Switch in **CALIBRATION** position.

**RANGE ERROR**

The data entered is not within the legal range limits for the field being changed.

**DUPLICATE FLOW RATE ERROR**

This message only appears when setting up multi-point calibration. When calibrating a multi-point meter, the linearization points must all have unique flow rates. This message is displayed when a flow rate being entered is already used on another point.

**ADJACENT POINTS OUT OF 0.25% RANGE**

This message only appears when setting up multi-point calibration. When calibrating a multi-point meter, adjacent linearization points must be within a 0.25% correction of each other. To avoid this error, select an additional flow rate and correction factor between the two points. More than one additional point may be required. Adjacent flow rates entered for linearization cannot have their percent error fields further than 0.25% apart.

**COUNTER TEST IN PROGRESS...**

A delivery has been started and the counter test is in progress. When the test is complete, flow will start. This is not an error condition.

**START ENABLED - SWITCH TO RUN TO BEGIN DELIVERY**

The **START** button on the Lap Pad was pressed but the Selector Switch was not in the **RUN** position. When the switch is put in the **RUN** position, the delivery will begin.

**DIAGNOSTIC MESSAGE LIST** *If an error occurs during a delivery, the message “\* **FAULT: PRINT DIAGNOSTICS TICKET\*** ” will appear on the delivery ticket. The appropriate message below is then printed on the diagnostic ticket if an error has occurred. A diagnostic ticket is printed by loading a ticket into the printer and then moving the Selector Switch to the **SHIFT PRINT** position for less than two seconds.*

**PREVIOUS DELIVERY TICKET PENDING**

A new delivery was attempted but the previous delivery ticket was not printed in its entirety. The **PRINT** button should be pressed on the Lap Pad, or the Selector Switch should be placed in the **PRINT** position. Once the previous delivery ticket is printed, a new delivery can begin.

**ROM CHECKSUM ERROR**

This message indicates that the program memory space of the LCR-II has been corrupted. If this error occurs, the unit must be re-flashed with the control software before any deliveries can be made.

## DIAGNOSTIC MESSAGE LIST (CONT'D)

**TEMPERATURE ERROR**

This message appears if the temperature circuit returns an error or if the temperature calibration data is in error. Check the temperature probe and its connections. A broken temperature probe wire is the most common cause of this error. See the troubleshooting section.

**VCF DOMAIN ERROR**

This message indicates that the calculated temperature falls outside the allowable range for the current compensation parameter. Verify that the correct product compensation type (see **PRODUCT SET-UP**) is being used.

**PULSER FAILURE**

This message appears if the number of pulser faults exceeds the allowable amount. The number of allowable faults is determined by an equation and cannot be changed. A maximum of 5 times the number of pulses required for the least significant displayed digit OR 0.1% of the pulses generated for the current delivery are allowed. Pulser faults generally occur in high vibration environments or when the flow rate is highly throttled. Liquid Controls is not responsible for pulser failures caused by excessive system vibrations. See the troubleshooting section.

**METER CALIB ERROR**

A product that has not been calibrated has been selected for delivery. Select a valid calibrated product.

**PRESET STOP**

This message appears if the delivery has stopped due to a **GROSS** or **NET PRESET** amount being reached. This is not an error condition.

**NO FLOW STOP ERROR**

This message appears if the **NO-FLOW TIMER** has expired, causing the current delivery to be terminated. This is not an error condition. Entering " 0 " for this parameter in the **GENERAL SET-UP** menu can turn off the **NO-FLOW TIMER**, however, this results in a system that is less secure.

**STOP REQUESTED**

This message appears when a **STOP** command has been sent to the LCR-II system to pause the delivery. **STOP** can be activated from the Selector Switch, Lap Pad, or a Terminal. This is not an error condition.

**DELIVERY END REQST**

This message appears when a **PRINT** command has been sent to the LCR-II system to terminate a delivery. **PRINT** can be activated from the Selector Switch, Lap Pad, or a Terminal. This is not an error condition.

**POWER FAIL ERROR**

This message appears when a delivery was ended due to a loss of input voltage. Check the power supply and wiring to the LCR-II. Check the in-line fuse. See the troubleshooting section.

**PRESET ERROR**

This message appears when a flash memory error is detected during a delivery when accessing any of the fields used by **PRESETS**. This includes **GROSS PRESET** amount, **NET PRESET** amount, **S1 CLOSE VALUE**, remaining **PRESET** amounts, the **PRESET** type, or **PRESET ALLOWED** fields.

**TERMINAL NOT CONNECTED**

This message appears when a Terminal or Lap Pad is disconnected during a delivery. Check the cables and connectors for broken wires and loose connections.

**CHECK PRINTER AND CABLE**

This message appears when the printer is not responding. This can be the result of a faulty data cable, power cable, or LCR-II circuit board failure. The most common cause is that a ticket is not in place in the printer. The Epson Slip printers have a built in photo eye to detect if a ticket is in position.

**DATA ACCESS ERROR**

This message appears when a flash memory error occurs.

## DIAGNOSTIC MESSAGE LIST (CONT'D)

**DELIVERY TICKET PENDING**

This message appears when a delivery has been terminated but a delivery ticket has not been completely printed. When this occurs, it is assumed that the delivery is still active. No fields can be changed until the delivery ticket has been entirely printed. Load a ticket into the printer and print the delivery ticket by moving the Selector Switch to **PRINT**, or by pressing **PRINT** on the Lap Pad.

**SHIFT TICKET PENDING**

This message appears when a shift ticket is being printed. This is not an error condition.

**FLOW ACTIVE**

This message appears when a delivery has been initiated. This is not an error condition.

**DELIVERY ACTIVE**

This message appears when a delivery has been initiated. This is not an error condition.

**GROSS PRESET ACTIVE**

This message appears when a **GROSS PRESET** is active. The **PRESET** type must be set to **GROSS** or **BOTH** and a desired amount entered in the **GROSS PRESET** field. This is not an error condition.

**NET PRESET ACTIVE**

This message appears when a **NET PRESET** is active. The **PRESET** type must be set to **NET** or **BOTH** and a desired amount entered in the **NET PRESET** field. This is not an error condition.

**GROSS PRESET STOP**

This message appears when the **GROSS PRESET** amount has been reached. This is not an error condition.

**NET PRESET STOP**

This message appears when the **NET PRESET** amount has been reached. This is not an error condition.

**TVC ACTIVE**

This message appears when **TEMPERATURE COMPENSATION** is active on the current product. This is not an error condition.

**S1 CLOSE REACHED**

This message appears when the **S1 CLOSE** value has been reached during a **PRESET** delivery. This is not an error condition.


**INIT WARNING**

This message appears when **NO-FLOW TIMER** or the ticket required fields return an error. If this happens, the delivery can continue but the default values of **180** and **YES** are used.


**END OF ERROR LIST**

This message appears when the end of the error list has been reached. This is not an error condition.


DÉMARRAGE GÉNÉRAL

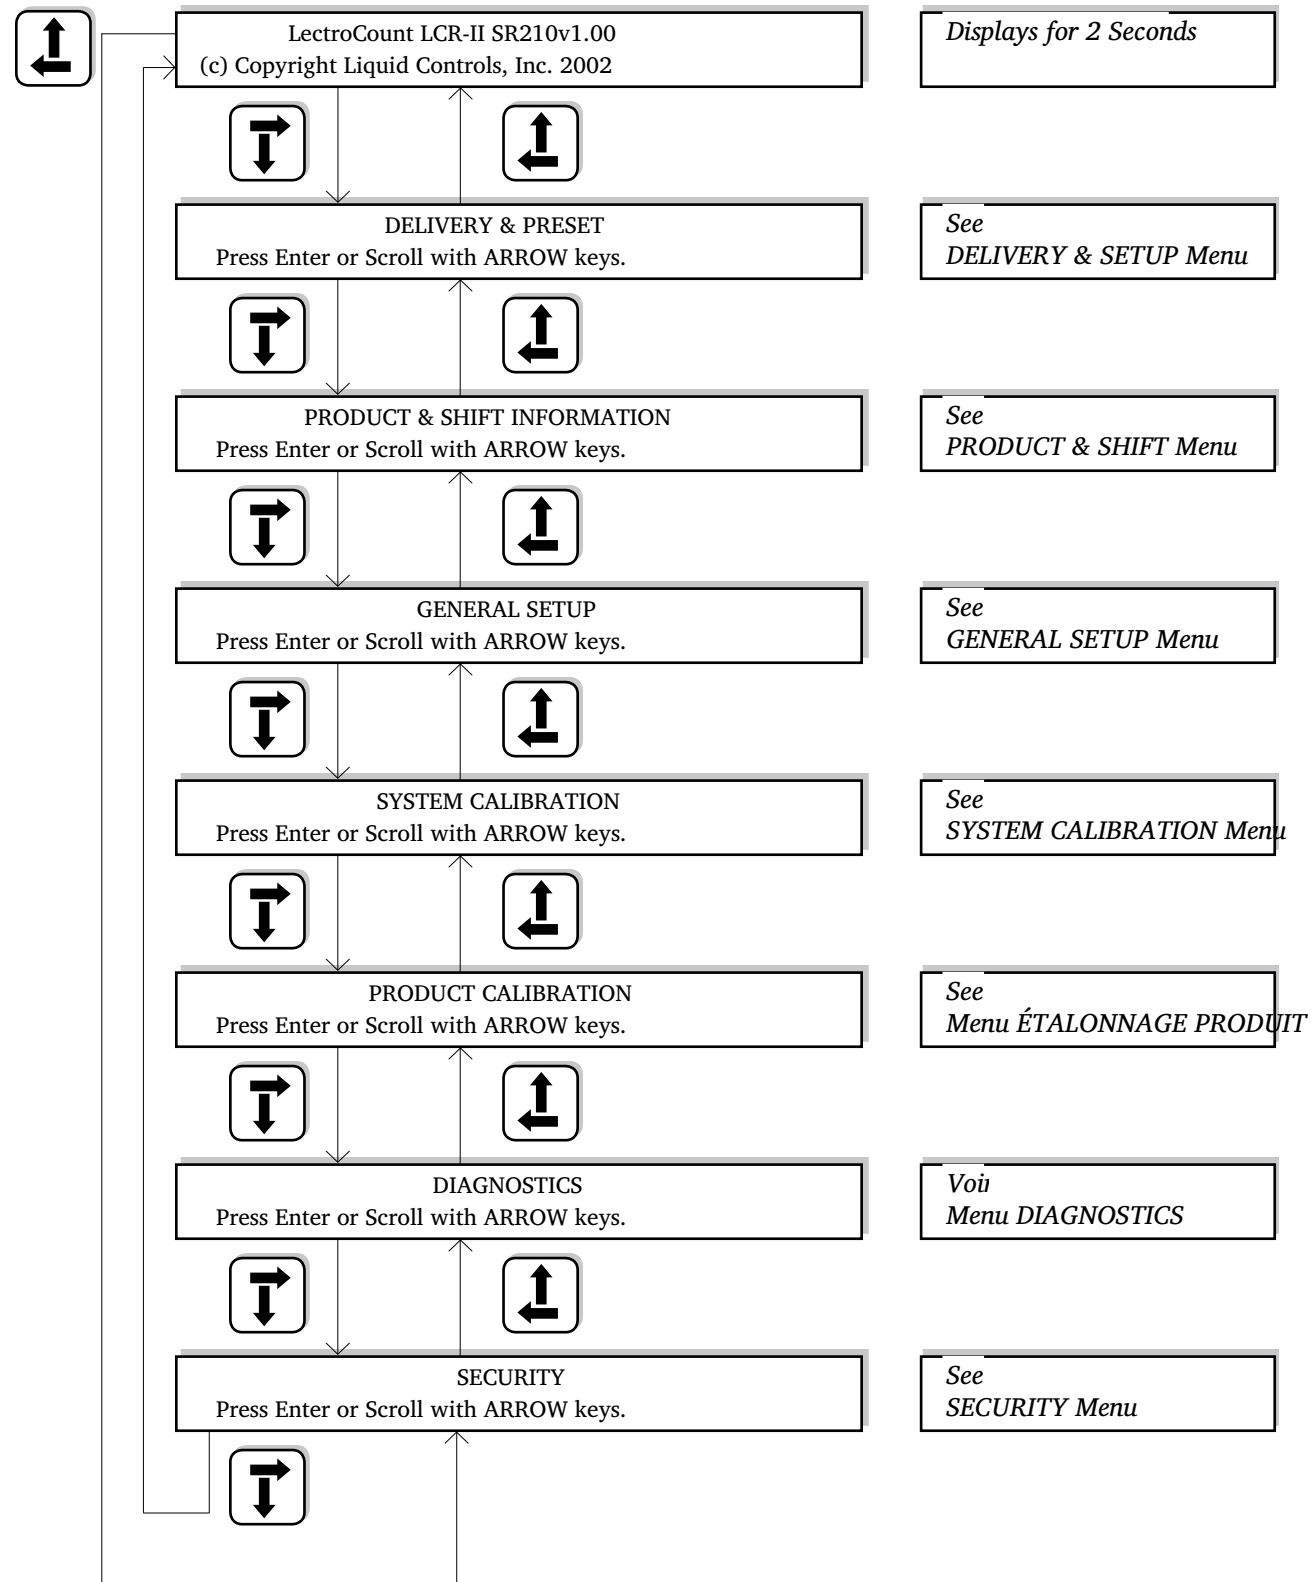


MENU LIVRAISON & PRÉRÉGLAGE

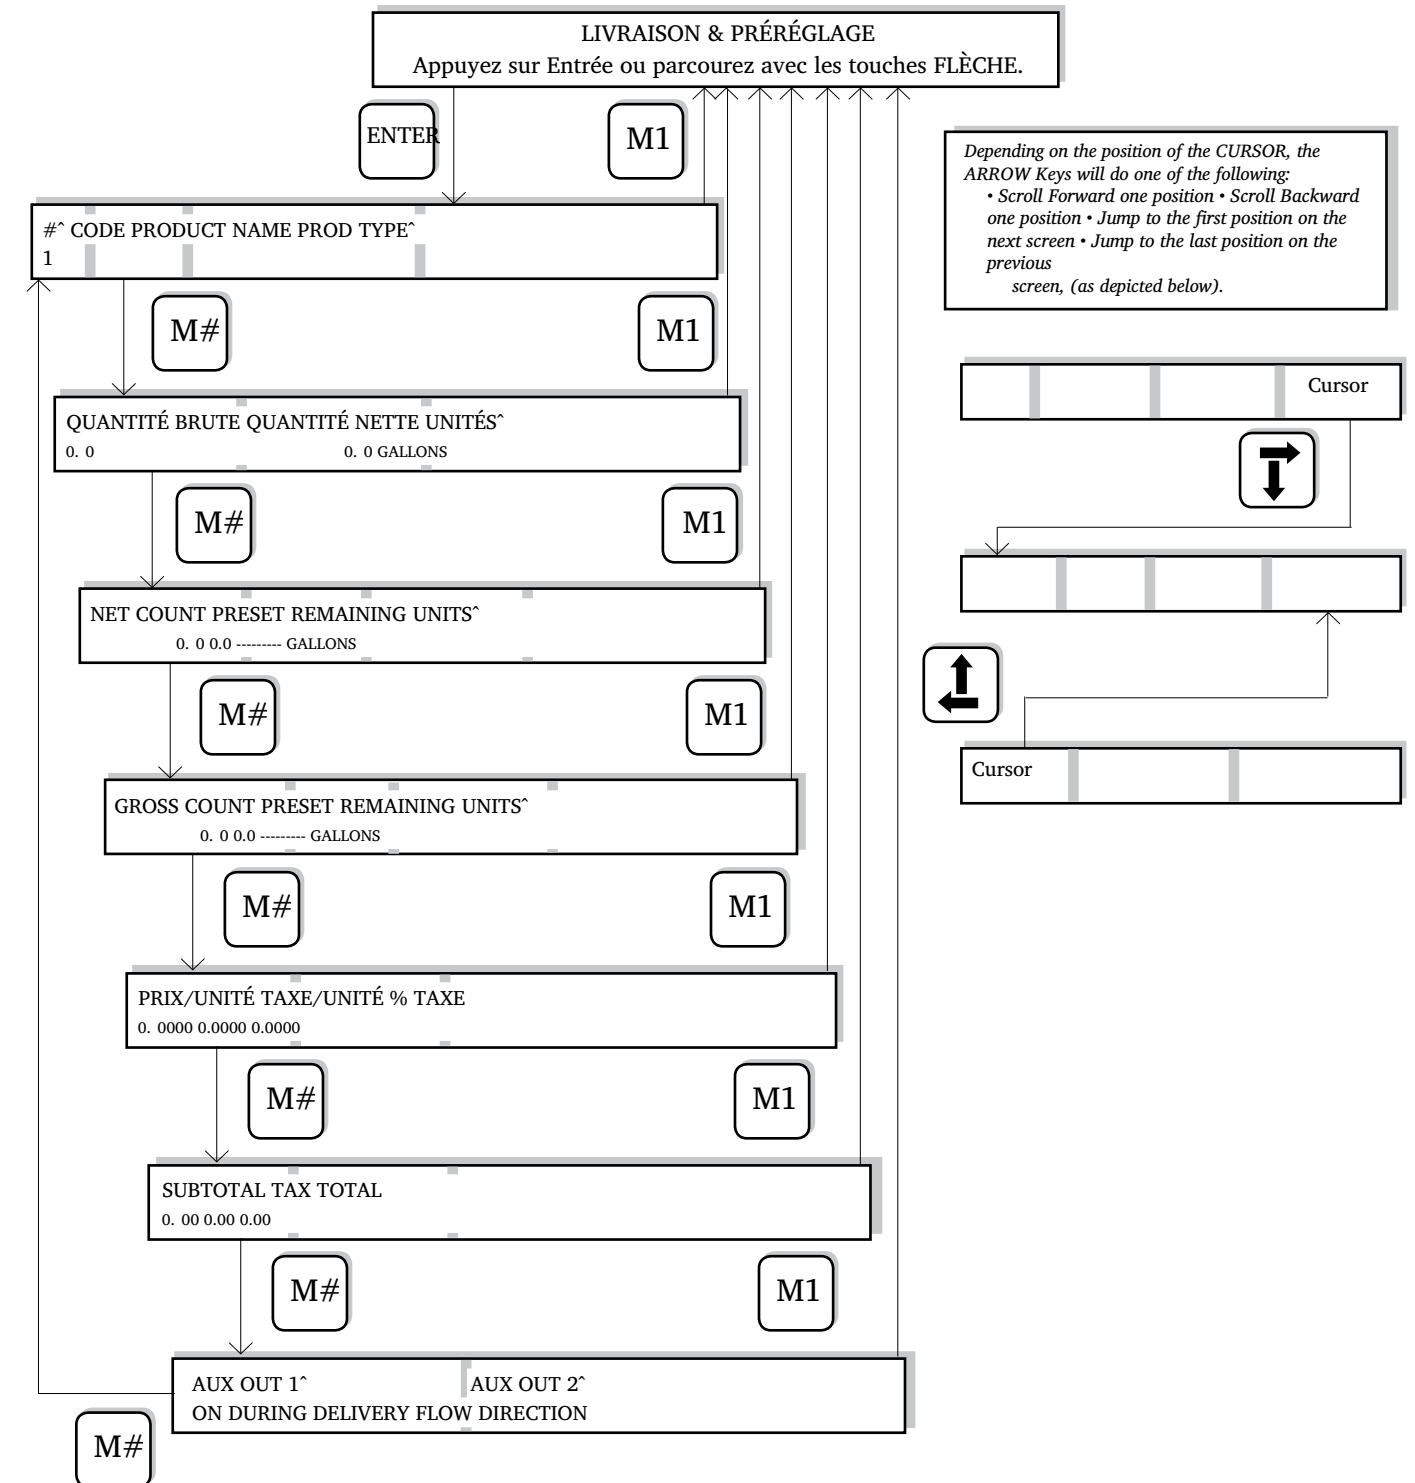


**PRODUCT & SHIFT**

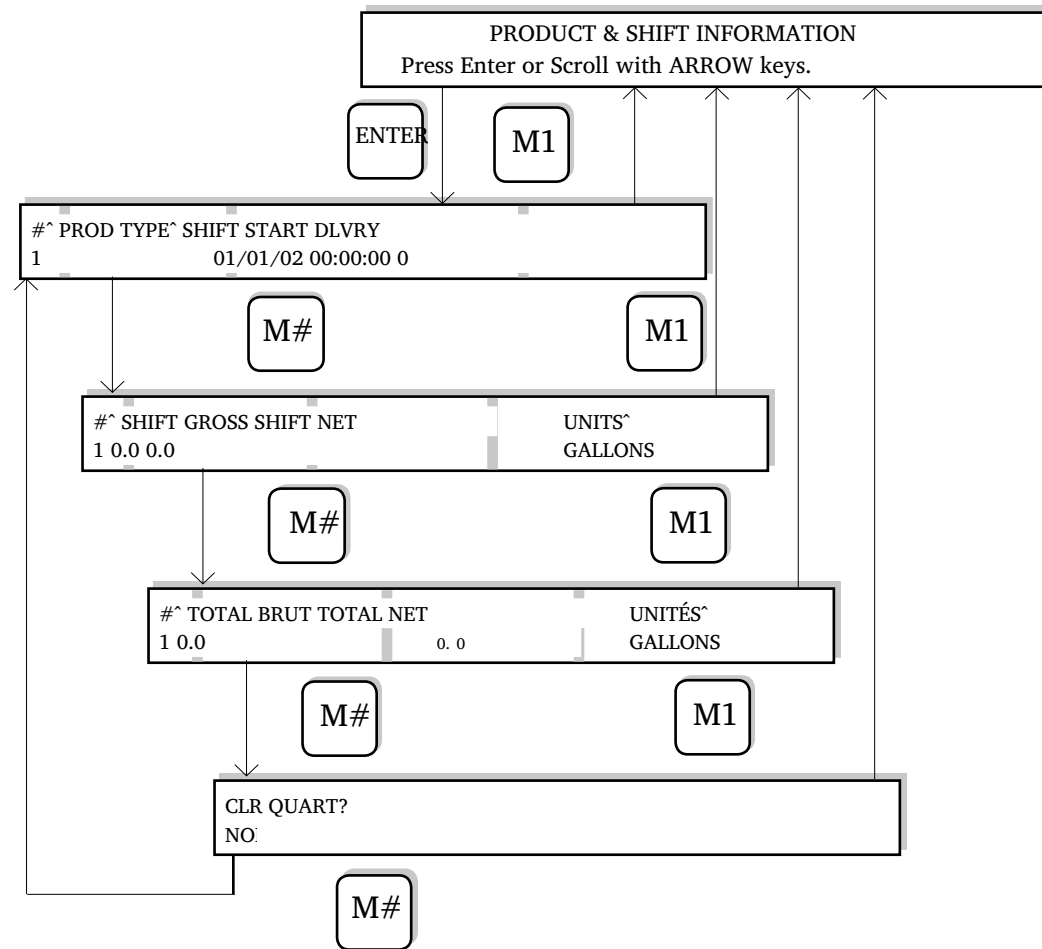


**GENERAL SETUP**

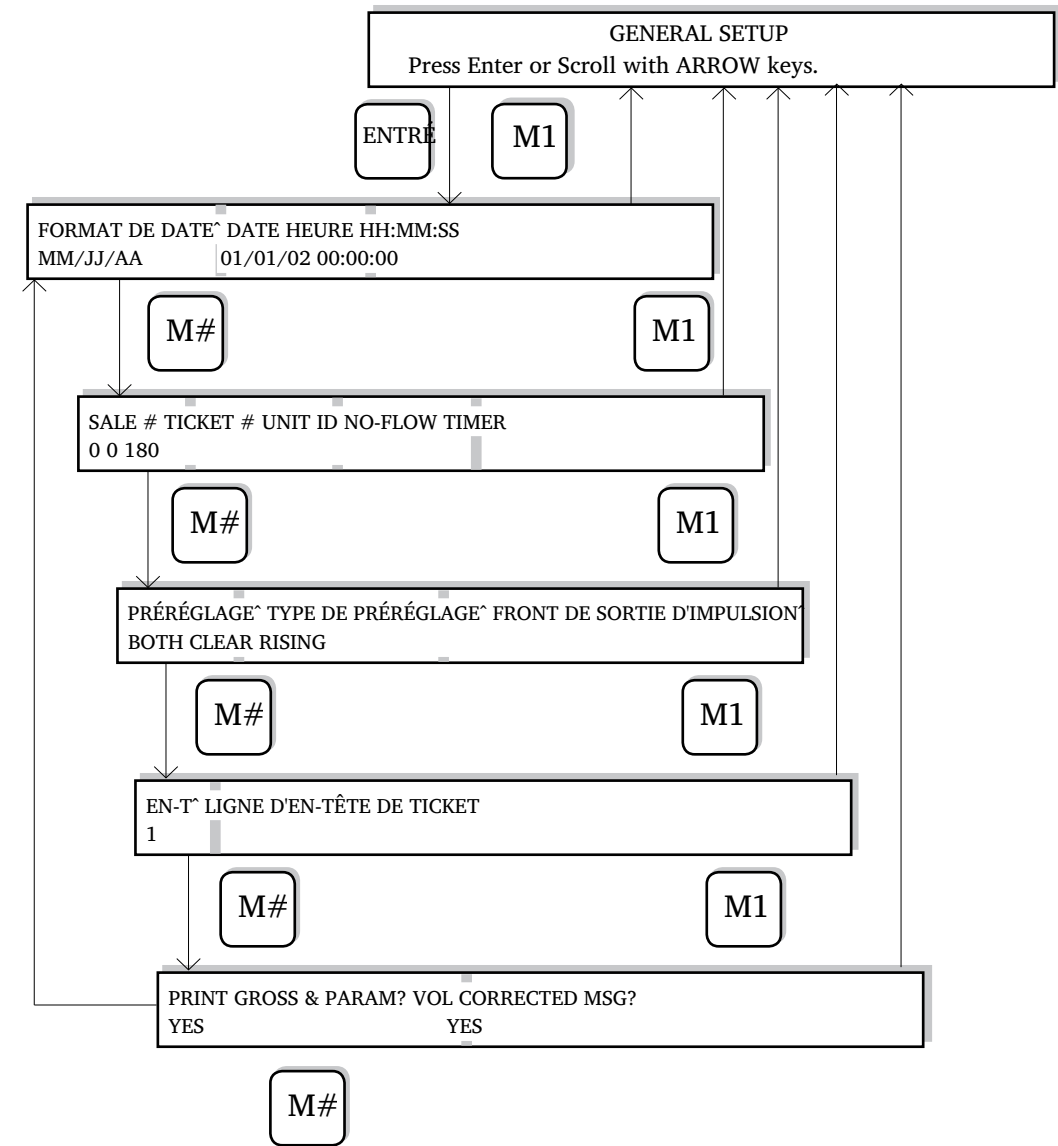


SYSTEM CALIBRATION

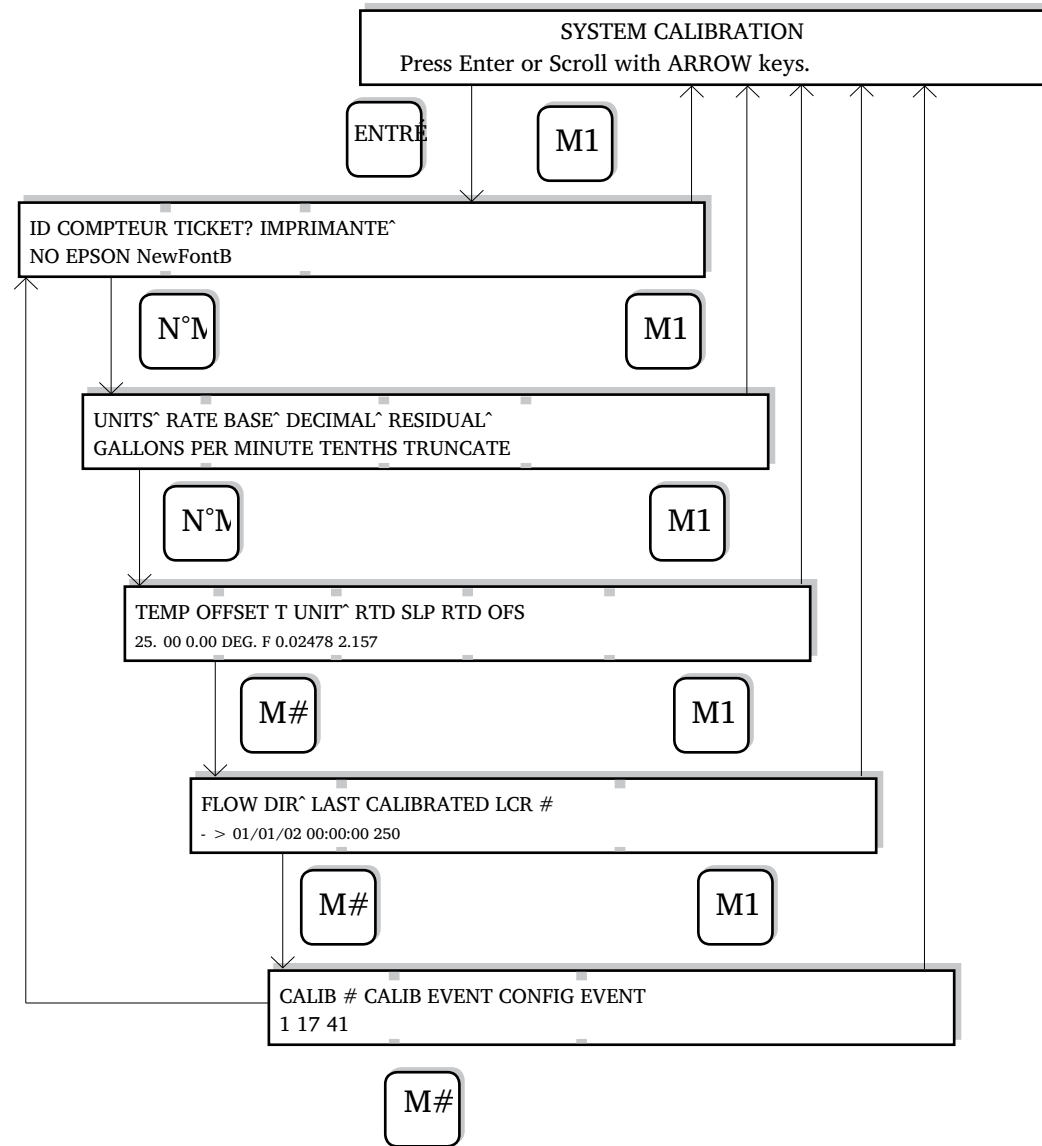


PRODUCT CALIBRATION

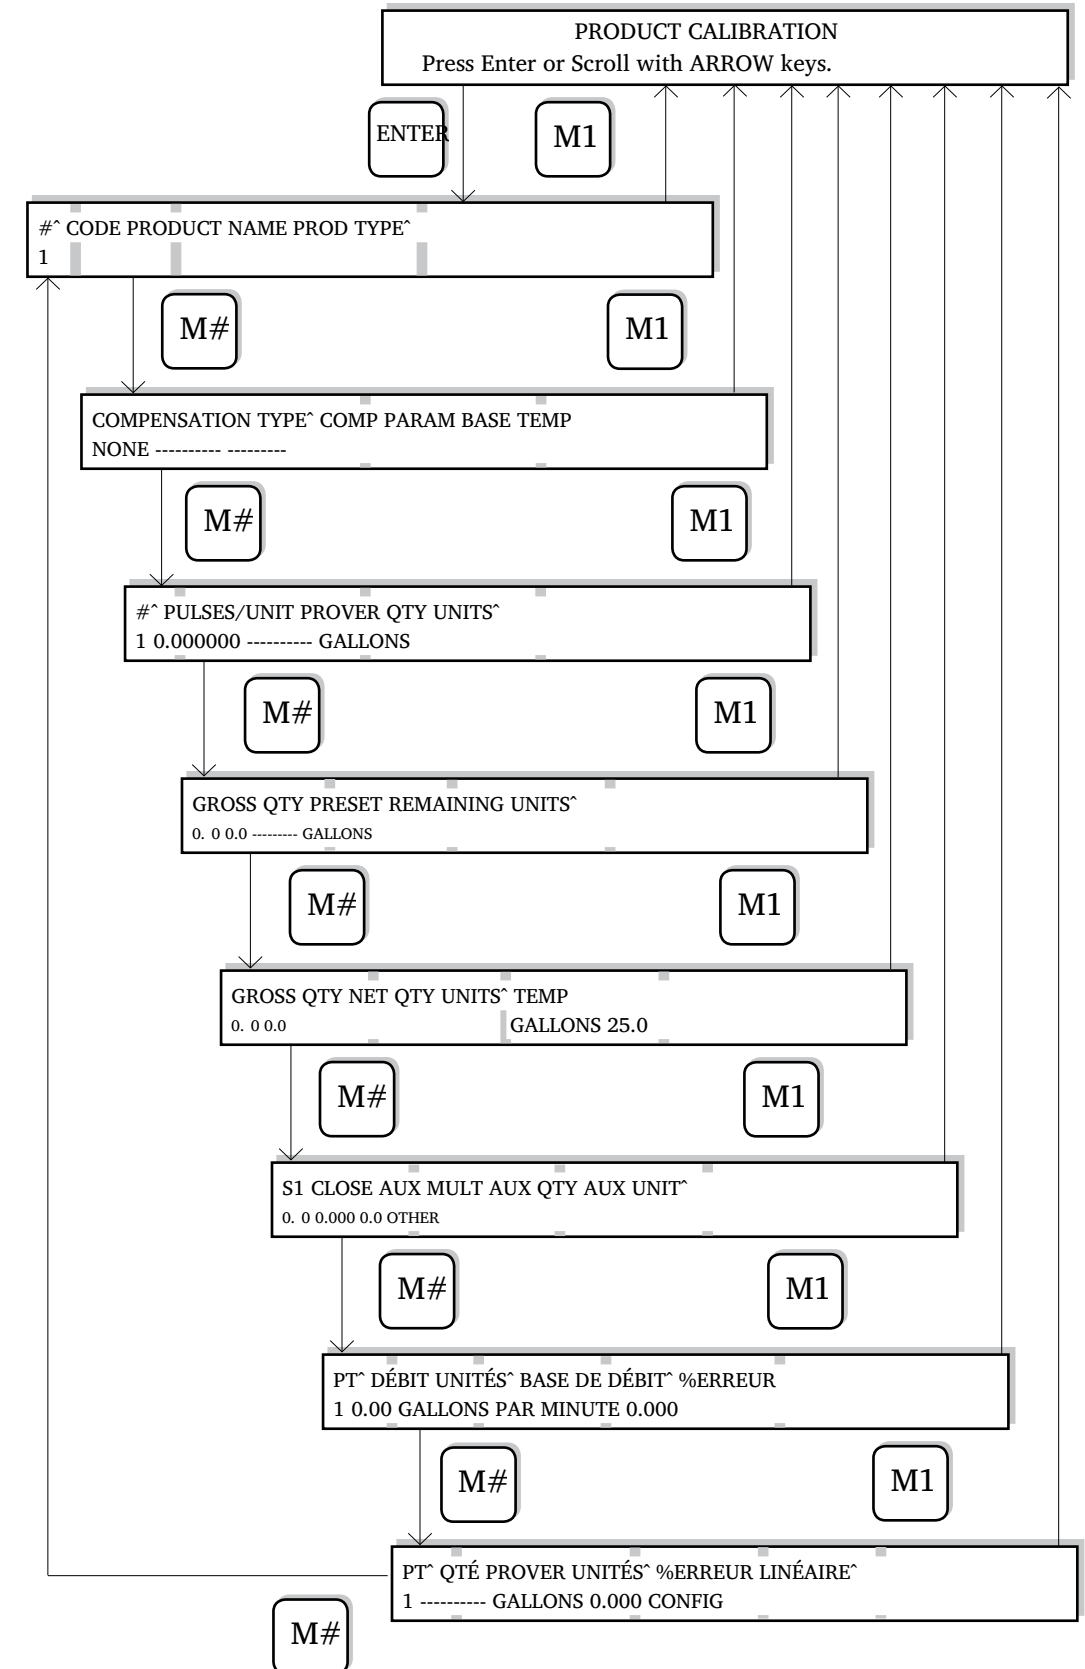


**DIAGNOSTICS**

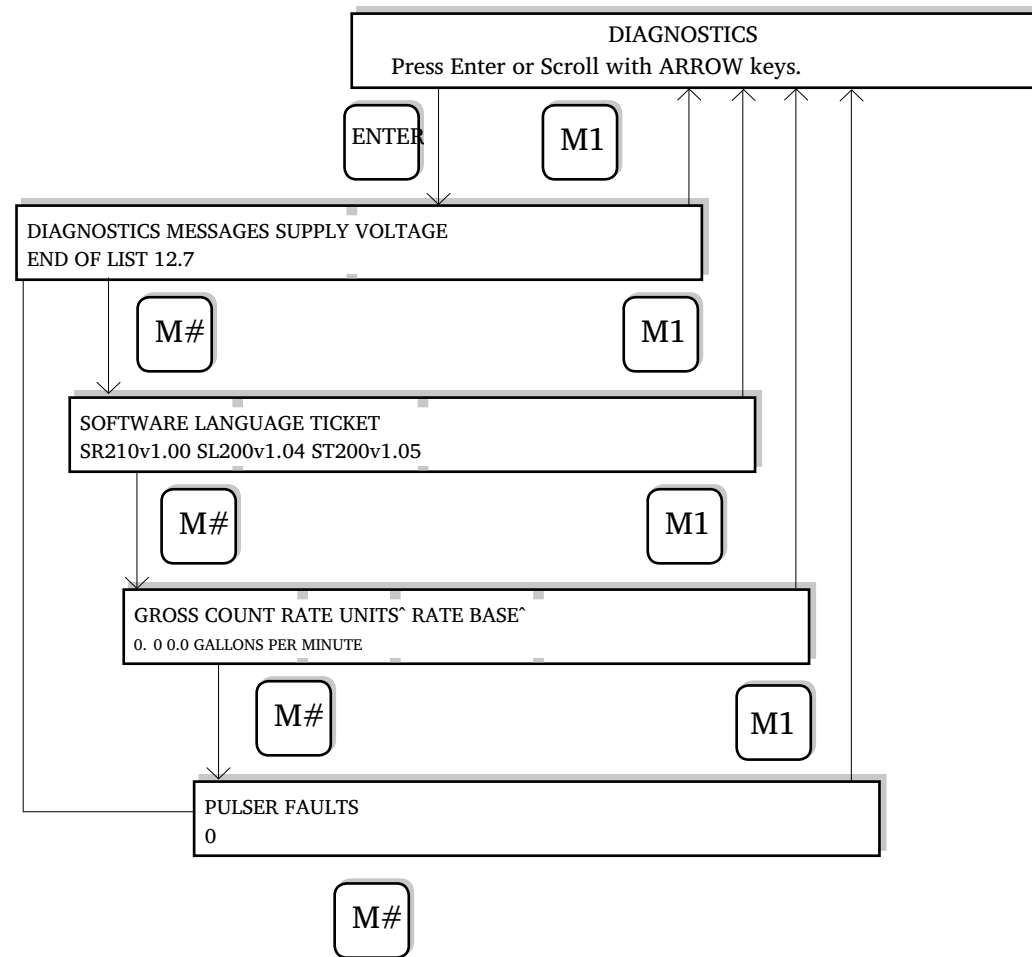

**SECURITY**

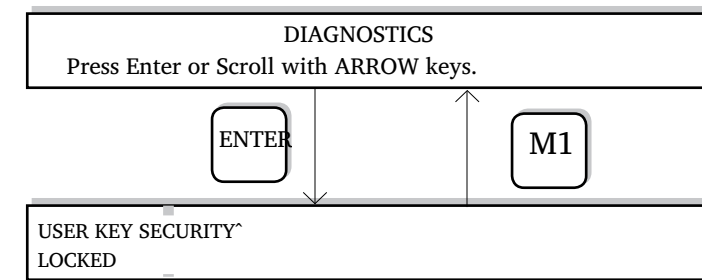

**FACTORY**

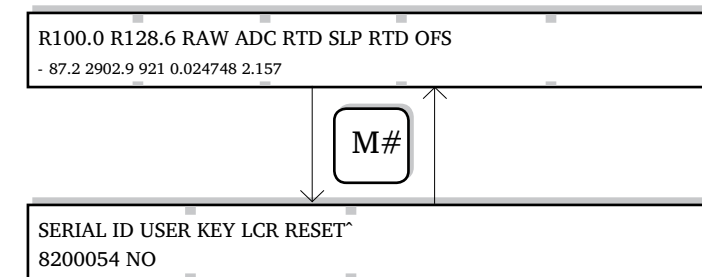

**Weights & Measures Prover Guide**

This guide has been created to clearly convey the method for proving a meter system equipped with a LectroCount LCR-II electronic register without the use of a Lap Pad or external data entry device. This guide will only cover the software features of the LCR-II in the calibration/prover mode.

*The following method provides a means to check the overall meter accuracy as well as adjust the meter's "k-Factor". The k-Factor moves the entire meter accuracy curve either up or down. If it is believed that the meter curve itself may have changed (e.g. when a measuring chamber is replaced), and it is desired to use and/or change multi-point calibration, a Lap Pad or other data entry device must be used per the Set-Up & Operation Manual.*

The LCR-II must initially be set-up and calibrated using a Lap Pad or data entry device. Once this has been accomplished, the LCR-II can be proved without using such a device. Only products with a valid pulse/unit (k-Factor) can be recalibrated using this feature.

To calibrate a flowmeter with the LCR-II:

1. Remove the Switch Plate cover.
2. Turn the Selector Switch to the calibration/prover position. This is accomplished by rotating the Selector Switch counter- clockwise to the 6:00 position.
3. The display will show " 000.000 ". This represents the delivered volume as recorded by the register. The current calibration settings will be printed on a ticket.
4. Press the **SELECT** button one time. The display will show " **Prod 1** ". Press **INCREASE** to select from the programmed products ( **Prod 1** to **Prod 4** ). Only products that have been previously set-up and calibrated will be displayed. If only one product has been calibrated, only one **Prod #** will be available.
5. When the desired product number is displayed, press **SELECT** . The display will advance to Flowrate, " **F 0.0** ".
6. Press **SELECT** and the display will advance to Temperature, " **42.5 °F** ". If a temperature probe is not installed, the display will show " **999.9 °F** ".
7. Press **SELECT** and the display will return to " 000.000 ".
8. To start a delivery, press the **INCREASE** button one time. This takes the display through an "all segments and blanks" test and starts a delivery by activating the solenoid valve controls. (All segments and blanks: " **8.8:8.8:8.8** "). If the register display remains at zero, open the hose nozzle and begin to fill the prover. If the register **did not** remain at zero (the hose needed to be packed), leave the pump running and press the **INCREASE** button to stop the delivery. Then press the **SELECT** button until the display digits no longer flash. Press the **INCREASE** button on the LCR-II to start the actual delivery with a packed hose. Open the hose nozzle and start to fill the prover.
9. Once the prover is filled to the desired volume, close the hose nozzle and press the **INCREASE** button on the LCR-II to deactivate the solenoid controls and end the delivery.
10. If it is determined that **no change** to the meter k-Factor is desired, turn the Selector Switch clock-wise to exit the calibration/prover mode. Proving is complete. If it is determined that a change to the meter k-Factor is desired, use the **INCREASE** and **SELECT** buttons on the LCR-II to adjust the value on the register to match the volume of the prover. The following page contains an example.

k-Factor Adjustment (example):

1. Presume that the LCR-II register displayed " **101.235** " Units and the prover volume was determined to be " **100.593** " units at the end of step 9. ("Units" represents the units of measure as designated on the front cover of the LCR-II.)
2. When **INCREASE** is pressed in Step 9 above, the left most digit of the LCR-II register will be flashing on and off, indicating that it can be changed. To change this value, press **INCREASE** to scroll through 0-9. The display digits will wrap around to 0 after 9 has been reached. When the desired value for the first position has been reached, press **SELECT** and the next digit to the right will flash on and off. In this example, no adjustment to the first digit is necessary.
3. The second digit also does not require adjustment, so press **SELECT** to advance to the third digit. The third digit, " **1** ", will be flashing on and off and needs to be changed to 0 in order to match the prover volume. Press **INCREASE** to scroll through the digits until " **0** " is displayed. Press **SELECT** to accept that value and advance to the next digit, " **2** ".
4. Press **INCREASE** until the number "5" is displayed. Press **SELECT** to advance to the next digit, " **3** ". Continue in this fashion until all the digits on the display are adjusted to the prover volume: " **100.593** ". When this is complete, none of the digits will be flashing on the display. A new k-Factor is recorded by the LCR-II. Turn the Selector Switch clock-wise to exit calibration/prover mode.
5. If a number is entered in this example that results in an unacceptable k-Factor, the display will show " **Error** ". When this occurs, press **SELECT** and return to Step 7 and conduct another prover run.

**Approximate k-Factors**

Values are for proving use only. Not to be used as actual k-Factors.

LC Meter Size	Max Flow Rate/Gallon	Revs / Gallon	Pulses / Gallon	Pulses / Litre
<b>P</b>	60	12. 237	4894. 8	1293. 11
<b>M/MA 5</b>	60	4. 079	1631. 6	431. 04
<b>M/MA 7/10</b>	150	5. 555	2222. 0	587. 01
<b>M/MA 15/25</b>	300	2. 058	823. 2	217. 47
<b>M 30/40</b>	450	0. 742	296. 8	78. 41
<b>M 60/80</b>	800	0. 398	159. 2	42. 06
<b>MS-75</b>	700	0. 255	102. 0	26. 95
<b>MS-120</b>	1200	0. 158	63. 2	16. 70

**IDEX** **LIQUID CONTROLS**  
ENERGY & FUELS CORKEN · FAURE HERMAN · SAMPI · SPONSLER · TOPTech SYSTEMS

105 Albrecht Drive  
Lake Bluff, IL 60044-2242  
1. 800.458.5262 • 847.295.1050  
Fax: 847.295.1057  
www.lcmeter.com

© 2006 Liquid Controls  
Pub. No. 500302  
(8/14)

