

M-Series Meters

M-5•, M-7@, M-10@, M-15@, M-25@, M-30@, M-40@, M-60@, M-80@

Installation Manual
& Setup Guide

MA®-Series Meters

MA-4@, MA-5 , MA-7@, MA-15@



M-Series Meters



MA®-Series Meters

LIQUID CONTROLS

An IDEX Energy & Fuels Business

LC_IOM_M/MA Meters V: 0219

Table des matières

Ressources dans ce guide	3
Mises à jour des publications	3
Procédures de sécurité	4
Dossier d'information du propriétaire	6
Emplacements de la plaque signalétique	8
Installation & Fonctionnement	9
Fonctionnement des compteurs LC	
10 Exigences d'installation	12
Exigences de fonctionnement	14
Démarrage et fonctionnement du compteur	
16 Inversion de l'enregistrement du compteur	
18 Réglage de l'ajusteur standard	20
Maintenance	21
Exigences de maintenance	22
Entretien des composants d'entraînement	
23 Démontage du compteur	29
Remontage du compteur	36
Dépannage	44
Commander des pièces de rechange	47

M & MA Series Meters

Félicitations pour l'acquisition d'un compteur Liquid Controls de série M ou MA. Ce manuel fournit les détails techniques concernant l'installation, le matériel, la configuration, l'exploitation et les informations réglementaires de votre compteur.

NOTE: Dans ce guide, les débitmètres des séries M et MA sont désignés par le terme "Débitmètre" (sauf mention contraire spécifique par leur nom).

Ressources dans ce guide

Pour votre commodité, vous pouvez facilement télécharger la [version PDF de ce guide](#) . Liquid Controls recommande de lire les informations d'introduction et de sécurité, puis de consulter à la fois les [Installation & Fonctionnement](#) et les chapitres sur la [Maintenance](#).

NOTICE

Ce manuel fournit des avertissements et des procédures destinés à informer le propriétaire et/ou l'opérateur des dangers présents lors de l'utilisation du débitmètre Liquid Controls avec du gaz LP et d'autres produits. La lecture de ces avertissements et l'évitement de tels dangers relèvent strictement de la responsabilité des propriétaires-opérateurs de l'équipement. La négligence de cette responsabilité échappe au contrôle du fabricant.

Mises à jour des publications

Les versions les plus récentes de toutes les publications de Liquid Controls sont disponibles sur le [site web de Liquid Controls](#) . En cas de questions concernant la langue ou l'interprétation des manuels, instructions ou fiches techniques LC, veuillez d'abord contacter votre distributeur local pour obtenir de l'aide avec votre demande.

Pour les problèmes liés au service qui nécessitent un support supplémentaire de l'équipe de service Liquid Controls, veuillez appeler le numéro ci-dessous.

Siège social de Liquid Controls :

Téléphone : +1 847 295-1050 Sans frais : 800 458 5262 Adresse : Liquid Controls LLC, 105 Albrecht Drive, Lake Bluff, IL 60044 USA Site web : www.LCmeter.com

Procédures de sécurité



SOYEZ PRÊT

Avant d'utiliser ce produit, lisez et comprenez les instructions. · Tous les travaux doivent être effectués par du personnel qualifié formé à la

l'application, l'installation et la maintenance des équipements et/ou systèmes conformément à tous les codes et règlements applicables.

· Lors de la manipulation de composants/cartes électroniques, utilisez toujours un équipement de protection contre les décharges électrostatiques (ESD) approprié et suivez les procédures adéquates.

Assurez-vous que toutes les précautions de sécurité nécessaires ont été prises. · Assurez une ventilation adéquate, un contrôle de la température, une prévention des incendies, une évacuation, et de gestion des incendies.

Assurez un accès facile aux extincteurs appropriés pour votre produit. · Consultez votre service d'incendie local ainsi que les codes étatiques et municipaux pour vous assurer d'une préparation adéquate.

Lisez ce manuel et toute la documentation fournie dans votre dossier du propriétaire. · Conservez ces instructions pour référence future. · Le non-respect des instructions de cette publication pourrait entraîner des blessures

blessure, ou décès par incendie et/ou explosion, dommages matériels, ou autres dangers pouvant être associés à ce type d'équipement.



VIDANGER LE SYSTÈME DE TUYAUTERIE EN TOUTE SÉCURITÉ

Avant le démontage de tout compteur ou composant accessoire : **TOUTES LES PRESSIONS INTERNES DOIVENT ÊTRE RELÂCHÉES ET TOUS LES LIQUIDES DOIVENT ÊTRE VIDANGÉS DU SYSTÈME CONFORMÉMENT À TOUTES LES PROCÉDURES APPLICABLES.**

La pression doit être de 0 (zéro) psi. · Fermez toutes les conduites de liquide et de vapeur entre le compteur et la source de liquide.

Le non-respect de cet avertissement pourrait entraîner des dommages matériels, des blessures personnelles ou la mort par incendie et/ou explosion, ou d'autres dangers pouvant être associés à ce type d'équipement.



RESPECTER LES NORMES NATIONALES ET LOCALES

Le câblage d'alimentation, d'entrée et de sortie (E/S) doit être conforme à la classification de zone pour laquelle il est utilisé (Classe I, Div 2). Pour l'Amérique du Nord, les installations doivent être conformes au Code électrique national des États-Unis, NFPA 70, ou au Code électrique canadien afin de maintenir les classements Classe I, Division 2. Cela peut nécessiter l'utilisation de connexions ou d'autres adaptations conformes aux exigences de l'autorité compétente.

L'équipement périphérique doit être adapté à l'emplacement dangereux où il est installé.

AVERTISSEMENT : Danger d'explosion

Dans les zones dangereuses, couper l'alimentation avant de remplacer ou de câbler des modules.

NE PAS déconnecter l'équipement sans avoir coupé l'alimentation ou sans s'être assuré que la zone est non dangereuse.

AVERTISSEMENT : Utiliser un couple de serrage de 3,5 in • lb (0,4 N • m) pour le bornier screws.



EN CAS D'INCENDIE DE GAZ

EN CAS D'INCENDIE IMPORTANT OU D'INCENDIES QUI SE PROPAGENT

Évacuez le bâtiment et avisez les pompiers de votre localité. · Arrêtez la fuite seulement si vous pouvez atteindre l'équipement en toute sécurité.

EN CAS D'INCENDIE LIMITÉ ET MAÎTRISABLE QUE VOUS POUVEZ CONTROL

- Arrêtez la fuite, si vous pouvez atteindre l'équipement en toute sécurité.
- Utilisez l'extincteur approprié pour les matériaux qui ont pris feu, tel qu'un extincteur de classe B, eau ou extincteur à brouillard.
- En cas de doute, appelez les pompiers locaux.



EN CAS DE FUITE DE GAZ

EN CAS DE GROSSE FUITE DE GAZ

- Évacuez le bâtiment et avertissez les pompiers locaux.

EN CAS DE PETITE FUITE DE GAZ LOCALISÉE

- Stoppez la fuite et prévenez toute ignition accidentelle.
- Empêchez le gaz de pénétrer dans d'autres parties des bâtiments. Certains gaz comme le GPL cherchent les niveaux inférieurs, tandis que d'autres gaz montent vers les niveaux supérieurs.
- Évacuez toutes les personnes de la zone dangereuse.
- Assurez-vous que le gaz est dispersé avant de reprendre les activités et le fonctionnement des moteurs.
- En cas de doute, contactez votre service d'incendie local.

Dossier d'information du propriétaire

Demandes de renseignements, commandes et service

Veillez avoir les informations suivantes à disposition lorsque vous faites des demandes de renseignements, commandez des pièces de rechange ou planifiez un service. Si un accessoire de compteur spécifique est concerné, veuillez fournir le modèle et le numéro de série de l'accessoire en question.

Liquid Controls recommande de consigner les informations suivantes :

- Le numéro de série de votre compteur : _____
- Le nom de votre distributeur de service complet : _____

· Le numéro de téléphone de votre distributeur de service complet : _____

Assurez-vous de faire ce qui suit :

1. VÉRIFIEZ VOTRE DOSSIER D'INFORMATION DU PROPRIÉTAIRE

Les compteurs LC existent en de nombreuses variantes. Les informations qui vous sont envoyées dépendent des accessoires que vous avez commandés avec votre compteur. Faites l'inventaire de votre dossier d'information du propriétaire rouge. Tout d'abord, trouvez votre bordereau d'expédition LC avec l'impression informatique. Localisez le numéro de série et le numéro de modèle du compteur sur cette impression. Recoupez le numéro du bordereau d'expédition avec les numéros réels du compteur. L'illustration dans [Emplacements de la plaque de série](#) vous aide à localiser les Plaquettes de spécifications et de numéros de série sur le compteur et ses accessoires.

2. RELEVEZ LE NUMÉRO DE SÉRIE DE VOTRE COMPTEUR


Relevez le numéro de série de votre compteur ainsi que le nom et le numéro de téléphone de votre distributeur en service complet dans l'espace ci-dessus. Conservez ces informations et gardez-les à portée de main pour référence future. Lorsque vous appellerez pour le service ou des pièces, vous devrez fournir le numéro de série et le modèle de votre compteur. Voir [Comment commander des pièces de rechange](#) ⁴⁷ pour plus d'informations.

3. IDENTIFIEZ LA LETTRE MODÈLE-ACCESSOIRE DE VOTRE COMPTEUR.

Utilisez les diagrammes ci-dessous pour vous familiariser avec les accessoires du compteur. Trouvez le compteur et la lettre sur le diagramme qui représente votre système de compteur, puis consultez le tableau ci-dessous pour vérifier que votre pochette d'information propriétaire rouge est complète. Tous les niveaux d'accessoires ne sont pas disponibles pour chaque modèle de compteur LC.

4. ASSUREZ-VOUS QUE TOUTE LA DOCUMENTATION EST INCLUSE AVEC VOTRE COMPTEUR

Vérifiez votre pochette d'information du propriétaire (rouge) en la comparant aux diagrammes ci-dessous pour vous assurer que toute la documentation nécessaire pour votre compteur et ses accessoires est incluse. Si un document manque, contactez votre distributeur full-service ou Liquid Controls. Ou visitez www.lcmeter.com où vous trouverez la documentation LC la plus récente.

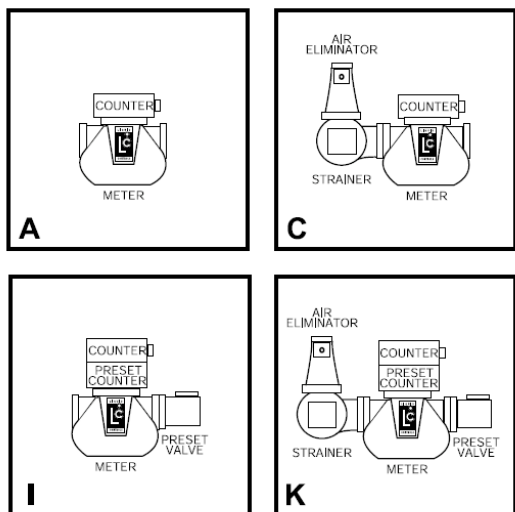


LITERATURE DESCRIPTION	ACCESSORY MODEL			
	A	C	I	K
LC PACKING LIST (COMPUTER PRINTOUT)	✓	✓	✓	✓
CUSTOMER RESPONSE CARD	✓	✓	✓	✓
M/MA METER MANUAL	✓	✓	✓	✓
"Your Meter" SUPPORT AND PARTS MANUAL	✓	✓	✓	✓
AIR ELIMINATOR MANUAL		✓		✓
STRAINER MANUAL		✓		✓
PRINTER MANUAL				
COUNTER MANUAL	✓	✓	✓	✓
PRESET COUNTER MANUAL			✓	✓
PRESET VALVE MANUAL			✓	✓
OTHER ACCESSORIES				

Emplacements des plaques de série

Composants non illustrés

Pour les composants non illustrés, reportez-vous au manuel des composants si vous ne trouvez pas la plaque de numéro de série sur le composant.

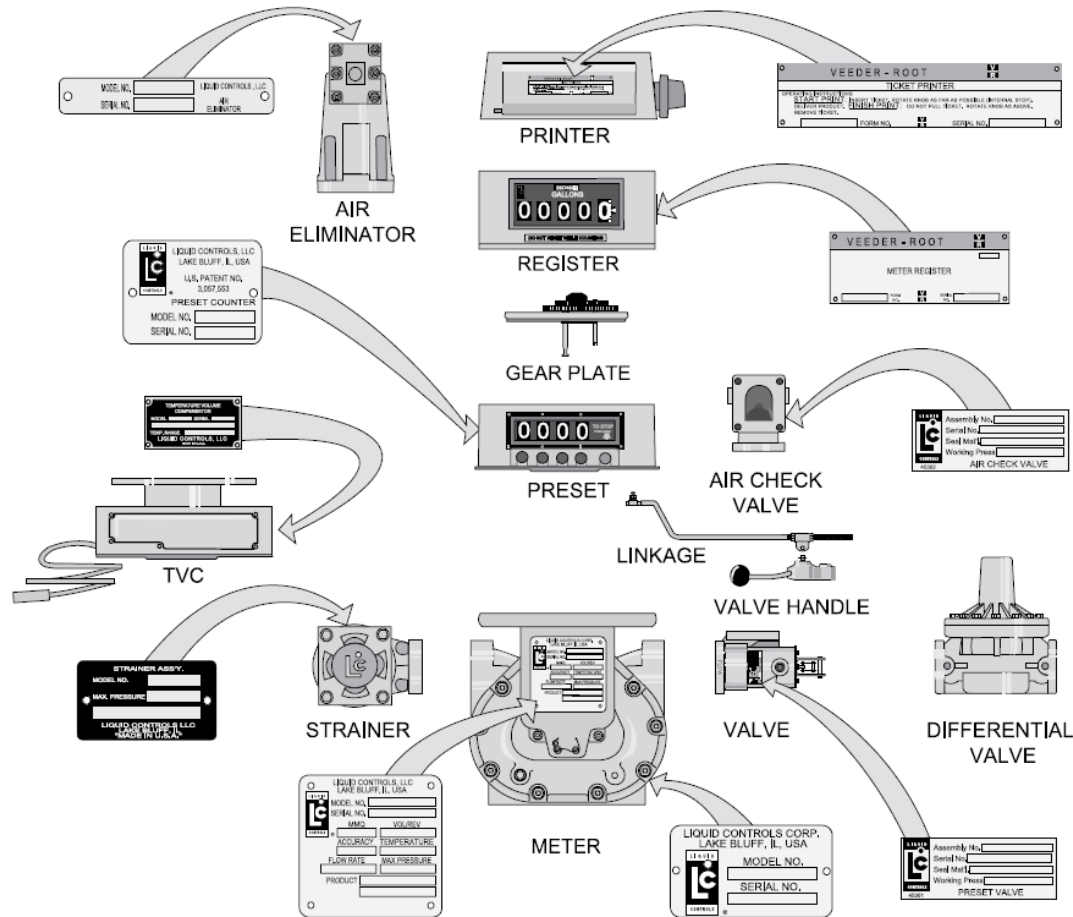

Specification and Serial Number Plate Locations for Mechanical Meter System Components

 
 
 
Installation et fonctionnement

Vérifier chaque expédition

Avant l'installation, vérifiez votre expédition par rapport à la liste de colisage et assurez-vous qu'aucune pièce ne manque. La liste de colisage se trouve dans le dossier d'information.

Ce chapitre comprend les sujets suivants :


- Fonctionnement des compteurs LC ¹⁰
- Exigences d'installation ¹²
- Exigences de fonctionnement ¹⁴

- Démarrage et fonctionnement du compteur  16
- Inversion de l'enregistrement du compteur  18
- Réglage de l'ajusteur standard  20

Fonctionnement des compteurs LC

Les compteurs Liquid Controls sont des compteurs volumétriques. Ils sont conçus pour la mesure de liquides dans des applications de transfert de custody et de contrôle de processus. Ils peuvent être installés dans des systèmes à écoulement par pompage ou gravitaire. Grâce à leur conception simple, ils sont faciles à entretenir et à adapter à une variété de systèmes.

Le corps du compteur (1) est conçu avec trois alésages cylindriques (2). Trois rotors, le rotor obturateur (3) et deux rotors de volume (4, 5), tournent de manière synchronisée dans les alésages. Les trois rotors sont supportés par des plaques palières (6, 7). Les extrémités des rotors dépassent à travers les plaques palières. Le pignon du rotor obturateur (8) est monté sur l'extrémité du rotor obturateur. Les pignons des rotors de volume (9, 10) sont montés sur les extrémités des rotors de volume. Ces pignons créent la relation temporelle synchronisée entre les trois rotors.

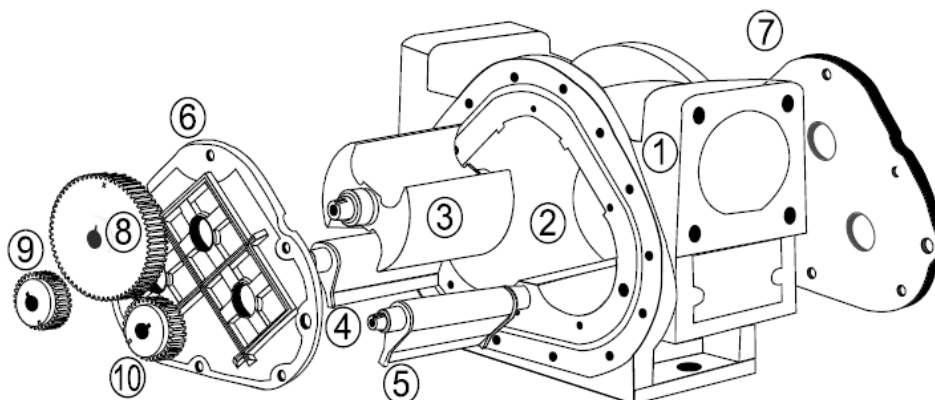

Meter Element Exploded Line Drawing


Lorsque le fluide circule dans le corps du compteur, l'ensemble rotor tourne. Le liquide est divisé en sections uniformes par la rotation des rotors. Le déplacement du fluide se produit simultanément. Lorsque le fluide entre, une autre partie du fluide est partitionnée et mesurée. Au même moment, le fluide qui le précède est déplacé hors du compteur et dans la conduite de refoulement. Étant donné que le volume des alésages est connu et que la même quantité de fluide traverse le compteur à chaque révolution du rotor obturateur, le volume exact de liquide ayant traversé le compteur peut être déterminé avec un haut degré de précision.

This true rotary motion is transmitted through the packing gland, the face gear, the adjuster drive shaft, and the adjuster to the register stack and counter. True rotary motion output means consistent accuracy, since the register indication is in precise agreement with the actual volume throughput at any given instant. At any position in the cycle, the meter body, the blocking rotor, and at least one of the displacement rotors form a continuous capillary seal between the unmetereed upstream product and the metered downstream product.

Because the product is separated by the capillary seal, no metal-to-metal contact is required within the metering element. This means no wear, and no wear means no increase in slippage, which means no deterioration in accuracy.

Throughout the metering element, the mating surfaces are either flat surfaces or cylindrical faces and sections that are accurately machined. These relatively simple machining operations, plus the fact that there is no oscillating or reciprocating motion within the device, permits extremely close and consistent tolerances within the LC meter.

The product flowing through the meter exerts a dynamic force that is at right angles to the faces of the displacement rotors. The meter is designed so that the rotor shafts are always in a horizontal plane. These two facts result in no axial thrust. Therefore, LC meters do not need thrust washers or thrust bearings, and the rotors automatically seek the center of the stream between the two bearing plates—eliminating wear between the ends of the rotors and the bearing plates. Once again, no wear results means no metal fatigue and no friction.

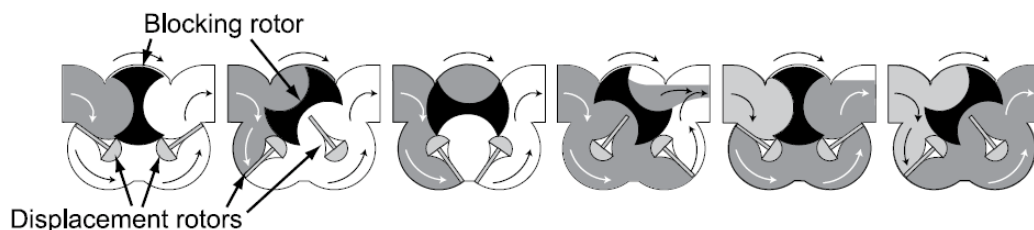

Liquid Controls meters are made of a variety of materials to suit a variety of products. Because of their no-wear design, capillary seals, and unique rotary metering, LC meters provide unequalled accuracy, long operating life, and exceptional dependability.

Installation Requirements



WARNING

Under normal operation, do not expose any portion of the LP-Gas system to pressures in excess of rated working pressures without an automatic safety valve to vent the over pressure discharge to a place of safety away from the operator and other people.

Failure to provide such a safety relief may result in leakage or rupture of one or more of the components in the system. This can result in injury of death from either the leakage or the debris from the rupture.

Class 10 LPG Meters - Codes

Class 10 LPG meters must be installed in accordance with the requirements of ANSI-NFPA 58 in addition to all other state and local codes.

Ensure that you do each of the following as part of the installation of your meter.

- TAKE ALL NECESSARY SAFETY PRECAUTIONS – Make sure that all necessary safety precautions have been taken. Provide for proper ventilation, temperature control, fire prevention, evacuation and fire management.
- PROVIDE ACCESS FOR FIRE EXTINGUISHERS – Provide easy access to the appropriate fire extinguishers for your product. Consult with your local fire department and state and local codes to make sure that you are adequately prepared.
- READ PROVIDED LITERATURE – Read this manual as well as all the literature provided in your red Owner Information Packet. If you have any questions, consult with your full- service distributor or call the Service Department at Liquid Controls.
- CONFORM TO ALL CODES – Install the meter and accessories in conformance with applicable state and federal construction, electrical and safety codes.
- LEAVE THREAD CAPS IN PLACE – Before shipment, protective thread caps are placed in all meter and accessory openings. They should remain in place until you are ready to attach piping.

- **FLUSH PIPING** – Prior to meter installation, the entire piping system should be thoroughly flushed of all debris with a liquid that is compatible with the construction of the meter.
- **KEEP EXTERNAL SURFACES OF THE METER CLEAN**
- **MOUNT METER SECURELY** – The meter must always be securely bolted to a platform or supporting member, regardless of the mounting position of the meter. Never “hang” a meter on the connecting piping.
- **PREVENT PIPE STRAIN OR STRESS** – Prevent pipe strain or stress from occurring when making meter or accessory repairs. Pipe strain and stress occurs when the pipes are not supported or are not aligned correctly to the meter. The weight of the pipes must always be supported independent of the meter. This means that the meter and accessories can be easily removed without affecting the pipes or the pipe alignment. Never leave any of the pipes hanging.
- **INSTALL METER ONLY ON THE DISCHARGE SIDE (DOWNSTREAM) OF THE SYSTEM PUMP**
- **APPLY PIPE COMPOUND TO MALE THREADS ONLY**
- **LEAVE SPACE FOR FUTURE MAINTENANCE** – Position the meter with service in mind. Provide ample workspace. Removing covers can be difficult when work space is not available. Always supply a platform or support for the meter mounting.
- **USE METER ONLY WITH SPECIFIED LIQUIDS** – A meter is metallurgically designed to be physically compatible with the type of liquid originally specified by the customer, and as indicated on the Serial Number Plate. A meter should not be used with a liquid different from the liquid originally specified, unless the physical characteristics and pH rating are similar and the application has been checked with LC Sales and Engineering through your full-service distributor.
- **INSTALL A STRAINER** – Install a strainer on the meter inlet to avoid damage from foreign matter, such as weld slag, from entering the system. The strainer must always be located on the inlet side.
- **TAG FLOW DIRECTION** – All meters are tagged identifying their direction of flow. Meters are set with a flow direction of left-to-right as standard. However, when a meter is ordered, the customer can specify that the flow be set from either direction. If the meter register counts in reverse, the meter is reading the direction of flow in reverse. If this occurs, the meter registration must be reset. For mechanical output meters, see Reversing the Meter Registration on page 10. For electrical output meters, such as

meters equipped with a pulser or an electronic register, refer to the manual of the electronic component.

- **USE CURRENT ENGINEERING DRAWINGS** – Always request up-to-date, engineering approved, dimensional drawings before starting any construction. Do not rely on catalog pictures or drawings. They are for reference only. After receiving prints, check to see that all equipment ordered is shown and that any extra pressure taps, plugs, etc. are noted and their size specified.

Operation Requirements

Ensure that you are mindful of the following when operating your meter:

- **THE METER MUST REMAIN FULL OF PRODUCT AT ALL TIMES** – An easy way to accomplish this is to put the meter assembly in the line below the piping center-line (a sumped position). This requires adding elbows and flanges prior to installing the meter. The meter should be installed in a bypass loop, below the pipe center-line, with block valves upstream and downstream of the meter inside the bypass loop. A block valve should be located in the main pipeline and labeled as the bypass valve.
- **PIPING PRESSURE RELIEF** – Any portion of pipe system that might isolate or block flow should be provided with a pressure relief to prevent damage from thermal expansion. There are excellent benefits to this type of installation. First, the meter is kept full. Second, this type of installation allows the meter to be isolated for servicing and calibration while continuing flow through the bypass valve.
- **MAINTAIN UPSTREAM LINES** – Upstream lines must be maintained full to prevent air from entering the meter. If upstream or inlet lines are constructed in a manner which allows reverse flow, foot valves, or back checks must be installed.
- **UNDERGROUND TANKS, SUBMERSIBLE PUMPS** – Underground tanks that are furnished with a submersible pump will eliminate many problems that occur with positive displacement pumps (suction pumps) when suction piping is incorrectly sized or when the lift is too great.
- **API MANUAL OF PETROLEUM MEASUREMENT STANDARDS** – Every meter should be calibrated under actual service and installation conditions per the API Manual of Petroleum Measurement Standards:

The following chapters of the API Manual of Petroleum Measurement supersedes the API standard 1101:

- Chapter 4 - Proving Systems - Chapter 5 - Metering - Chapter 6
- Metering Assemblies - Chapter 11 Section 2.3 - Water
- Calibration of Volumetric Provers - Chapter 12 Section 2 -
- Calculation of Petroleum Quantities

· PROVIDE A MEANS OF CONVENIENTLY DIVERTING LIQUID FOR CALIBRATION

PURPOSES

· EVALUATE PUMPING EQUIPMENT – Give careful attention to the pumping equipment

and piping in your system. Because of their influence on liquid being measured as it enters the metering assembly, systems should be made free of conditions that cause or introduce entrained air or vapor.

· FOLLOW THE MANUFACTURER’S RECOMMENDATION FULLY WHEN INSTALLING

PUMPS – Give particular attention to factors like: use of foot valves, pipe size to the inlet, and conformance to net positive suction head (NPSH) conditions when suction pumping is required. Follow manufacturer recommendations to minimize air and vapor elimination problems.

· LIGHT HYDROCARBONS AND SIMILAR LIQUIDS – For liquids such as light

hydrocarbons that tend to flash or vaporize easily at higher ambient temperatures, it is advantageous to use flooded suctions and piping sized larger than the nominal pump size.

· VEHICLE TANK INSTALLATIONS – On vehicle tank installations, the layout of the

system’s piping is crucial in preventing problems with split compartment test conformance. Piping should slope away from a positive displacement pump to prevent resurgent re- priming of the pump due to drain back.

· AVOID HYDRAULIC SHOCK – Hydraulic shock is harmful to all the components of an

operating system, including the valves, the meter, and the pump. Because of the high precision with which they measure products, meters, in particular, must be protected against hydraulic shock. The best protection against hydraulic shock is to prevent it from occurring. To prevent hydraulic shock, adjust the closing rate of the valve until shock does not occur.

· AVOID THERMAL EXPANSION – Thermal expansion, like hydraulic shock, can easily

damage meters and other components in the system. When designing the system, include pressure relief valves in any portion or branch of the system that might be closed off when an operating or block valve is closed.

Meter Start Up and Operation

Before continuing to the procedures below, it's important to heed the following cautions and warnings.

Dead Head Pressure - Pumps

Make sure that your pump can operate against a dead-head pressure situation. If not, consult the factory for assistance.

FIRST - Prime the Pump

Prime the pump before using it to fill the system. Consult the pump manufacturer for proper pump priming.



WARNINGS

- NEVER OPERATE THE METER OR SYSTEM WHEN PARTIALLY FILLED
WITH LIQUID, OR WITH POCKETS OF COMPRESSED AIR OR VAPOR PRESENT – If these conditions cannot be avoided, air and vapor elimination systems may be required. If you cannot fill the meter slowly by gravity or by using a valve to throttle back the flow, consult the factory.
- DO NOT OPERATE THE METER ABOVE THE MAXIMUM PRESSURE
LISTED ON THE SERIAL NUMBER PLATE – Under any and all pressure producing circumstances (for instance, thermal expansion and hydraulic shock) the working pressure must not exceed the maximum pressure indicated on the Serial Number Plate.
- DO NOT OPERATE THE METER ABOVE THE MAXIMUM FLOWRATE
LISTED ON THE SERIAL NUMBER PLATE – If the meter is operated at a rate greater than the maximum recommended GPM, excessive wear and premature failure may occur.
- THE METER CAN BE CALIBRATED FOR FLOWS BELOW MINIMUM
RATINGS – If the flow remains constant and varies within narrow limits or if the product is viscous, the meter can be calibrated for flows below minimum

ratings. If the meter is installed in a custody transfer application (for financial transactions), the flow rate must fall within flow rate range indicated on the serial number plate. A meter should never be run beyond the maximum flow rate determined for that class meter and/or liquid measured.

Prior to meter start up, use extreme caution and ensure that:

1. The meter is properly secured.
2. All connections are tight.
3. All valves are in the closed position.

Placing the Meter into Operation

When placing your meter in operation, the meter and system must be filled slowly with liquid and be free of air prior to start-up. Extreme care must be taken to avoid damaging the meter during this time. When filling the system with liquid for the first time, gravity filling is the preferred method of filling the system with liquid. Gravity filling uses positive head pressure from product storage above the inlet port of the meter to fill the system. If necessary, systems can be filled with the pump.

This is the Meter start-up procedure:

1. Make sure all valves (upstream and downstream of the meter) in the system are closed.
2. Open the valve located at the storage tank a small amount. Provided there is not a valve between the tank and the meter inlet, the meter's register/counter will start to move and then stop. If there is another valve between the tank and meter, repeat this process with each valve until the meter is exposed to the liquid.
3. Once you are assured that the meter has registered some volume and stopped, continue to open the tank valve until it is completely open.
4. With the valve(s) open between the tank and the meter, slowly open the downstream

ouvrez le robinet jusqu'à ce que le compteur/indicateur du débitmètre se mette en mouvement.
5. Ne faites pas fonctionner le débitmètre à plus de 25 % de son débit nominal lors de la mise en service.

6. Une fois que le produit s'écoule à l'extrémité de votre système, la vanne de sortie peut être ouverte complètement, à condition que le système soit conçu pour ne pas dépasser le débit indiqué sur the meter.



PRIOR TO METER DISASSEMBLY

Failure to follow this pre-disassembly procedure could result in property damage, personal injury, or death.

Before disassembly of any meter or accessory component:

- All internal pressures must be relieved and all liquid drained from the system in accordance with all applicable procedures.
- Pressure must be 0 (zero) psi.
- Close all liquid and vapor lines between the meter and liquid source.

For applicable safety rules, refer to local authorities and relevant NFPA Codes.

 
Reversing the Meter Registration

The direction of flow is specified by the customer when the meter is ordered. The standard direction of flow, facing the front of the meter, from left to right. A red tag labelled “inlet”, affixed to the meter before shipment, indicates the inlet side of the meter.

If the meter is equipped with a strainer, air eliminator, and/or valve, each component must be moved to the correct side of the meter when reversing the direction of flow. The strainer and air eliminator should always be located on the inlet side of the meter. Valves should always be located on the outlet side of the meter. Some parts of the valve may require repositioning. See the valve's manual for more information.

When the meter is first installed, check the register. If the register counts down, meaning that the register numbers decrease rather than increase, you must reverse the position of the adjuster drive gear. To reverse the drive to the register, the position of the adjuster drive gear relative to the pinion gear of the packing gland must be flipped.



Refer to the figures below and follow this procedure to reverse the meter registration:

1. Remove the dust cover. See the Removing the Dust Cover procedure in Servicing the Drive Components  .
2. Remove the retaining ring (4) with a screwdriver or pliers.
3. Remove the two retaining spring screws (1) with a standard screwdriver.
4. Remove the retaining spring (2).


NOTE: For M-15®, M-25®, M-30®, and M-40® models, loosen the single set screw.

5. Remove the drive shaft (3) with the adjuster drive gear assembly including (4) Retaining Ring and (5) Adjuster Drive Gear.
6. Remove the adjuster drive gear (5) and turn it 180° so that it is upside down from the original installation position. The bushing (7) supports the adjuster drive gear in the lower position. The retaining ring (4) supports the adjuster drive gear in the upper position.

7. Reassemble the parts in reverse order. Make sure that the adjuster drive gear meshes with the packing gland's pinion gear (6) without being too tight. There should be a little play in the gear teeth. The retaining ring (4) should be placed in the groove provided on the drive shaft (3), regardless of the adjuster drive gear position. The packing gland pinion gear to adjuster drive gear ratio is either 1:1 or 2:1. In the 2:1 ratio, the pinion of the packing gland is smaller in diameter.

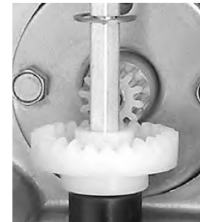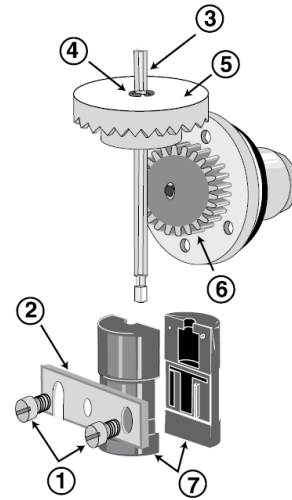

Adjuster drive gear engaged at bottom

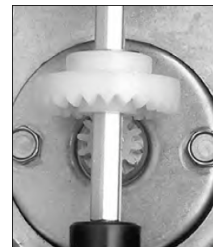


Adjuster drive gear engaged at top

Setting the Standard Adjuster

Mechanical Instructions Only

These instructions apply to meters equipped with mechanical output accessories only. If your meter is equipped with an electrical output (i.e., electronic pulser), refer to the manual for the electrical component your Owner Information Packet.

 Refer to the figure at the bottom of this section and follow this procedure to set the standard adjuster:


1. Remove the dust cover. See the Removing the Dust Cover procedure in Servicing the [Drive Components](#) .
2. Check meter registration by delivering product to a reliable, accurate prover. Perform multiple delivery tests to verify the meter repeatability.
3. Record the setting that is indicated on the adjuster.
4. Note the difference between the volume of the prover and the volume indicated on the meter counter.

Calculate the necessary % correction using this formula:

$$\% \text{ Correction} = \frac{\text{Volume in prover} - \text{Volume on meter counter}}{\text{Volume in prover}} \times 100$$

 

 
 
 
 
5. Loosen the adjuster clamp screw.
6. When the prover volume is less than the meter counter volume, add the percentage to the original adjuster setting by turning the thimble towards the arrow marked LARGER (larger volume). Correct the original setting by approaching the number desired from the next larger number. For example, if the desired adjuster setting is 2.4, turn the adjuster thimble to the left to number 5, then to the right to obtain the 2.4 setting. Adjuster is currently set at 2.3 in the figure below.
7. When the prover volume is more than the meter counter volume, subtract the percentage from the original adjuster setting by turning the thimble in the direction of the arrow marked smaller volume percent.

8. Retighten the adjuster clamp screw. Run product through the meter to allow the adjuster to take a set. Then make several prover runs to check for accuracy.

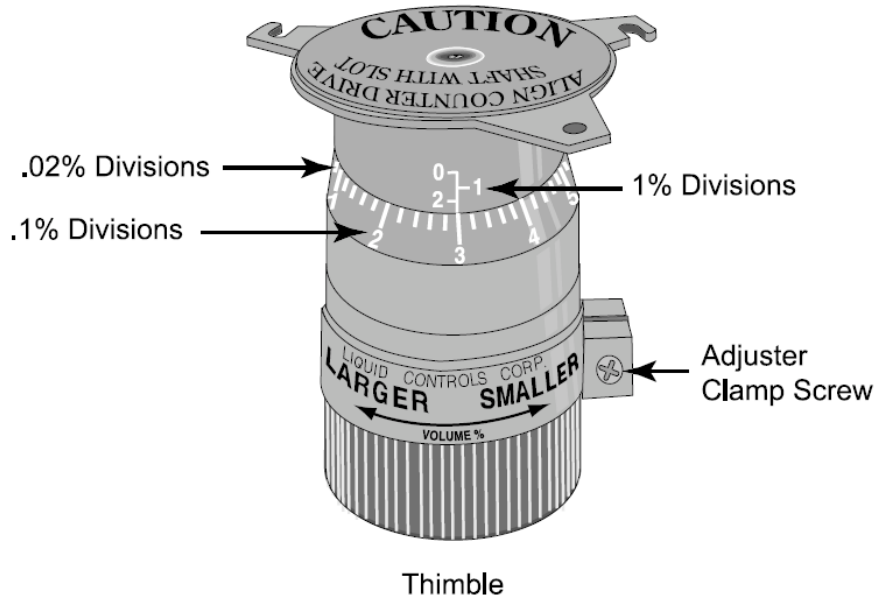

Maintenance

This chapter includes the following topics:

- Maintenance Requirements  22
- Servicing the Drive Components  23
- Disassembling the Meter  29
- Reassembling the Meter  36
- Troubleshooting  44
- How to Order Replacement Parts  47

Maintenance Requirements



PRIOR TO METER DISASSEMBLY

Failure to follow this pre-disassembly procedure could result in property damage, personal injury, or death.

Before disassembly of any meter or accessory component:

- All internal pressures must be relieved and all liquid drained from the system in accordance with all applicable procedures.
- La pression doit être de 0 (zéro) psi.
- Fermez toutes les conduites de liquide et de vapeur entre le compteur et la source de liquide.

Pour les règles de sécurité applicables, reportez-vous aux autorités locales et aux codes NFPA pertinents

DISCLAIMER

Liquid Controls décline toute responsabilité pour les dommages au compteur ou aux accessoires dus à la corrosion, au salage du produit ou à la séparation de produits chimiques, que cela se produise pendant les périodes d'utilisation ou de stockage.

Assurez-vous de tenir compte des éléments suivants lors de la maintenance du compteur :

- **ÉVITEZ TOUTE CONTRAINTE OU TENSION SUR LA TUYAUTERIE** – Empêchez toute contrainte ou tension de se produire sur la tuyauterie lors de la réparation du compteur ou des accessoires. Une contrainte ou une tension sur la tuyauterie se produit lorsque les tuyaux ne sont pas supportés ou ne sont pas alignés correctement sur le compteur. Le poids des tuyaux doit toujours être supporté indépendamment du compteur. Cela signifie que le compteur et les accessoires peuvent être retirés facilement sans affecter les tuyaux ou leur alignement. Ne laissez jamais de tuyaux suspendus.
- **STOCKAGE SAISONNIER DU COMPTEUR** – Si le compteur est utilisé pour un travail saisonnier, celui-ci doit être retiré du système et soigneusement rincé avec un liquide compatible à la fin de chaque saison. Pour rincer le compteur, retirez le bouchon de vidange sur les couvercles avant et arrière. Rincez ensuite le produit des couvercles avant et arrière. Si un rinçage à l'eau est effectué, une attention particulière doit être portée pour vider complètement le compteur et sécher toutes les pièces internes. Remplissez à nouveau le

meter immediately with a compatible liquid (or oil misting). Refilling is essential to preventing corrosion and ice damage that can result from any moisture that was overlooked after flushing and drying.

- DO NOT MAR OR SCRATCH – Do not mar or scratch any of the precision machined surfaces by prying or sanding parts.
- TORQUE ALL FASTENERS – Torque all fasteners such as screws and bolts in accordance with specifications listed in the Torque Chart in Reassembling the Meter
- STONE THE MACHINED SURFACES – Stone the machined surfaces when reassembling the meter to
 - assure that the machined surfaces are free of burrs and mars.
- REPAIR PULLED THREADS – Repair pulled threads with threaded insert fasteners. These can be used in many instances. Contact your full-service distributor for advice if this occurs.
- COAT THREADS WITH ANTI-SEIZE – Coat threads with anti-seize when removing and replacing bolts and castings in the meter.
- REMOVING FLANGE GASKETS – Remove flange gaskets when removing the flange assembly, always carefully scrape off the flange gaskets. Make sure that the flange surface has been scraped clean. Discard the old flange gasket and install a new flange gasket. Never reuse old flange gaskets.



Servicing the Drive Components

This section includes the following topics:

- Removing the Dust Cover
- Servicing the Adjuster and Adjuster Drive Assembly
- Servicing the Packing Gland
- Packing Gland Retaining Plate

Before continuing to the procedures below, it's important to heed the following cautions and warnings.



RELIEVING INTERNAL PRESSURE


All internal pressure must be relieved to zero pressure before disassembly or inspection of the strainer, vapor eliminator, any valves in the system, the packing gland, and the front or rear covers.

Serious injury or death from fire or explosion could result in performing maintenance on an improperly depressurized and evacuated system.

Strictly follow this procedure Relieving Internal Pressure Procedure for LPG and NH3 Meters:

1. Close the belly valve of the supply tank.
2. Close the valve on the vapor return line.
3. Close the manual valve in the supply line on the inlet side of the meter. If no manual valve exists on the inlet side, consult the truck manufacturer for procedures to depressurize the system.
4. Slowly open the valve/nozzle at the end of the supply line.
5. After product has bled off, close the valve/nozzle at the end of the supply line.
6. Slowly crack the fitting on top of the differential valve to relieve product pressure in the system. Product will drain from the meter system.
7. As product is bleeding from the differential valve, slowly reopen and close the valve/nozzle on the discharge line. Repeat this step until the product stops draining from the differential valve and discharge line valve/nozzle.
8. Leave the discharge line valve/nozzle open while working on the system.


Removing the Dust Cover

NOTE: Prior to removing the dust cover, see both the warnings above and the Safety Procedures  topic.

Follow this procedure to remove the dust cover:

1. Cut the dust cover seal wire with side cutters.

2. Remove the dust cover screws with a 5/16" wrench or slotted screwdriver.
3. Remove the dust cover.

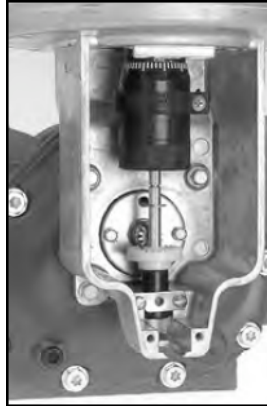


Servicing the Adjuster and Adjuster Drive Assembly

Remember to Reassemble to the Original Position


Make sure to return the adjuster drive gear to its original position when reinstalling or the meter counter will run backwards. The gear will be set either below or above the packing gland pinion.

Follow this procedure to remove the adjuster and adjuster drive assembly:

1. Record the adjuster micrometer setting and note the adjuster drive gear position.

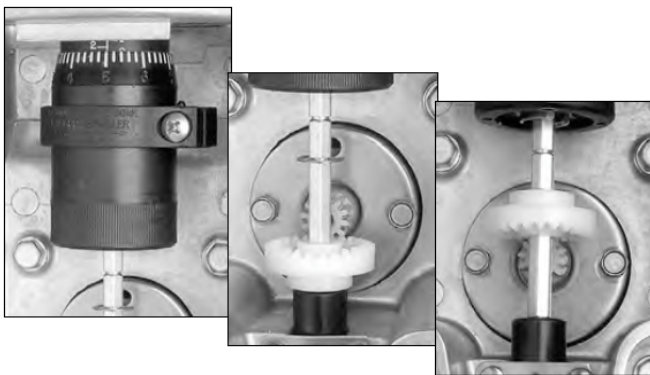


2. Use a standard screwdriver to loosen (or remove) the two retaining spring screws.

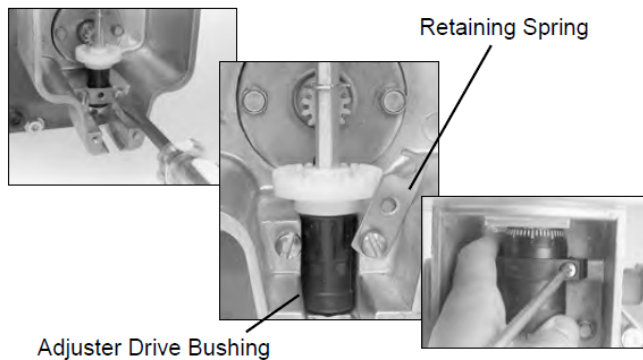

3. Swing the retaining spring off the adjuster drive bushing.

4. Loosen the adjuster mounting clamp screw with a Phillips head screwdriver. 5. Remove the adjuster from the top of the meter by:


- Removing screws that secure adjuster mounting plate to counter adapter. -
- Lifting adjuster mounting bracket with the adjuster out of the counter adapter. -
- Removing the adjuster drive assembly from the housing.

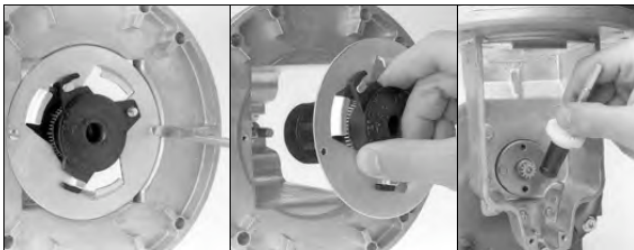

Removing the adjuster from the top

6. Remove the adjuster from the front of the meter by:

- Remove the adjuster drive assembly from the adapter and from the housing. -
- Remove the slotted head screw that secures the adjuster to the mounting plate. -
- Slowly pull the adjuster out through the front of the meter, rotating it from left to right to clear the adjuster mounting plate. -
- Pull the adjuster down to remove from the meter.

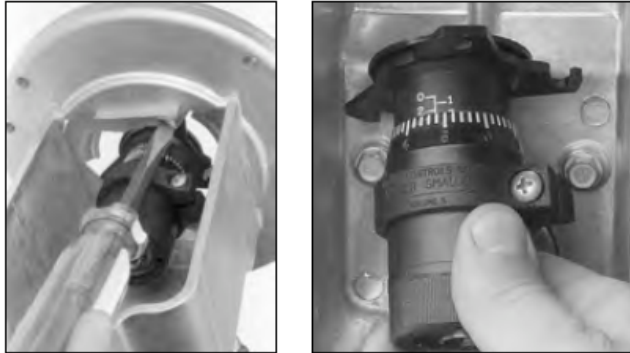



Removing the adjuster from the front

Servicing the Packing Gland

After prolonged use, the packing gland may show leakage from the metering chamber. Leakage is a sign of wear, resulting from the type of product being metered, the operating temperature, and other system conditions. If the packing gland shows leakage, it should be replaced or repaired. The packing gland can be serviced in the field.

Packing Gland Components (refer to the figures below)

- | | |
|----------------------------------|--------------------------------|
| 1. Driver | 9. Retaining ring |
| 2. Shaft | 10. Bushing |
| 3. Stainless steel thrust washer | 11. Retaining plate |
| 4. Rulon thrust washer | 12. Buna/Viton/PTFE O-ring |
| 5. Buna/Viton/PTFE "U" Cup | 13. Two retaining plate screws |
| 6. Aluminum/stainless housing | 14. Output gear 1:1 |
| 7. Washer - Nylon | 15. Carbon Guide Bearing |
| 8. Output gear 2:1 | 16. Washer - Stainless Steel |

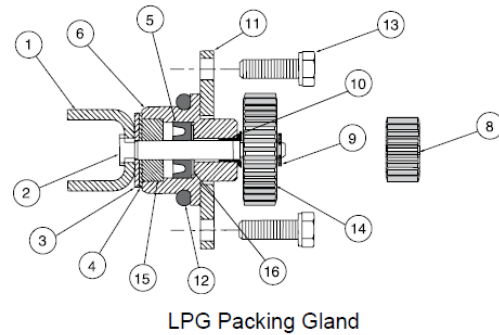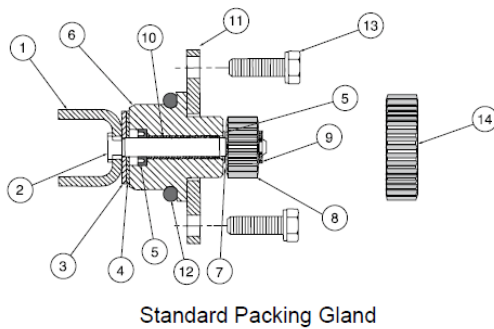

Remove the Packing Gland

Follow this procedure to remove the packing gland:

1. Remove the two screws on the packing gland retaining plate with a 5/16" socket and ratchet drive extension or 5/16" nut driver.
2. Pull out the packing gland.
3. Pry off the retaining ring with a standard screwdriver.
4. Pull the driver out from the assembly.

Packing Gland Retaining Plate

The retaining plate for the packing gland has four holes: two drilled 1½" holes on center and two drilled 1⅝" holes on center. If your meter has a counter adapter dust cover (item 0366) shaped like the illustration on the left, mount the retaining plate using the two 1⅝" holes. If your meter does not have the counter adapter dust cover like the illustration on the left, mount the retaining plate using the two 1½" holes.



RELIEVING INTERNAL PRESSURE

All internal pressure must be relieved to zero pressure before disassembly or inspection of the strainer, vapor eliminator, any valves in the system, the packing gland, and the front or rear covers.

See the warnings about relieving internal pressure at the beginning of this topic.


Disassembling the Meter

This topic explains how to disassemble the Meter, including how to:

- Remove non-corroded rotor gears
- Remove corroded rotor gears
- Remove the bearing plates and rotors

Follow this procedure to begin disassembling the Meter:


1. Remove the counter bracket screws with a box wrench or socket driver. The counter bracket can be removed with or without removing the adjuster assembly.

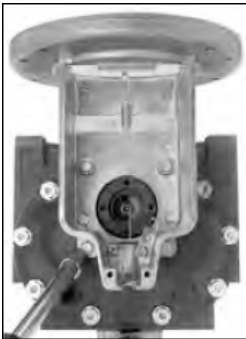


2. Turn the meter on either the inlet or outlet side. Let it stand to allow the product to drain from the meter chamber.



3. Locate the drain plugs on the front and rear covers. Remove the drain plugs using an allen wrench. Let the meter stand to allow product to drain from the front and rear covers.

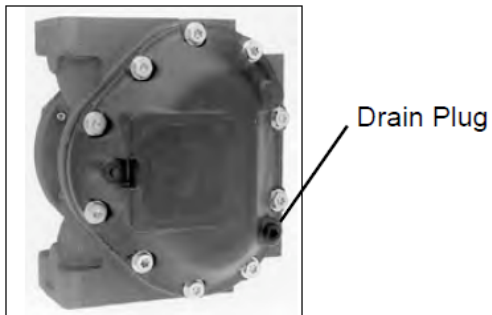


4. Use a socket wrench or box end wrench to remove the screws securing the front cover. Remove the screws that hold the rear cover. The number of screws will vary depending on meter size.

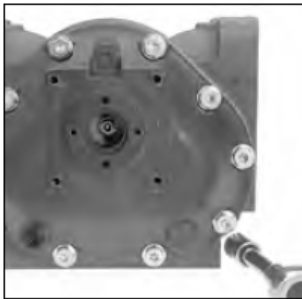

5. Remove the front and rear covers.

NOTE: MA-4®, M-5®, and MA-5® old style models, M-60® and M-80® current models have a driven reduction gear attached with a shoulder bolt to the center of the front.

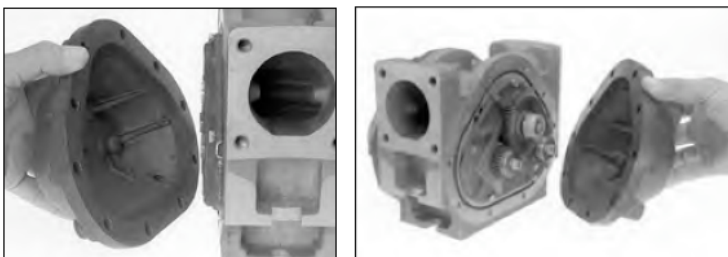

6. Carefully remove the O-rings / flat gaskets from front and rear of the housing.

O-rings & Flat Gasket Replacement: Undamaged Buna or Viton O-rings may be reused. Flat gaskets and PTFE O-rings should always be replaced and never reused.




7. Use the rotor gear wrench (or a socket driver) to remove the right displacement rotor gear screw and washer. Hold a spare displacement rotor gear between the right displacement rotor gear and the blocking rotor gear to keep them from turning (if unavailable, use a shop rag between gear teeth).

NOTE: MA-4®, M-5®, and MA-5® old style models, M-60® and M-80® current models have rotor gears on the meter back. All other models have rotor gears are on the front.



8. Use the rotor gear wrench (or a socket driver) to remove the blocking rotor screw and the packing gland driver held by the screw. Hold the spare gear between the left displacement rotor gear and blocking rotor gear.

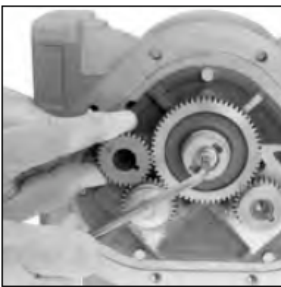

9. Use the rotor gear wrench (or a socket driver) to remove the left displacement rotor gear screw and washer. Hold the spare gear between the right displacement rotor gear and


the blocking rotor gear.




Removing Non-Corroded Rotor Gears

Follow this procedure to remove non-corroded gears:


1. Insert two standard screwdrivers behind the blocking rotor gear: Gently pry the gear off its rotor tapered end. If the gears show signs of corrosion, or do not pry off easily, see To remove corroded rotor gears: below.
2. Use the same method to remove the left rotor gear and the right rotor gear. If the gears show signs of corrosion or do not pry off easily, see the section below on how to remove corroded rotor gears.

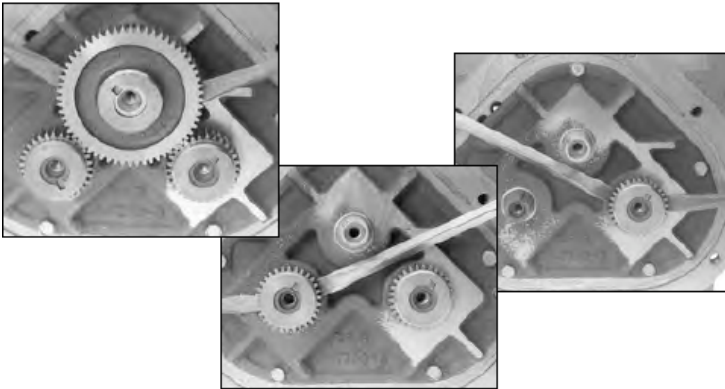

3. As each gear comes off the rotor remove the key (1) from the rotor keyway (2). Save the key to use when reassembling the meter.

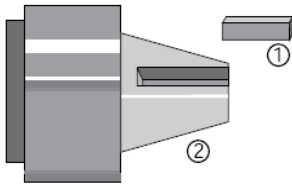

4. Use the bearing plate wrench (or a socket driver) to remove the screws that hold the front bearing plate to the meter housing.
5. Remove the screws that hold the rear bearing plate to the housing.

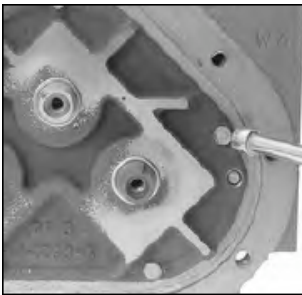


Removing Corroded Rotor Gears

Follow this procedure to remove corroded gears:

1. On the back of the meter housing, remove the screws that hold the rear bearing plate to the housing using the bearing plate wrench (or a socket driver). The number of screws will vary depending on meter size.




2. Replace all three rotor gear screws, without washers. Screw them halfway onto each of the rotor ends.

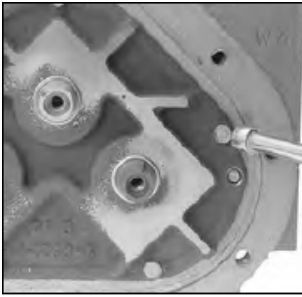

3. With a plastic or non-metallic mallet, tap on the heads of the screws on the rotor ends lightly and equally, slowly driving the rotors off of the rotor gears. As you tap on the screws, the rear bearing plate and the rotor assembly will separate from the housing.

NOTE: For carbon insert bearing plates, remove the rear plate first and then each rotor as it is hand supported.

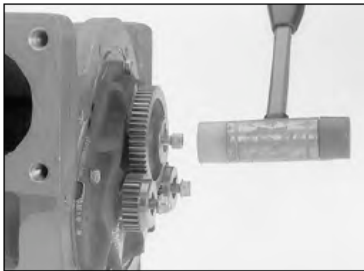

4. Use the bearing plate wrench (or a socket driver) to remove the screws that hold the front bearing plate to the meter housing. The number of screws will vary depending on meter size.




Remove the Bearing plates and Rotors

Avoid scratching, defacing, or marring any surfaces

Be careful not to mar or alter the shape of any of the parts. Changing the shape of the parts may interfere with their operation.


Follow this procedure to remove the bearing plates and rotors:

1. Insert a screwdriver into each of the two notches near the dowel pins. Gently pry the front bearing plate off the dowel pins.

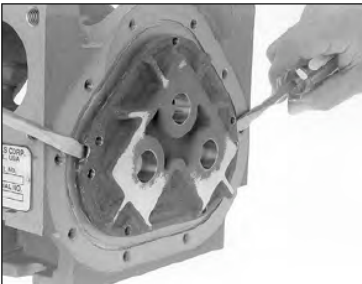

2. Grab the end of the blocking rotor extending out from the front bearing plate, and pull the front bearing plate and rotor assembly straight out from the housing.

NOTE: For MA-4®, M-5®, and MA-5® old style models, M-60® and M-80® current models, pull rotor assembly with the rear bearing plate from the housing. This will also remove the drive reduction gear which is attached to the blocking rotor.

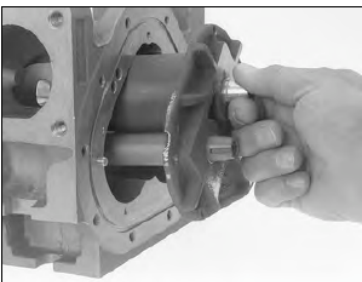

3. Remove the remaining bearing plate. Insert a screwdriver into each of the two notches near the dowel pins. Gently pry the front bearing plate off the dowel pins.

NOTE: MA-4®, M-5®, and MA-5® old style models, M-60® and M-80® current models have a driven reduction gear attached by a shoulder bolt in the center of the front.

4. Inspect and clean all critical surfaces: gear teeth, rotors, and internal housing faces.
5. Remove any crystalline formations using fine emery cloth or a fine wire brush.
6. Remove nicks and burrs on metal parts with a stone.
7. Remove all grit and other foreign particles.
8. Replace all parts that appear worn or damaged.

Reassembling the Meter

Reassembling the Meter includes the following:

- Reassembling the bearing plates and rotors
- Timing the rotor gears
- Completing meter reassembly

These charts are also available near the end of this topic:


- Torque Chart
- Wrench and Socket Size Chart

Reassembling the bearing plates and rotors

Procédez comme suit pour remonter le débitmètre :

1. Remplacez le plateau de palier d'engrenage non rotatif sur le boîtier à l'aide des vis de plateau de palier.

REMARQUE : Les engrenages rotors se trouvent sur le palier arrière des modèles anciens MA-4®, M-5® et MA-5®, ainsi que des modèles actuels M-60® et M-80®. Sur tous les autres modèles, les engrenages rotors sont situés sur le palier avant.

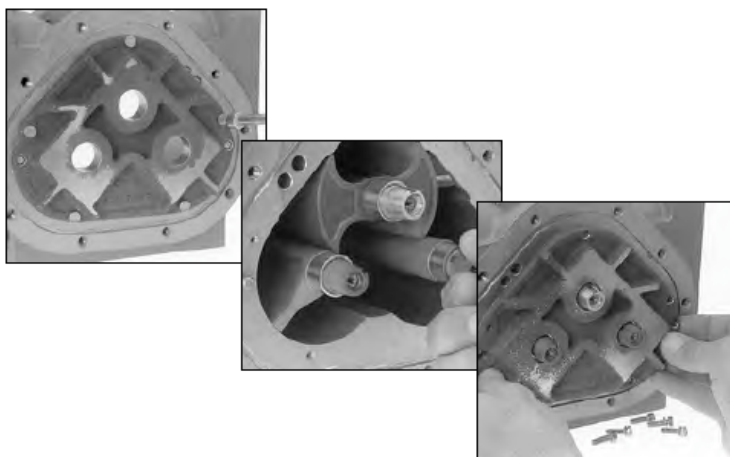


2. Insert the non-tapered ends of the three rotors into the housing and onto its respective bore of the installed bearing plate.

NOTE: For MA-4®, M-5®, and MA-5® old style models, M-60® and M-80® current models, make sure that the teeth of the driving reduction gear mesh with the teeth of the driven reduction gear.

3. Place the remaining bearing plate over the three tapered rotor ends and fasten it to the housing with the bearing plate screws.



4. The rotors should have a small amount of end-play and be easy to turn. Test each rotor, one at a time. Turn the rotors to make sure that they revolve freely. Jog the rotors from end to end to check for end-play. If they do not move easily in both tests, remove the rotors and check for burrs and corrosion deposits. Clean them thoroughly and repeat steps 2, 3 and 4.
5. Each rotor has a notch, or “keyway”, to hold a rotor key. The rotor key is a small wedge of metal. Press a rotor key into the keyway of each rotor with your thumb and forefinger.

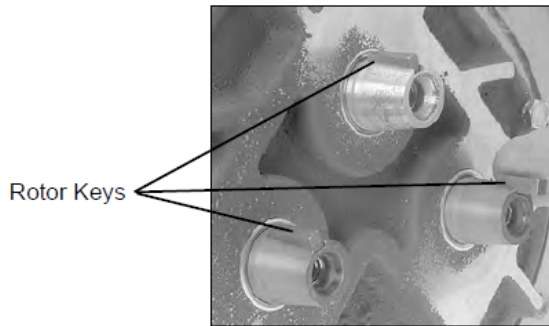

Timing the rotor gears


Before putting the meter into service, the rotors must be timed. Rotors are timed by lining up timing marks stamped onto the face of the gears. The timing mark on the blocking rotor gear is stamped on a gear tooth. The timing mark on the displacement rotor gears is stamped on a space between two gear teeth. You may need to remove the gears and reposition them several times to line up the timing marks correctly.

Torque the Gear Screw


For step 6 in the following procedure, tighten the gear screws to the torque specification given in the **Torque Chart** section below.

Follow this procedure to time the rotor gears:

1. Slide the blocking rotor gear over the tapered blocking rotor end and turn it until the timing mark is in position to line up with the timing mark on the right displacement rotor gear. Slide the right displacement rotor gear over the tapered end of the rotor so that the timing mark lines up with the blocking rotor gear timing mark.
2. Turn the blocking rotor gear (turn the right displacement rotor gear with it) until the timing mark is in position to line up with the timing mark on the left displacement rotor gear. Slide the left displacement rotor gear over the tapered end of the rotor so that the timing mark lines up with the blocking rotor gear timing mark.

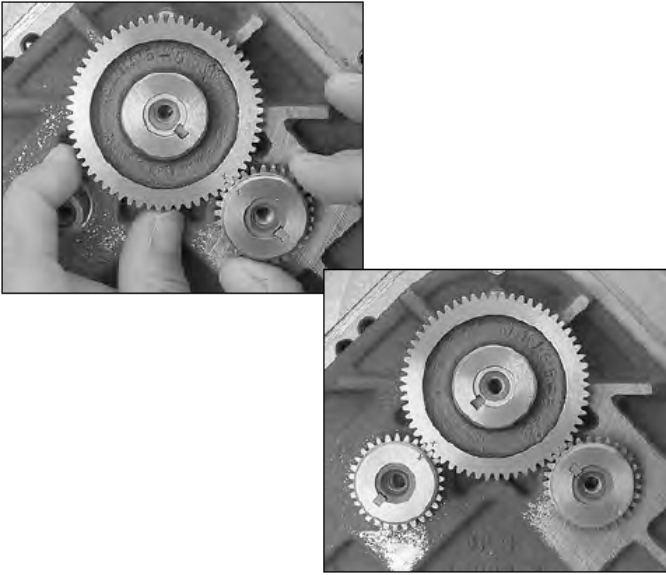

3. Position the spare displacement rotor gear between the left displacement rotor gear and the blocking rotor gear to prevent the gears from moving. Attach the right displacement gear washer and screw using the rotor gear wrench.
4. Keep the spare displacement rotor gear positioned by the left displacement rotor gear. Attach the left displacement gear washer and screw using the rotor gear wrench.
5. Position the spare displacement rotor gear between the right displacement rotor gear and the blocking rotor gear.
6. Attach the blocking rotor gear with the packing gland driver and screw using the rotor gear wrench.

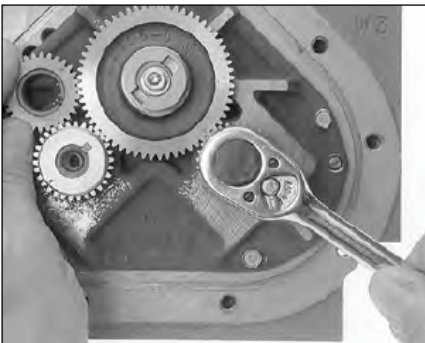

7. Rotate the gears to make sure that the rotors turn freely. Burrs, foreign material, or marred surfaces can restrict the rotor movements. If the rotors do not turn freely, remove the gears and rotors and deburr and clean the surfaces again.

Completing the Meter Reassembly

Tightening Front and Rear Covers

For step 2 in the following procedure, Liquid Controls recommends tightening the front and rear cover screws in a criss-cross or “star” pattern with a minimum of two passes. First pass should be at half- torque. Final pass(es) should be at full torque. This method will ensure uniform seal compression on cover O-ring or gasket. See the **Torque Pattern M-7® Front and Rear Cover** section below in this topic.

Refer to the figure below and follow this procedure to complete reassembly of the Meter:

 
1. Push the O-ring (1) into the groove (2) on the front of the meter housing.


NOTE: M-60® and M-80® models use a flat gasket.

2. Fasten the front cover (3) to the housing with the cover screws (4) using the cover socket or open end/box end wrench.
3. Screw the front drain plug (6) into the front drain plug hole (7) using the drain plug allen wrench.
4. Push the O-ring (8) into the groove (9) on the rear of the meter housing.

NOTE: M-60® and M-80® models use a flat gasket.

5. Fasten the rear cover (10) with the cover screws (11) using the cover socket or open end/box end wrench.
6. Screw the rear drain plug (not shown) into the rear drain plug hole using the drain plug allen wrench.
7. Screw the counter bracket (12) onto the front cover using the counter bracket screws.
8. Insert the packing gland assembly (13) through the counter bracket and into the cover plate. Make sure the forks of the packing gland drive are in the slots of the packing gland driver attached to the blocking rotor gear.

9. Screw the packing gland retaining plate onto the counter bracket using the two retaining plate screws. See Servicing the Packing Gland in Servicing the Drive Components  for more information.
10. Return the adjuster drive gear (14), the adjuster drive shaft (15), and the drive shaft bushing (16) to the inside of the counter bracket. Make sure the drive gear is in its original position. See [Reversing the Meter Registration](#) ¹⁸ for more information.
11. Screw the retaining spring (17) over the drive shaft bushing and slide the retaining ring back into the slot on the drive shaft.
12. Screw the standard adjuster (18) onto the adjuster mounting plate (19). 13. Insert the standard adjuster and adjuster mounting plate through the top of the counter bracket and onto the adjuster drive shaft. Screw the mounting plate onto the counter bracket.
14. Screw the dust cover onto the counter bracket using the dust cover screws.

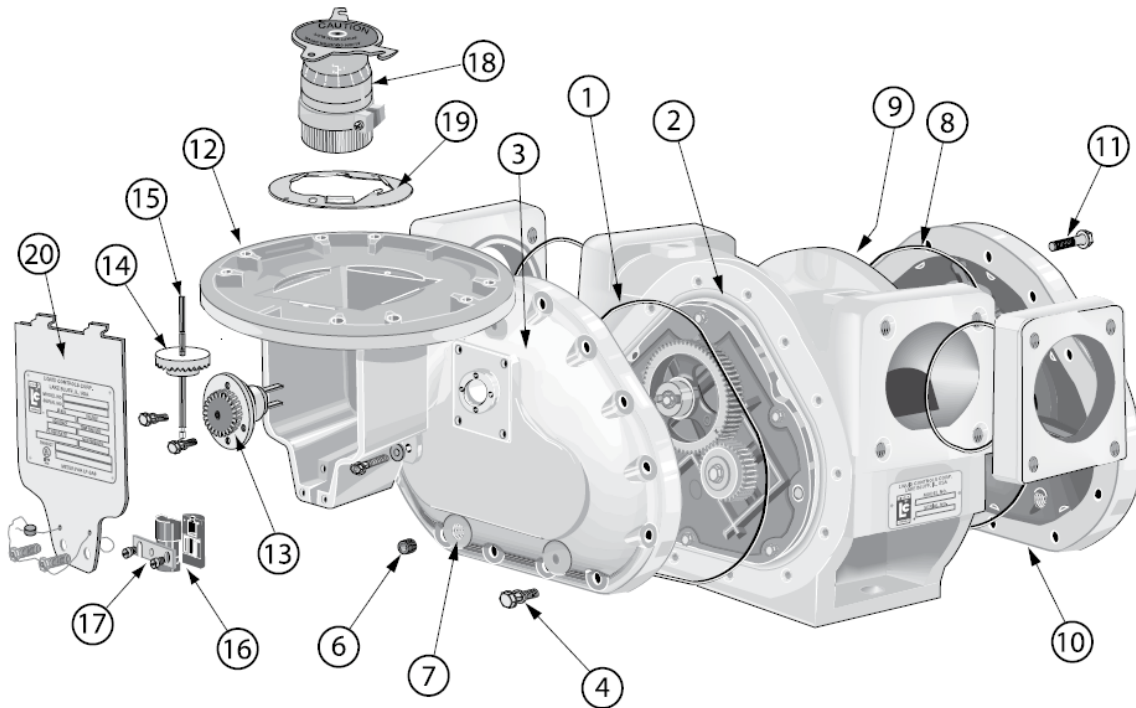


Meter Assembly Exploded View

Torque Chart

Grade 5 Fasteners		
Bolt Size	Foot-Pounds NOMINAL*	Newton-Meter NOMINAL*
#8 (.164) - 32 UNC-2A	2.54 (30.5 in/lb)	3.4
#10 (.190) - 24 UNC-2A	3.75 (45 in/lb)	5.1
1/4" (.250) - 20 UNC-2A	7.3	9.9
5/16" (.3125) - 18 UNC-2A	15.3	20.7
3/8" (.375) - 16 UNC-2A	27	37
7/16" (.4375) - 14 UNC-2A	43	58
1/2" (.500) - 13 UNC-2A	66	90
5/8" (.625) - 11 UNC-2A	132	179
3/4" (.750) - 10 UNC-2A	233	316

*Torque Tolerance is $\pm 10\%$

Torque Pattern M-7® Front and Rear Cover

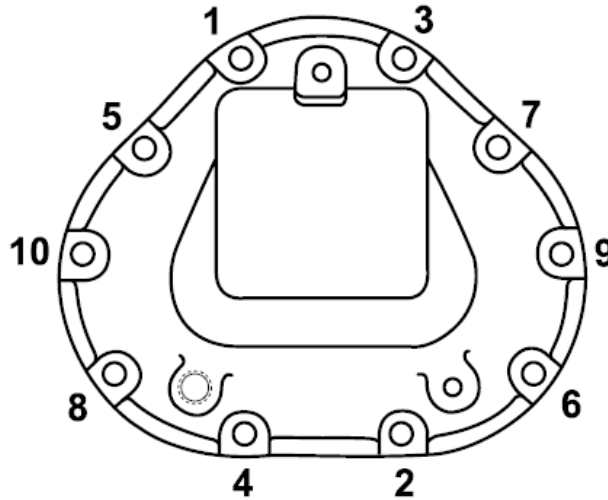

Wrench and Socket Size Chart

ROTOR GEAR SCREWS

It's important to apply these techniques when repairing meters in the field:


1. Prior to installation, apply a small amount of Locquic Primer N764 to each screw.
2. Apply a light coat of Loctite 242 in three even strokes to each screw. The Loctite and Locquic primer are not to be applied to the female connection in the rotor.

	MA-4 [®] M-5 [®] MA-5 [®]	M-7 [®] MA-7 [®] M-10 [®]	M-15 [®] M-25 [®]	MA-15 [®]	M-30 [®] M-40 [®]	M-60 [®] M-80 [®]
Dust Cover Screws	5/16" hex wrench	5/16" hex wrench	slotted screwdriver	slotted screwdriver	slotted screwdriver	slotted screwdriver
Drain Plug	1/4" Allen wrench	1/4" Allen wrench	3/8" Allen wrench	3/8" Allen wrench	3/8" Allen wrench	3/8" Allen wrench
Meter Cover Screws	1/2" hex wrench/ socket	1/2" hex wrench/ socket	1/4" Allen or 1/2" hex wrench/ socket	1/4" Allen or 1/2" hex wrench/ socket	9/16" hex wrench/ socket	3/4" hex wrench/ socket
Counter Bracket Screws	3/8" hex wrench/ socket	3/8" hex wrench/ socket	N/A	3/8" hex wrench/ socket	N/A	3/8" hex wrench/ socket
Bearing Plate Screws	5/16" hex wrench/ socket	5/16" hex wrench/ socket	5/16" hex wrench/ socket	5/16" hex wrench/ socket	7/16" hex wrench/ socket	1/2" hex wrench/ socket
Rotor Gear Screws	5/16" hex wrench/ socket	3/8" hex wrench/ socket	3/16" Allen wrench	3/16" Allen wrench	3/16" Allen wrench	3/16" Allen wrench

Troubleshooting

PROBLEM	PROBABLE CAUSE & SOLUTION
<p>Leakage past packing gland drive shaft housing from internal metering chamber</p>	<p>Internal seal of packing gland assembly is worn. Replace packing gland and O-ring seal.</p> <p>OPERATING NOTES:</p> <ul style="list-style-type: none"> · Two common causes of packing gland leakage are thermal expansion and hydraulic shock. · Thermal expansion can occur when two valves in a piping system, on either side of the meter, are closed at the same time and the temperature in the system rises. As little as a 1°F increase in temperature can drive the system pressure to a point that exceeds <ul style="list-style-type: none"> · the maximum working pressure rating of the meter. To avoid any damage caused by thermal expansion, a pressure-relief valve of some kind must be installed in the system. · Hydraulic shock occurs when a large volume (mass) of liquid is flowing through the system and a valve suddenly closes. When the flow is stopped, the entire mass of the liquid in the piping system rams into the components within the meter. The greater the length of line (more line length equals more liquid mass) and the greater the velocity of the liquid, the greater the hydraulic shock. Since the valve is usually located at the meter outlet, the meter housing, packing gland and the meter internal are subject to the full impact of such hydraulic shock. To prevent hydraulic shock, a slow closing two-stage valve should be used with the meter. On systems where mass length of line and velocity

	<p>are of a magnitude that preclude the elimination of hydraulic shock with the use of a two-stage slow closing valve, an impact-absorbing air cushioning device can be added to further dampen hydraulic shock.</p>
<p>Leakage from the cover gasket</p>	<p>Gasket has been damaged due to shock pressure or cover bolts have not been tightened sufficiently. Replace gasket and tighten cover bolts correctly.</p>
<p>Product flows through meter but the register does not operate</p>	<p>Follow this procedure:</p> <ol style="list-style-type: none"> 1. Check packing gland, and gear train. 2. If all meter parts are moving then problem is in register. Faulty register should be checked and repaired by trained mechanic. 3. Remove register from meter. If all meter parts are moving but output shaft of adjuster assembly is not, adjuster is worn and must be replaced. 4. If totalizer numerals (small numbers) on register are recording, but the big numerals are not moving, register needs repair. 5. Packing gland gear not turning. Replace the packing gland. This may be caused by starting the flow too rapidly. <p>NOTE: For M-60® and M-80® meters, the drive blade may be sheared.</p>
<p>Breaking teeth on timing gears</p>	<p>This may result from the following:</p> <ul style="list-style-type: none"> · Starting or stopping flow in meter too rapidly. · Pump bypass not adjusted properly
 
<p>Product flows through meter but register does not record correctly</p>	<p>This may result from the following:</p> <ul style="list-style-type: none"> · Adjuster not properly calibrated. · Incorrect gear plate or gear ratio has been installed. · Air is in the system.
<p>No flow through meter</p>	<p>This may result from the following:</p> <ul style="list-style-type: none"> · Faulty non-functioning pump. · Valve not open or not functioning. · Meter “frozen” due to build-up of chemical “salts” or foreign material inside metering chamber. Clean the meter and inspect for damage.
<p>Meter runs too slowly</p>	<p>This may result from the following:</p> <ul style="list-style-type: none"> · Valve internal mechanism faulty. Valve does not open fully. · Meter gears or rotors partially “salted” enough to slow up rotation of parts. Clean the meter. · Downstream restriction. · Clogged strainer basket.
<p>The meter counts down in reverse (the meter numbers decrease)</p>	<p>Reverse the direction of flow by reversing the adjuster drive gear. See Reversing the Meter Registration .</p>

How to Order Replacement Parts

Follow this procedure to order replacement parts:

1. Refer to the exploded view drawings in Bill of Materials. Find the four-digit item number of the part that needs replacement. Item numbers can be seen on each of the exploded drawings.
2. In the red Owner Information Packet supplied with the meter, you will find a computer printout titled Parts List. The Parts List lists each item number alongside a five-digit part number. The part number identifies the specific individual piece, kit, or complete assembly used to assemble that particular meter.
3. Contact your distributor and give them the five-digit part number. Your distributor will use it to find the correct component for your meter.

NOTE: Always check www.lcmeter.com for the most current version of manual M610 - Bill of Materials for LC meters.



LIQUID CONTROLS



An IDEX Energy & Fuels Business

105 Albrecht
Lake Bluff, IL 60044-2242
1.800.458.5262

Fax: 1.847.295.1057
www.LCmeter.com

© 2017 Liquid Controls
LCIOM_ONTHEGOWIFIADAPTERV1: 05/17